

# 01 FIRST STEPS


Open the **"Configuration"** menu.  
Long press: access to the GPS coverage and the navigation demonstration mode.

Open the **"Telephone"** menu and display the list of recent calls or accept an incoming call.

Select:

- the previous/next line in a list or menu.
- the previous / next media folder.
- step by step selection of the previous/next radio frequency.
- the previous / next MP3 folder.

Move up/down, in **"Move the map"** mode.

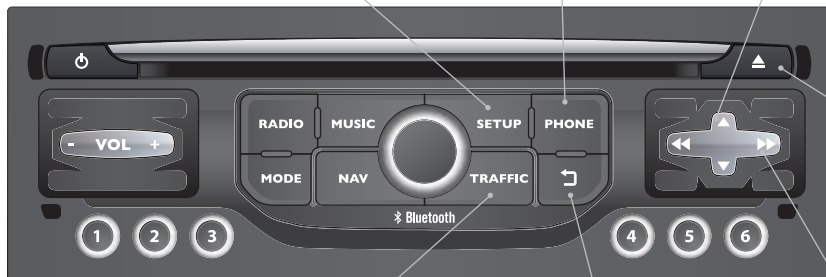

Continuous press: reinitialisation of the system.

Open the **"Traffic information"** menu and display the current traffic alerts.

Abandon the current operation, up one level in the menu.  
Long press: return to the permanent display.

Select:

- the next lower / higher radio frequency automatically.
- the previous / next CD track, MP3 track or media.
- the left / right of the screen when a menu is displayed.

Move left / right in **"Move the map"** mode.

## 02 STEERING MOUNTED CONTROLS

RADIO: select the previous/next preset station.


Select the next entry in the address book.

RADIO: change to the next radio station in the list.

Long press: automatic search for a higher frequency.

CD: select the next track.

CD: continuous press: fast forward play.

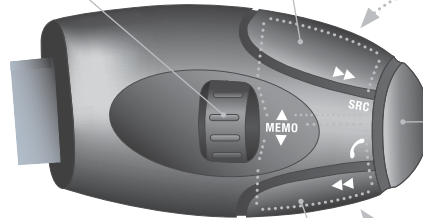

Volume increase.

Change the audio source.  
Start a call from the address book.  
Call/End call on the telephone.  
Press for more than 2 seconds:  
access to the address book.

Volume decrease.

Mute: press the volume increase and decrease buttons simultaneously.  
Restore the sound by pressing one of the two volume buttons.

RADIO: change to the previous radio station in the list.

Long press: automatic search for a lower frequency.

CD: select the previous track.

CD: continuous press: fast reverse.

# 03 GENERAL OPERATION

**MODE**


Press the **MODE** button several times in succession for access to the following displays:

"**RADIO**"



"**TELEPHONE**"

(If conversation in progress)

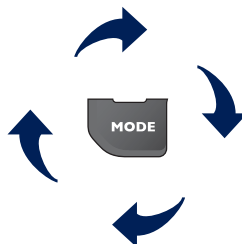

"**MAP IN WINDOW**"

(If navigation guidance in progress)



"**FULL SCREEN MAP**"

**SETUP**

**SETUP: PARAMETERS**

date and time, display configuration, sound.

**RADIO**

**MUSIC**

Changing the audio source:

**RADIO:** RADIO broadcasts.

**MUSIC:** playing MUSIC.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section.

# 03 GENERAL OPERATION

## DISPLAY ACCORDING TO CONTEXT



A press on the dial gives access to short-cut menus according to the display in the screen.

### RADIO:

- 1 Activate / Deactivate TA
- 1 Activate / Deactivate RDS
- 1 Change waveband
- 1 TA
- 2 FM
- 2 AM

### TELEPHONE (call in progress):

- 1 Private mode
- 1 Put call on hold

1 DTMF ring tones

1 Hang up

### MUSIC MEDIA PLAYERS, CD or USB (according to media):

Play modes:

- 1 Normal
- 1 Random
- 1 Random on all media
- 1 Repetition

### FULL SCREEN MAP OR IN A NEW WINDOW:

1 Stop / Restore guidance

1 Select destination

2 Enter an address

2 Directory

2 GPS coordinates

1 Divert route

1 Move the map

2 Info. on location

2 Select as destination

2 Select as stage

2 Save this place (contacts)

2 Quit map mode

1 Guidance criteria


# 04 NAVIGATION - GUIDANCE

## Access to the "NAVIGATION" menu



Press NAV.

A short press on the end of the lighting control stalk repeats the last navigation message.

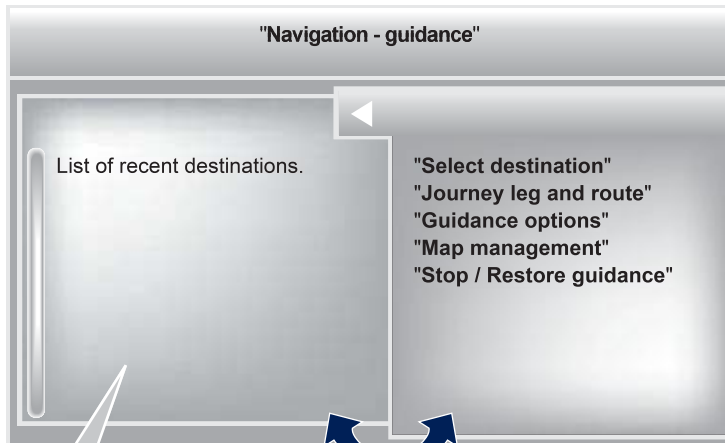

Contact a PEUGEOT dealer for mapping updates.

To delete the list of recent destinations, select "**Guidance options**" in the navigation menu then select "**Delete last destinations**" and confirm. Select "**Yes**" then confirm. Deleting just one destination is not possible.

Go from the list to the menu (left/right).




 

 

 

 

 

 


 

 


or



# 04 NAVIGATION - GUIDANCE

## SELECTING A DESTINATION

### TOWARDS A NEW DESTINATION

- |                                                                                                                                                                                          |                                                                                   |                                                                                                                                                                                                                                                                                                          |                                                                                     |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>1  Press NAV to display the "Navigation - guidance" menu.</p>                                        |  | <p>6 Selection the town from the list offered, then confirm<br/>A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed directly by selecting and confirming "List" on the screen.</p>                                                                   |                                                                                     |
| <p>2  Select "Select destination" and confirm, then select "Enter an address" and confirm.</p>          |  | <p>7  Turn the dial and select "OK" then confirm.</p>                                                                                                                                                                   |  |
| <p>3  Select the "Country" function then confirm.</p>                                                   |  | <p>8  If possible, enter the "Road" and "N°/X" information in the same way.</p>                                                                                                                                         |  |
| <p>4  Select "Town" function then confirm to enter the destination town.</p>                            |  | <p> Select "Archive" to save the address entered in a contact file.<br/>The system allows up to 400 contact files to be recorded.</p>                                                                                   |                                                                                     |
| <p>5  Select the letters in the name of the town one at a time, confirming each one with the dial.</p> |  | <p>9  Confirm "OK" to start guidance.</p>                                                                                                                                                                               |  |
|                                                                                                                                                                                          |                                                                                   | <p>10  Select the guidance criteria: "Fastest route", "Shortest route" or optimised "Distance/Time", then select the desired restriction criteria: "With tolls", "With Ferry", or "Traffic info" then confirm "OK".</p> |  |

# 04 NAVIGATION - GUIDANCE


## SELECTING A DESTINATION

### TO ONE OF THE RECENT DESTINATIONS

1




Press **NAV** to display the "Navigation - guidance" menu.

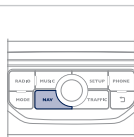

2



 Select the desired destination and confirm to start guidance.



### TOWARDS A CONTACT IN THE CONTACTS DIRECTORY

 
i

Navigation towards a contact imported from your telephone is only possible if the address is compatible with the system.

1




Press **NAV** to display the "Navigation - guidance" menu.



2



 
Select "**Select destination**" and confirm, then select "**Directory**" and confirm.



3



 Selection the desired destination from your contacts and confirm "**OK**" to start the guidance.




# 04 NAVIGATION - GUIDANCE

## TOWARDS GPS COORDINATES

1



 
Press **NAV** to display the "Navigation - guidance" menu.



2



 
Select "**Select destination**" and confirm, then select "**GPS coordinates**" and confirm.



3



 Enter the GPS coordinates and confirm "**OK**" to start the guidance.




## TOWARDS A POINT ON THE MAP

1



 
With the map displayed, press **OK** to display the contextual menu. Select "**Move the map**" and confirm.



2



 
Move the cursor using the control to identify the desired destination.



3



 
Press **OK** to display the contextual menu for "**Move the map**" mode.



4



 Select "**Select as destination**" or "**Select as stage**" and confirm.






# 04 NAVIGATION - GUIDANCE


## TOWARDS POINTS OF INTEREST (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

 1



 
Press **NAV** to display the "Navigation - guidance" menu.



2



 
Select the "**Enter an address**" function and confirm, then select **Select destination** and confirm.



3



 To select a POI close to your current location, select "**POI**" and confirm, then select "**Around the current place**" and confirm.  
To select a POI as a stage on the route, select "**POI**" and confirm, then select "**On the route**" and confirm.  
To select a POI as a destination, first enter the country and town (see "Towards a new destination"), select "**POI**" and confirm, finally select "**Near**" and confirm.




Select "**Search by Name**" to search for POIs by name and not by proximity.

4



 
Search for POIs in the categories suggested in the following pages.



5



 Select the POI and confirm "**OK**" to start the guidance.















# 04 NAVIGATION - GUIDANCE









This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.



## LIST OF PRINCIPAL POINTS OF INTEREST (POI)

-  Service station
-  Garage
-  PEUGEOT
-  Motor racing circuit
-  Covered car park
-  Car park
-  Rest area
-  Hotel
-  Restaurant
-  Cafeteria
-  Bed and breakfast
-  Airport

-  Railway station
-  Bus station
-  Port
-  Industrial estate
-  Supermarket
-  Bank
-  Vending machine
-  Sports complex, sports centre, sports ground
-  Swimming pool
-  Winter sports resort
-  Entertainment, show
-  Cinema

-  Theme parks
-  Hospital, Chemist, Vet
-  Police station
-  School
-  University
-  Town hall
-  Post office
-  Museum, Culture, Theatre, Historic monument
-  Tourist information, Tourist attraction
-  Risk area\*

 
The detailed procedure for updating POIs can be found at "<http://peugeot.navigation.com>".

\* According to availability in the country.


# 04 NAVIGATION - GUIDANCE

## ALERT PARAMETERS RISK AREAS

1



 
Press **NAV** to display the "**Navigation - guidance**" menu.



2



 Select "**Guidance options**" and confirm, then select "**Set parameters for risk areas**" and confirm.



3

 


Select:

- "Visual alert"
- "Audible alert"
- "Alert only in guidance"
- "Overspeed alarm only".

The choice of time of notification defines how long in advance that Risk area warnings are given.

Select "**OK**" to confirm the screen.



These functions are only available if risk areas have been downloaded and installed on the system.  
The detailed procedure for updating risk area POIs can be found at [www.peugeot.com](http://www.peugeot.com).


# 04 NAVIGATION - GUIDANCE
 
## ADDING A STAGE

1




Press NAV to display the "Navigation - guidance" menu.



2



 
Select "Journey leg and route" then confirm.



3



 
Select "Add a stage" then confirm  
The address of the stage is entered as a destination, by "Enter an address", a contact in "Directory", or "Previous destinations".



4



 Select "Close to" a route passing close to the stage or "Strict" for a route passing through the stage.  
Confirm "OK" to start the guidance, and give a general indication of the guidance route.




## ORGANISING STAGES

1



 
To organise stages, carry out operations 1 to 2 again, then select "Order/delete journey legs" and confirm.



2



 
Select the stage that you want to move in the order.



3



 Select and confirm to save the modifications.




Select "Delete" to delete the stage.

# 04 NAVIGATION - GUIDANCE

 
## ROUTE OPTIONS

### CALCULATION CRITERIA

1



 
Press NAV to display the "Navigation - guidance" menu.



2



 Select "Guidance options" and confirm.




3



Select "Define calculation criteria" and confirm.

This function allows modification of:

 - the guidance criteria: ("**Fastest route**", "**Shortest route**", "**Distance/Time**"),
- the exclusion criteria: ("**With tolls**" or "**With Ferry**"),
- traffic avoidance: ("**Traffic info**").




i

If traffic avoidance (Traffic info) is selected, the system suggests an alternative route if there is a delay on the guidance route.

4



 Select "OK" and confirm to save the modifications.



# 04 NAVIGATION - GUIDANCE

 
## MAP MANAGEMENT

### SELECTING THE POINTS OF INTEREST DISPLAYED ON THE MAP

1




Press NAV to display the "Navigation - guidance" menu.



2



 
Select "Map management" and confirm.



3



 
Select "Map details" and confirm.



4



 Select from the various categories the ones that you want to display on the screen.



5

 


Select "By default" to have only "Oil stations, garages" and "Accident-prone area" appear on the map (if installed in the system).

5



Select "OK" then confirm and select "OK" again then confirm to save the modifications.




# 04 NAVIGATION - GUIDANCE

## MAP ORIENTATION

1



 
Press NAV to display the "Navigation - guidance" menu.



2



 
Select "Map management" and confirm.



3



 Select "Map orientation" and confirm.




4



Select:

 - "Vehicle direction" to have the map follow the direction of travel,
- "North direction" to keep the map always North up,
- "Perspective view" to display a perspective view.



The colour of the map, different from the day and night mode, is configured in the "SETUP" menu.



Street names are visible on the map from the 100 m scale.

# 04 NAVIGATION - GUIDANCE

## ADJUSTING THE GUIDANCE SPEECH SYNTHESIS

 
### ADJUSTING THE VOLUME/DEACTIVATION

The volume setting of guidance messages is also accessible via the "SETUP" / "Voice synthesis" menu.




The volume of messages can be adjusted during the transmission of the message using the volume adjustment control.

1



 
Press NAV to display the "Navigation - guidance" menu.



2



 
Select "Guidance options" and confirm.



3



 
Select "Set speech synthesis" and confirm.



4



 
Select the volume graph and confirm.



5



 Adjust the volume to the desired level and confirm.




Select "Deactivate" to deactivate voice messages.

6



 Select "OK" and press the dial to confirm.






# 04 NAVIGATION - GUIDANCE

## MALE VOICE / FEMALE VOICE

1



 
Press **SETUP** to display the configuration menu.



2



 
Select "**Voice synthesis**" and confirm.



3



 Select "**Select male voice**" or "**Select female voice**" then confirm "**Yes**" to activate a male or female voice. The system restarts.



# 05 TRAFFIC INFORMATION

Access to the "TRAFFIC INFORMATION" menu



Press "TRAFFIC".

"Traffic information"

List of TMC messages in order of distance from the vehicle.

"Geographic filter"  
"Select TMC station"  
(automatic, manual)  
"Display/Do not display messages"

A screenshot of a car's infotainment screen. At the top, it says "Traffic information". Below that is a scrollable list of TMC messages. To the right of the list is a menu with three options: "Geographic filter", "Select TMC station (automatic, manual)", and "Display/Do not display messages". A play button icon is visible at the top right of the list area. Two blue arrows at the bottom of the screen indicate navigation between the list and the menu.

Go from the list to the menu (left/right).



or



# 05 TRAFFIC INFORMATION

## CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES

 
TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map.

The navigation system can then suggest an alternative route to avoid a traffic problem.

1




Press the **TRAFFIC** button to display the Traffic information menu.



2



 Select the **"Geographic filter"** function and confirm.




3



The system offers a choice of:

 
- **"Retain all the messages"**,
- or
- **"Retain the messages"**
  - **"Around the vehicle"**, (confirm the mileage to modify and select the distance),
  - **"On the route"**.



4



 Confirm **"OK"** to save the modifications.



i

We recommend:

- a filter on the route and
- a filter around the vehicle of:
  - 12 miles (20 km) in urban areas,
  - 30 miles (50 km) on motorways.



# 05 TRAFFIC INFORMATION

## PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:



2 Red and yellow triangle: traffic information, for example:




 
## RECEIVING TA MESSAGES


! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

 
1  Press **RADIO** to display the "FM / AM band" menu.




2  Select "**Guidance options**" then confirm.



3  Activate or deactivate "**TA**" then confirm.



! The volume setting for TA messages can be adjusted only during the transmission of this type of alert.


 Activate or deactivate the function at any time by pressing the button. During a message, press the button to interrupt it.

# 06 USING THE TELEPHONE

## Access to the "TELEPHONE" menu



Press **PHONE**.

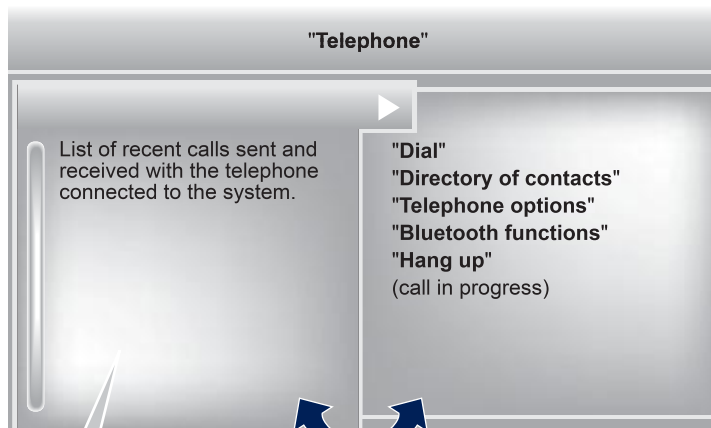

List of recent calls sent and received with the telephone connected to the system.

"Dial"  
"Directory of contacts"  
"Telephone options"  
"Bluetooth functions"  
"Hang up"  
(call in progress)

In the top bar of the permanent display



No telephone connected.



Telephone connected.



Incoming call.



Outgoing call.



Synchronisation of address book in progress.



Telephone call in progress.

To make a call, select a number in the list and confirm **"OK"** to start the call.



Connecting a different telephone deletes the list of recent calls.

Go from the list to the menu (left/right).




or



# 06 USING THE TELEPHONE

## PAIRING A BLUETOOTH TELEPHONE FIRST CONNECTION

**!** For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio unit must be carried out with the **vehicle stationary**.

 Visit [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, additional help, ...).

1



 
Activate the telephone's Bluetooth function and ensure that it is "shown to all" (telephone configuration).



2




Press this button.



3



 Select "**Bluetooth functions**" and confirm.




4



Select "**Peripherals search**" and confirm.

 
The list of peripherals detected is displayed. Wait until the "**Connect**" button is available.



5



 Select the name of the desired peripheral from the list of devices detected then select "**Connect**" and confirm.




6



The system offers to connect the telephone:

- in "**Hands-free mode**" (telephone only),
- in "**Audio**" mode (streaming: playing music files on the telephone),
- or "**All**" (for selection of both modes).

 Select "**OK**" and confirm.



## 06 USING THE TELEPHONE



The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.



The "**Hands-free mode**" should be used in preference if "Streaming" is not desired.

 


The ability of the system to connect in only one mode depends on the telephone. The two modes may both connect by default.

7



Select a code for the connection then confirm "**OK**".



8

Enter the same code on the telephone then accept the connection.



Then accept automatic connection on the telephone to allow the telephone to reconnect automatically every time the vehicle is started.




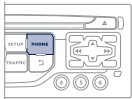

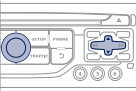

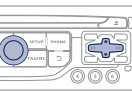
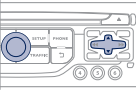

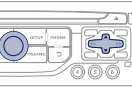

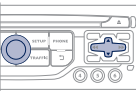

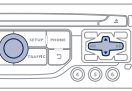
Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



On return to the vehicle, the last telephone connected automatically reconnects, within around 30 seconds after switching on the ignition (Bluetooth activated and visible). To modify the automatic connection mode, remove the pairing and pair the telephone again with the desired mode.

# 06 USING THE TELEPHONE


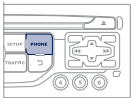

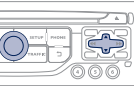

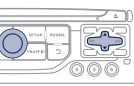

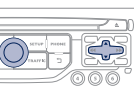

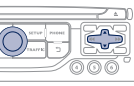




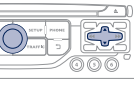

## DIRECTORY / SYNCHRONIZING CONTACTS

<p><b>1</b></p>  <p>Press <b>PHONE</b> then select "<b>Contacts management</b>" and confirm.</p>		<p><b>2d</b></p>  <p>Select "<b>Import all the entries</b>" to import all the contacts in the telephone and save them in the system. Once imported, a contact remains visible whatever telephone is connected.</p>	
<p><b>2a</b></p>  <p>Select "<b>New contact</b>" to enter a new contact.</p>		<p><b>2e</b></p> <p>Selection "<b>Synchronization options</b>":</p> <ul style="list-style-type: none"><li>- No synchronization: only the contacts saved in the system (always present).</li><li>- Display telephone contacts: only the contacts saved in the telephone.</li><li>- Display SIM card contacts: only the contacts saved on the SIM card.</li><li>- Display all phone contacts: contacts on the SIM card and in the telephone.</li></ul>	
<p><b>2b</b></p>  <p>Select "<b>Sort by Name/First name</b>" to choose the order in which they appear.</p>		<p><b>2f</b></p>  <p>Select "<b>Contact mem. status</b>" to see the number of contacts saved in the system or imported, and the free memory.</p>	
<p><b>2c</b></p>  <p>Select "<b>Delete all contacts</b>" to delete the contacts saved in the system.</p>			



# 06 USING THE TELEPHONE

## MANAGING CONTACTS
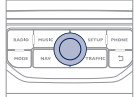
<p><b>1</b></p>  <p>Press <b>PHONE</b> then select "Directory of contacts" and confirm.</p>		<p><b>5</b></p>  <p>Select "<b>Import</b>" to copy one contact to the system.</p>				
<p><b>2</b></p>  <p>Select the desired contact and confirm.</p>		<p><b>6</b></p>  <p>Select "<b>Delete</b>" to delete a contact saved in the system.</p>				
<p><b>3</b></p>  <p>Select "<b>Call</b>" to start the call.</p>		<p><b>7</b></p>  <p>Select <b>OK</b></p> <p>or</p>  <p>press the back button to exit this menu.</p>				
<p><b>4</b></p>  <p>Select "<b>Open</b>" to view an external contact or modify a contact saved in the system.</p>						
<p><b>i</b> It is necessary to import an external contact to modify the record. It will be saved in the system. It is not possible to modify or delete contacts in the telephone or the SIM card via the Bluetooth connection.</p>						

# 06 USING THE TELEPHONE

## MAKING A CALL

 
Use of the telephone is not recommended while driving. We recommended that you park safely or make use of the steering mounted controls.

### CALLING A NEW NUMBER

1




Press **PHONE** twice.



2



 
Select "**Dial**" then confirm.



3



 Dial the telephone number using the virtual keypad selecting each number in turn.  
Confirm "**OK**" to make the call.




### CALLING A CONTACT

1




Press **TEL** or twice on **PHONE**.

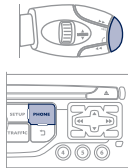

2




Select "**Directory of contacts**" then confirm.

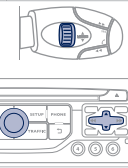

3



Select the desired contact and confirm.  
If access was via the **PHONE** button, select "**Call**" and confirm.

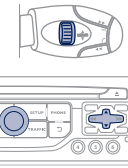

4



Select the number and confirm to start the call.



# 06 USING THE TELEPHONE

## CALLING A RECENTLY ENTERED NUMBER

1



 
Press **TEL**, select "Call list" and confirm,



or




press **PHONE** to display the calls log.



2



 Select the desired number and confirm.




To erase the calls log, press **PHONE** twice, select "Phone functions" and confirm then select "Delete calls log" and confirm.

## ENDING A CALL

 1a



Press **PHONE** then select "OK" to end the call.



1b



Or make a long press on **TEL** at the steering mounted controls.



1c



 
Or make two short presses on **TEL** at the steering mounted controls.




1d



Or press the **MODE** button, as many times as necessary, until the telephone screen is displayed.



 Press "OK" to display the contextual menu then select "Hang up" and confirm.



# 06 USING THE TELEPHONE

## RECEIVING A CALL

 
1

An incoming call is announced by a ring and a superimposed display on the screen.

2



"Yes" to accept the call is selected by default.  
Press "OK" to accept the call.  
Select "No" and confirm to reject the call.



A short press on **TEL** accepts an incoming call.  
A long press on **TEL** rejects an incoming call.





# 06 USING THE TELEPHONE
  
## OPTIONS DURING A CALL\*

1



During a call, press the **MODE** button several times to select display of the telephone screen, then press **"OK"** to open the contextual menu.




Or make a short press on this button.



2a



 
Select **"Private mode"** and confirm to take the call on the handset.  
Or select **"Hands-free mode"** and confirm to take the call via the vehicle's speakers.



2b



 
Select **"Put call on hold"** and confirm to put the current call on hold.  
Or select **"Resume the call"** and confirm to resume the call on hold.



2c



 
Select **"DTMF ring tones"** to use the numerical keypad, so as to navigate through the menu of an interactive vocal server.



2d



 Select **"Hang up"** to end the call.




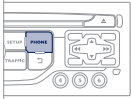

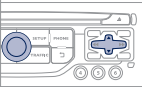

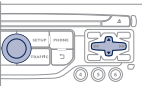
it is possible to hold a 3-way conference call by making 2 calls in succession\*. Select **"Conference mode call"** in the contextual menu accessible using this button.




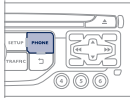

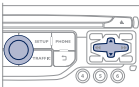

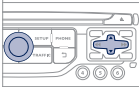

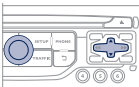

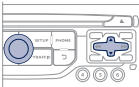
\* Depending on the compatibility of the phone and your service plan.

# 06 USING THE TELEPHONE

## MANAGING PAIRED TELEPHONES

<p>1</p>  <p>Press <b>PHONE</b> twice.</p>	
<p>2</p>  <p>Select "<b>Bluetooth functions</b>".</p>	
<p>3</p>  <p>Select "<b>List of the paired peripherals</b>" and confirm.</p> <p>It is possible to:</p> <ul style="list-style-type: none"><li>- "<b>Connect</b>" or "<b>Disconnect</b>" the selected telephone,</li><li>- delete the pairing of the selected telephone.</li></ul> <p>It is also possible to select all pairings.</p>	

## CHANGING THE RING TONE


<p>1</p>  <p>Press <b>PHONE</b> twice.</p>	
<p>2</p>  <p>Select "<b>Phone functions</b>" and confirm.</p>	
<p>3</p>  <p>Select "<b>Ring options</b>" and confirm.</p>	
<p>4</p>  <p>You can adjust the volume and the type of ring tone.</p>	
<p>5</p>  <p>Select "<b>OK</b>" and confirm to save the changes.</p>	

# 07 RADIO

## Access to the "RADIO" menu



Press RADIO.

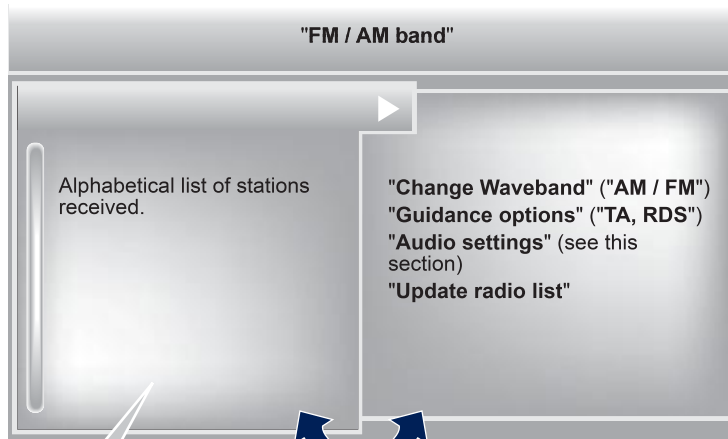

Press ▲ or ▼ or use the rotary control to select the previous or next station in the list.

Go from the list to the menu (left/right).



or



# 07 RADIO

## CHANGING BAND

 


The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS station tracking mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a fault with the audio system.

1




Press **RADIO** or **OK** to display the contextual menu.



2



 
Select **"Change waveband"**.



3



 Select **"AM / FM"** and confirm.



## SELECTING A STATION



 
The quality of reception is represented by the number of active waves in this symbol.

1a



**By alphabetical list**

Press **RADIO**, select the station of your choice and confirm.




1b



**By automatic frequency search**

 Press **◀** or **▶** for the automatic search for a lower or higher radio frequency.

Or turn the thumb wheel at the steering mounted controls.




1c



**By manual frequency search**

 Press **▲** or **▼** to adjust the radio frequency step by step.





# 07 RADIO

 
## PRESETTING A STATION

1



After selecting a station, press one of the buttons on the numerical keypad for 2 seconds to preset the current station.

An audible signal confirms that the station has been preset.





2



Press the button on the numerical keypad to recall a preset station.

  Or press then turn the thumb wheel at the steering mounted controls.



## ACTIVATE / DEACTIVATE RDS



RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

1



 
Press **RADIO**.



2




Select "**Guidance options**" then confirm.



3



 Activate or deactivate "**RDS**" then confirm.




# 08 MUSIC MEDIA PLAYERS

Access to the "MUSIC MEDIA PLAYER" menu



Press **MUSIC**.

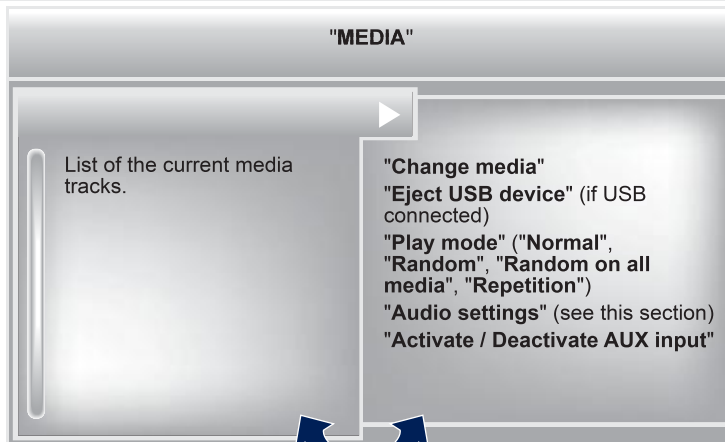

Go from the list to the menu (left/right).



or



# 08 MUSIC MEDIA PLAYERS

## CD, MP3 CD / USB PLAYER

### INFORMATION AND ADVICE



The audio equipment will only play audio files with ".wma, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode.  
No other type of file (.mp4, .m3u...) can be played.  
WMA files must be of the standard wma 9 type.  
The sampling rates supported are 11, 22, 44 and 48 KHz.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.  
If the disc is recorded in another format it may not be played correctly.  
It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.  
In the particular case of a multi-session CD, the Joliet standard is recommended.



The system supports USB mass storage or iPod devices via the USB port (suitable cable not supplied).  
If a partitioned USB memory key is connected to the system, only the first partition is recognised.  
Control of the peripheral device is with the audio system controls.

The number of tracks is limited to 2000 maximum, 999 tracks per folder.

If the current consumption at the USB port exceeds 500 mA, the system goes into protection mode and deactivates the port.

Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).



In order to be read, a USB memory stick must be formatted FAT 16 or 32.



The system does not support the operation of an Apple® player and a USB memory stick connected at the same time.



It is recommended that official Apple® USB cables are used to ensure correct operation.

# 08 MUSIC MEDIA PLAYERS

## SOURCES



Insert the CD in the player, insert the USB memory stick in the USB player or connect the USB peripheral to the USB port using a suitable cable (not supplied)



The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick. However, the system memorises these lists and if they are not modified, the loading time will be shorter.




Play starts automatically after a period which depends on the capacity of the USB memory stick.

## SELECTION OF SOURCE




The **SOURCE** button on the steering mounted controls allows a direct change to the next media source.

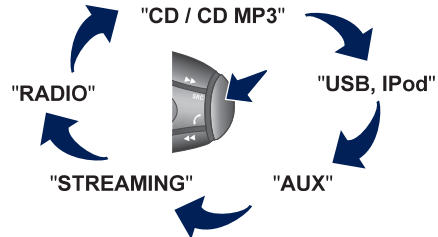

1



 
Press **MUSIC** to display the "MEDIA" menu.



2





 








Select "Following media source" and confirm.














Repeat the operation as many times as necessary to obtain the desired media source (except for radio which is accessible either with **SOURCE** or **RADIO**).

# 08 MUSIC MEDIA PLAYERS

## SELECTING A TRACK

Previous track.	 / 
Next track.	 / 
Previous folder.	
Next folder.	
Fast forward.	Long press  / 
Fast backward.	Long press  / 
Pause: long press on SRC.	

<b>MUSIC: List of USB or CD tracks or folders</b>	
Up or down in the list.	 /  / 
Confirm, next menu level.	 /  / 
Up one menu level.	 +  /  / 

# 08 MUSIC MEDIA PLAYERS

## CONNECTING APPLE® PLAYERS

**1** Connect the Apple® player to the USB port using a suitable cable (not supplied).  
Play starts automatically.

**2** Control is via the audio system.

**i** The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).  
The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.  
The "Shuffle tracks" mode on an iPod® corresponds to the "Random" mode on the audio system.  
The "Shuffle albums" mode on an iPod® corresponds to the "Random all" on the audio system.  
"Shuffle tracks" is restored by default on each connection.

**i** The version of software in the audio system may not be compatible with the generation of your Apple® player.  
The list of devices compatible with software versions is available from PEUGEOT dealers.

## AUDIO STREAMING



Streaming allows audio files on your telephone to be played via the vehicle's speakers.

**1**

Connect the telephone: see "USING THE TELEPHONE".  
Select "**Audio**" or "**All**" profile.

**2**

If play does not start automatically, it may be necessary to start the audio playback from the telephone.  
Control is from the peripheral device or by using the audio system buttons.



Once connected in streaming mode, the telephone is considered to be a media source.  
It is recommended that you activate "**Repeat**" on the Bluetooth peripheral.

# 08 MUSIC MEDIA PLAYERS

## USING THE AUXILIARY INPUT (AUX) JACK AUDIO/USB CABLE NOT SUPPLIED

1

 
Connect the portable device (MP3, WMA player...) to the JACK auxiliary audio socket or USB port using a suitable cable.



2



Press **MUSIC** to display the "MUSIC" menu.




3



Select "**Activate / Deactivate AUX input**" and confirm.

 First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.



!


Display and management of the controls are via the portable device.

## 09 AUDIO SETTINGS

1



They are accessible by the **MUSIC** button in the control panel or by a long press on **RADIO** according to the source in use.

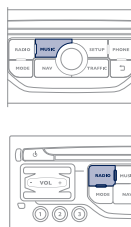

!

The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of listeners in the vehicle.

2

- "Equalizer" (choice of 6 musical ambiances)
- "Bass"
- "Treble"
- "Loudness" (Activate/Deactivate)
- "Distribution" ("Driver", "All passengers")
- "Le-Ri balance" (Left/Right)
- "Fr-Re balance" (Front/Rear)
- "Auto. Volume" depending on road speed (Activate/Deactivate)

!

The audio settings (**Equalizer**, **Bass**, **Treble** and **Loudness**) are different and independent for each sound source.  
The settings for distribution and balance are common to all sources.




# 10 CONFIGURATION
 
## DISPLAY CONFIGURATION

1




Press **SETUP** to display the "Configuration" menu.



2



 Select "**Display configuration**" and confirm.




3a



Select "**Choose colour**" and confirm to select the screen colour harmony and the map presentation mode:

 
- day mode,
- night mode,
- automatic day/night mode, according to whether the headlamps are on.



3b



 Select "**Adjust luminosity**" and confirm to adjust the screen brightness. Press "**OK**" to save the changes. The settings for day and night are independent.



# 11 SCREEN MENU MAP



## MAIN FUNCTION

- 1 OPTION A
  - 2 option A1
  - 3 option A2
- 1 OPTION B...

## "Navigation - guidance" MENU

- 1 **Select destination**
  - 2 Enter an address
  - 2 Directory
  - 2 GPS coordinates (Archive)
- 1 **Journey leg and route**
  - 2 Add a stage
    - 3 Enter an address
    - 3 Directory

- 3 **Previous destinations**
  - 2 Order/delete journey legs
  - 2 Divert route
  - 2 Chosen destination

## Guidance options

- 1 **Guidance options**
  - 2 Set speech synthesis
  - 2 Delete last destinations
  - 2 Set parameters for risk areas

## Map management

- 1 **Map management**
  - 2 Map orientation
  - 2 Map details
  - 2 Move the map
  - 2 Mapping and updating
  - 2 Description of risk areas database

## Stop / Restore guidance

- 1 **Stop / Restore guidance**
  - 2 Define calculation criteria

- 2 **Fastest route**
- 2 **Shortest route**
- 2 **Distance/Time**
- 2 **With tolls**
- 2 **With Ferry**
- 2 **Traffic info**

# 11 SCREEN MENU MAP

## "TRAFFIC" MENU

### 1 Geographic filter

2 Retain all the messages

2 Retain the messages

3 Around the vehicle

3 On the route

### 1 Select TMC station

2 Automatic TMC

2 Manual TMC

2 List of TMC stations

### 1 Display / Do not display messages

## Phone MENU

### 1 Dial

### 1 Directory of contacts

2 Call

2 Open

2 Import

2 Delete

2 Cancel

### 1 Contacts management

2 New contact

2 Sort by Name/First name

2 Delete all contacts

2 Import all the entries

2 Synchronization options

3 No synchronization

3 Display telephone contacts

3 Display SIM card contacts

3 Display all phone contacts

2 Contact mem. status

### 1 Phone functions

2 Ring options

2 Delete calls log

### 1 Bluetooth functions

2 List of the paired peripherals

3 Connect

3 Disconnect

3 Delete

3 Delete all

3 Cancel

2 Peripherals search

2 Rename radiotelephone

### 1 Hang up

# 11 SCREEN MENU MAP

## "RADIO" MENU

- 1 **Change Waveband**
- 1 **Guidance options**
- 2 TA
- 2 RDS
- 1 **Audio settings**
- 2 Equalizer
- 3 None
- 3 Classical
- 3 Jazz
- 3 Rock
- 3 Techno
- 3 Vocal

- 2 Bass
- 2 Treble
- 2 Loudness
- 2 Distribution
- 3 Driver
- 3 All passengers
- 2 Le-Ri balance
- 2 Fr-Re balance
- 2 Auto. Volume
- 1 **Update radio list**

## "MUSIC" MENU

- 1 **Change Media**
- 2 CD
- 2 BT Streaming
- 2 USB/iPod
- 2 AUX
- 1 **Eject USB support**
- 1 **Read mode**
- 2 Normal
- 2 Random
- 2 Random on all media
- 2 Repetition
- 1 **Audio settings**
- 1 **Activate / Deactivate AUX input**

# 11 SCREEN MENU MAP

## "SETUP" MENU

### 1 Display configuration

2 Choose colour

3 Harmony

3 Cartography

4 Day mode

4 Night mode

4 Auto Day/Night

2 Adjust luminosity

2 Set date and time

2 Select units

### 1 Voice synthesis

2 Guidance instructions volume

2 Select male voice / Select female voice

### 1 Define vehicle parameters\*

2 Parking assistance

2 Operation of wipers

3 Engage rear wiper in REVERSE

2 Lighting configuration

3 Duration of guide-me home lighting

3 Directional headlamps

3 Mood lighting

3 Daytime running lamps

### 1 Trip computer

2 Alert log

2 Status of functions

\* The parameters vary according to the vehicle.

# FREQUENTLY ASKED QUESTIONS

The following table groups together the answers to the most frequently asked questions concerning your audio system.

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The guidance criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the guidance criteria on the Navigation Menu, "Guidance options" \ "Define calculation criteria".
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
	The POIs have not been downloaded.	Download the POIs from the website: " <a href="http://peugeot.navigation.com">http://peugeot.navigation.com</a> ".
The risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the Guidance options menu, "Navigation - guidance", "Set parameters for risk areas".
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Traffic info" function in the list of guidance criteria.
I receive a Risk area alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for a Risk area located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk area. Select "On the route" to no longer receive alerts other than guidance or to reduce the time for the announcement.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the "Geographic filter" settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage").
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	<ul style="list-style-type: none"> <li>- Check that your telephone's Bluetooth function is switched on.</li> <li>- Check in the telephone settings that it is "visible to all".</li> </ul>
	The Bluetooth telephone is not compatible with the system.	A list of compatible Bluetooth mobile telephones is available from the dealer network.
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	
The CD is ejected automatically or is not played by the player.	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.</p> <p>Le CD has been recorded in a format that is not compatible with the player.</p> <p>The CD is protected by an anti-pirating protection system which is not recognised by the audio system.</p>	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.</li> <li>- The audio system's CD player does not play DVDs.</li> <li>- Some recorded CDs will not be played by the audio system because they are not of the correct quality.</li> </ul>
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.



# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	
	Some radio stations send other information in place of their name (the title of the song for example).	
The name of the radio station changes.	The system interprets this information as the name of the station.	

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings for Volume, Bass, Treble, Equalizer and Loudness can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings for (Volume, Bass, Treble, Equalizer, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Fr-Re balance, Le-Ri balance) to the middle position, select the "None", musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
<p>With the engine off, the system switches off after a few minutes of use.</p>	<p>When the engine is switched off, the system's operating time depends on the battery charge. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.</p>	<p>Start the vehicle's engine to increase the battery charge.</p>
<p>Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).</p>	<p>Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).</p>	<p>Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.</p>
<p>When I connect my iPhone as telephone and to the USB port at the same time, I am unable to play the music files.</p>	<p>When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.</p>	<p>Disconnect and reconnect to the USB port (the USB function takes priority over streaming).</p>