

PEUGEOT Connect Navigation (RT6)

SATELLITE NAVIGATION SYSTEM

MULTIMEDIA BLUETOOTH TELEPHONE

AUDIO SYSTEM

CONTENTS

01	First steps - Control panel	p.	9.4
02	General operation	p.	9.6
03	Steering mounted controls	p.	9.8
04	Audio settings	p.	9.9
05	Navigation - Guidance	p.	9.10
06	Traffic information	p.	9.23
07	Using the telephone	p.	9.27
08	Radio	p.	9.38
09	Music media players	p.	9.42
10	Configuration	p.	9.48
11	Trip computer	p.	9.51
12	Screen menu map	p.	9.52
	Frequently asked questions	p.	9.56



The system is protected in such a way that it will only operate in your vehicle.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.

01 FIRST STEPS

Long press: open the **"Audio settings"** menu: music ambience, bass, treble, loudness, left/right balance, front/rear fader, automatic volume adjustment.

Selection and confirmation OK dial:

Selection of an item on the screen or in a list or a menu, then confirmation with a short press.

Other than for menus and lists, a short press displays a contextual menu depending on the current screen.

Rotation with map displayed: zoom the map scale in and out.

Access to the **"RADIO"** menu and display the list of stations received.

Access to the **"MUSIC"** menu, and display of the CD/MP3/Apple® tracks and folders.


Long press: display the audio settings screen for the radio tuner source.

Long press: display the audio settings screen for the **"MEDIA"** (CD/USB/iPod/Streaming/AUX) sources.

Short press without the engine running: on / off.

Short press with the engine running: audio source off / restore.

Volume adjustment (each source is independent, including TA messages and navigation instructions).

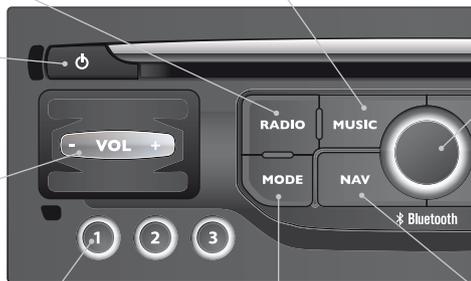

Short press: select pre-set radio station.

Long press: pre-set the current station.

MODE button: Selection of the type of permanent display.

Long press: black screen (DARK).

Access to the **"Navigation - guidance"** menu and display the recent destinations.

01 FIRST STEPS


Open the **"Configuration"** menu.
Long press: access to the GPS coverage and the navigation demonstration mode.

Open the **"Telephone"** menu and display the list of recent calls or accept an incoming call.

Select:

- the previous/next line in a list or menu.
- the previous / next media folder.
- step by step selection of the previous/next radio frequency.
- the previous / next MP3 folder.

Move up/down, in **"Move the map"** mode.

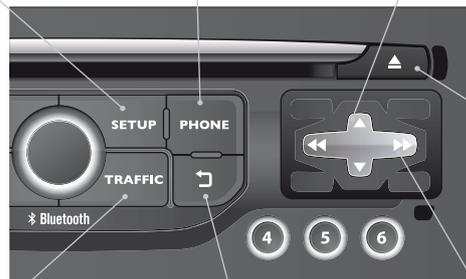

Continuous press:
reinitialisation of the system.

Open the **"Traffic information"** menu and display the current traffic alerts.

Abandon the current operation, up one level in the menu.
Long press: return to the permanent display.

Select:

- the next lower / higher radio frequency automatically.
- the previous / next CD track, MP3 track or media.
- the left / right of the screen when a menu is displayed.


Move left / right in **"Move the map"** mode.

02 GENERAL OPERATION

MODE



Press the **MODE** button several times in succession for access to the following displays:

"**RADIO**"

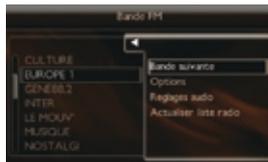

"**TELEPHONE**"

(If conversation in progress)

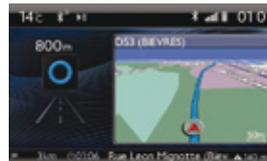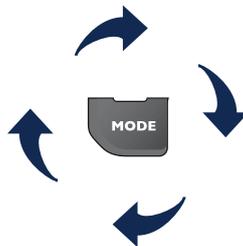

"**MAP IN WINDOW**"

(If navigation guidance in progress)



"**FULL SCREEN MAP**"

SETUP

SETUP: PARAMETERS

date and time, display configuration, sound.

RADIO

MUSIC

Changing the audio source:

RADIO: RADIO broadcasts.

MUSIC: playing MUSIC.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section.

02 GENERAL OPERATION

DISPLAY ACCORDING TO CONTEXT



A press on the dial gives access to short-cut menus according to the display in the screen.

RADIO:

- 1 Activate / Deactivate TA
- 1 Activate / Deactivate RDS
- 1 Change waveband
- 1 TA
- 2 FM
- 2 AM

TELEPHONE (call in progress):

- 1 Private mode
- 1 Put call on hold

1 DTMF ring tones

1 Hang up

MUSIC MEDIA PLAYERS, CD or USB (according to media):

Play modes:

- 1 Normal
- 1 Random
- 1 Random on all media
- 1 Repetition

FULL SCREEN MAP OR IN A NEW WINDOW:

1 Stop / Restore guidance

1 Select destination

2 Enter an address

2 Directory

2 GPS coordinates

1 Divert route

1 Move the map

2 Info. on location

2 Select as destination

2 Select as stage

2 Save this place (contacts)

2 Quit map mode

1 Guidance criteria

03 STEERING MOUNTED CONTROLS

RADIO: select the previous/next preset station.


Select the next entry in the address book.

RADIO: change to the next radio station in the list.

Long press: automatic search for a higher frequency.

CD: select the next track.

CD: continuous press: fast forward play.

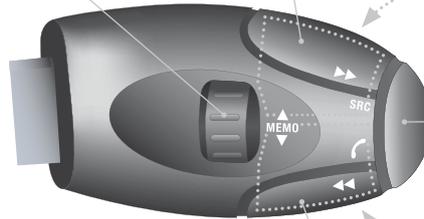

Volume increase.

Change the audio source.
Start a call from the address book.
Call/End call on the telephone.
Press for more than 2 seconds:
access to the address book.

Volume decrease.

Mute: press the volume increase and decrease buttons simultaneously.
Restore the sound by pressing one of the two volume buttons.

RADIO: change to the previous radio station in the list.

Long press: automatic search for a lower frequency.

CD: select the previous track.



CD: continuous press: fast reverse.

04 AUDIO SETTINGS

1



They are accessible by the **MUSIC** button in the control panel or by a long press on **RADIO** according to the source in use.

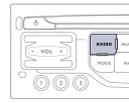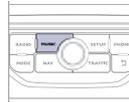

!

The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of listeners in the vehicle.

2

- "Equalizer" (choice of 6 musical ambiances)
- "Bass"
- "Treble"
- "Loudness" (Activate/Deactivate)
- "Distribution" ("Driver", "All passengers")
- "Le-Ri balance" (Left/Right)
- "Fr-Re balance" (Front/Rear)
- "Auto. Volume" depending on road speed (Activate/Deactivate)

!

The audio settings (**Equalizer**, **Bass**, **Treble** and **Loudness**) are different and independent for each sound source.
The settings for distribution and balance are common to all sources.

05 NAVIGATION - GUIDANCE

Access to the "NAVIGATION" menu



Press **NAV**.

A short press on the end of the lighting control stalk repeats the last navigation message.

To delete the list of recent destinations, select "**Guidance options**" in the navigation menu then select "**Delete last destinations**" and confirm. Select "**Yes**" then confirm. Deleting just one destination is not possible.



Contact a PEUGEOT dealer for mapping updates.

Go from the list to the menu (left/right).








or







05 NAVIGATION - GUIDANCE

SELECTING A DESTINATION

TOWARDS A NEW DESTINATION
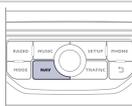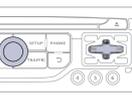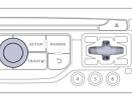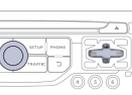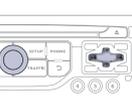
<p>1</p> 	<p>Press NAV to display the "Navigation - guidance" menu.</p>	
<p>2</p> 	<p>Select "Select destination" and confirm, then select "Enter an address" and confirm.</p>	
<p>3</p> 	<p>Select the "Country" function then confirm.</p>	
<p>4</p> 	<p>Select "Town" function then confirm to enter the destination town.</p>	
<p>5</p> 	<p>Select the letters in the name of the town one at a time, confirming each one with the dial.</p>	
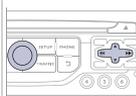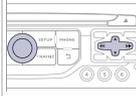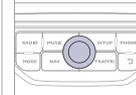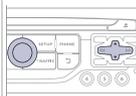
<p>6</p>	<p>Select the town from the list offered, then confirm A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed directly by selecting and confirming "List" on the screen.</p>
<p>7</p> 	<p>Turn the dial and select "OK" then confirm.</p> 
<p>8</p> 	<p>If possible, enter the "Road" and "N°/X" information in the same way.</p> 
	<p>Select "Archive" to save the address entered in a contact file. The system allows up to 400 contact files to be recorded.</p>
<p>9</p> 	<p>Confirm "OK" to start guidance.</p> 
<p>10</p> 	<p>Select the guidance criteria: "Fastest route", "Shortest route" or optimised "Distance/Time", then select the desired restriction criteria: "With tolls", "With Ferry", or "Traffic info" then confirm "OK".</p> 

05 NAVIGATION - GUIDANCE


SELECTING A DESTINATION

TO ONE OF THE RECENT DESTINATIONS

1




Press **NAV** to display the "**Navigation - guidance**" menu.

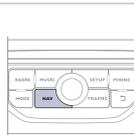

2



Select the desired destination and confirm to start guidance.

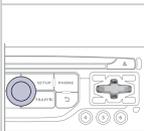

Delete the recent destinations:

- Press on "**NAV**".
- Select "Guidance options" and confirm.
- Select "Delete last destinations" and confirm.

TOWARDS A CONTACT IN THE CONTACTS DIRECTORY


i

Navigation towards a contact imported from your telephone is only possible if the address is compatible with the system.

1




Press **NAV** to display the "**Navigation - guidance**" menu.

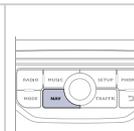

2




Select "**Select destination**" and confirm, then select "**Directory**" and confirm.

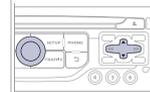

3



Selection the desired destination from your contacts and confirm "**OK**" to start the guidance.

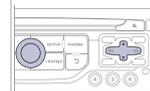


05 NAVIGATION - GUIDANCE

TOWARDS GPS COORDINATES

1




Press **NAV** to display the "Navigation - guidance" menu.

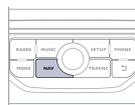

2




Select "**Select destination**" and confirm, then select "**GPS coordinates**" and confirm.

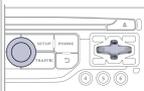

3



Enter the GPS coordinates and confirm "**OK**" to start the guidance.

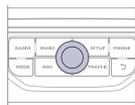


TOWARDS A POINT ON THE MAP

1




With the map displayed, press **OK** to display the contextual menu. Select "**Move the map**" and confirm.

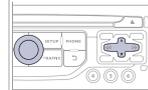

2




Move the cursor using the control to identify the desired destination.

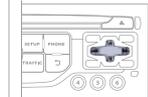

3




Press **OK** to display the contextual menu for "**Move the map**" mode.

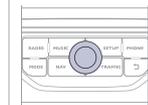

4



Select "**Select as destination**" or "**Select as stage**" and confirm.

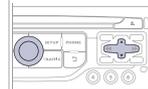

05 NAVIGATION - GUIDANCE


TOWARDS POINTS OF INTEREST (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

1




Press **NAV** to display the "Navigation - guidance" menu.

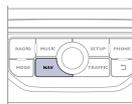

2



Select the "Enter an address" function and confirm, then select "Select destination" and confirm.

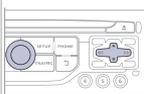


3



To select a POI close to your current location, select "POI" and confirm, then select "Around the current place" and confirm.

To select a POI as a stage on the route, select "POI" and confirm, then select "On the route" and confirm.

To select a POI as a destination, first enter the country and town (see "Towards a new destination"), select "POI" and confirm, finally select "Near" and confirm.

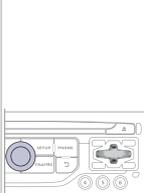


Select "Search by Name" to search for POIs by name and not by proximity.

4




Search for POIs in the categories suggested in the following pages.

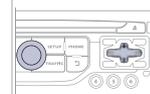

5



Select the POI and confirm "OK" to start the guidance.

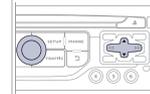

05 NAVIGATION - GUIDANCE


This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.



LIST OF PRINCIPAL POINTS OF INTEREST (POI)

-  Service station
-  Garage
-  PEUGEOT
-  Motor racing circuit
-  Covered car park
-  Car park
-  Rest area
-  Hotel
-  Restaurant
-  Cafeteria
-  Bed and breakfast
-  Airport

-  Railway station
-  Bus station
-  Port
-  Industrial estate
-  Supermarket
-  Bank
-  Vending machine
-  Sports complex, sports centre, sports ground
-  Swimming pool
-  Winter sports resort
-  Entertainment, show
-  Cinema

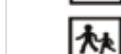-  Theme parks
-  Hospital, Chemist, Vet
-  Police station
-  School
-  University
-  Town hall
-  Post office
-  Museum, Culture, Theatre, Historic monument
-  Tourist information, Tourist attraction
-  Risk area*

The detailed procedure for updating POIs can be found at "<http://peugeot.navigation.com>".

* According to availability in the country.


05 NAVIGATION - GUIDANCE

ALERT PARAMETERS RISK AREAS

1




Press **NAV** to display the "**Navigation - guidance**" menu.

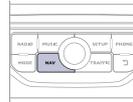

2



Select "**Guidance options**" and confirm, then select "**Set parameters for risk areas**" and confirm.

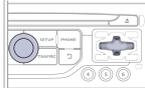

3




Select:

- "Visual alert"
- "Audible alert"
- "Alert only in guidance"
- "Overspeed alarm only".

The choice of time of notification defines how long in advance that Risk area warnings are given.

Select "**OK**" to confirm the screen.

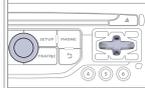

These functions are only available if risk areas have been downloaded and installed on the system.
The detailed procedure for updating risk area POIs can be found at www.peugeot.com.


05 NAVIGATION - GUIDANCE

ADDING A STAGE

1




Press **NAV** to display the "Navigation - guidance" menu.

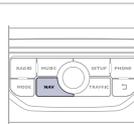

2




Select "**Journey leg and route**" then confirm.

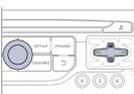

3




Select "**Add a stage**" then confirm
The address of the stage is entered as a destination, by "**Enter an address**", a contact in "**Directory**", or "**Previous destinations**".

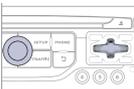

4



Select "**Close to**" a route passing close to the stage or "**Strict**" for a route passing through the stage.
Confirm "**OK**" to start the guidance, and give a general indication of the guidance route.

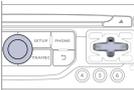


ORGANISING STAGES

1




To organise stages, carry out operations 1 to 2 again, then select "**Order/delete journey legs**" and confirm.

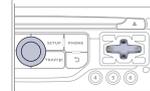

2




Select the stage that you want to move in the order.

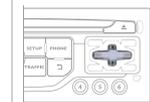

3



Select and confirm to save the modifications.

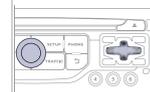

Select "**Delete**" to delete the stage.

05 NAVIGATION - GUIDANCE


ROUTE OPTIONS

CALCULATION CRITERIA

1




Press **NAV** to display the "Navigation - guidance" menu.

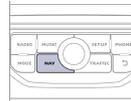

2



Select "**Guidance options**" and confirm.

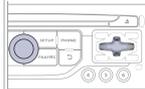


3



Select "**Define calculation criteria**" and confirm.

This function allows modification of:

- the guidance criteria: ("**Fastest route**", "**Shortest route**", "**Distance/Time**"),
- the exclusion criteria: ("**With tolls**" or "**With Ferry**"),
- traffic avoidance: ("**Traffic info**").

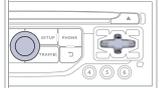


i

If traffic avoidance (Traffic info) is selected, the system suggests an alternative route if there is a delay on the guidance route.

4



Select "**OK**" and confirm to save the modifications.

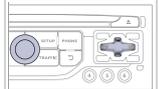

05 NAVIGATION - GUIDANCE


MAP MANAGEMENT

SELECTING THE POINTS OF INTEREST DISPLAYED ON THE MAP

1




Press **NAV** to display the "Navigation - guidance" menu.

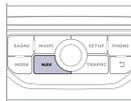

2




Select "**Map management**" and confirm.

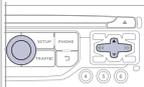

3




Select "**Map details**" and confirm.

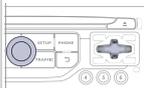

4



Select from the various categories the ones that you want to display on the screen.

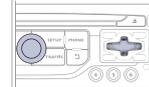


Select "**By default**" to have only "**Oil stations, garages**" and "**Accident-prone area**" appear on the map (if installed in the system).

5



Select "**OK**" then confirm and select "**OK**" again then confirm to save the modifications.

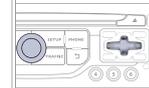


05 NAVIGATION - GUIDANCE

MAP ORIENTATION

1




Press **NAV** to display the "Navigation - guidance" menu.

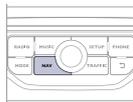

2




Select "**Map management**" and confirm.

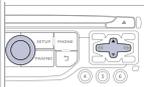

3



Select "**Map orientation**" and confirm.

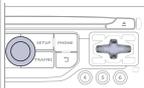


4



Select:

- "**Vehicle direction**" to have the map follow the direction of travel,
- "**North direction**" to keep the map always North up,
- "**Perspective view**" to display a perspective view.

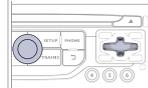

The colour of the map, different from the day and night mode, is configured in the "**SETUP**" menu.



Street names are visible on the map from the 100 m scale.

05 NAVIGATION - GUIDANCE

ADJUSTING THE GUIDANCE SPEECH SYNTHESIS

ADJUSTING THE VOLUME/DEACTIVATION

The volume setting of guidance messages is also accessible via the "SETUP" / "Voice synthesis" menu.




The volume of messages can be adjusted during the transmission of the message using the volume adjustment control.

1




Press **NAV** to display the "Navigation - guidance" menu.

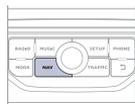

2




Select "**Guidance options**" and confirm.

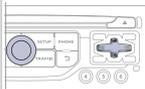

3




Select "**Set speech synthesis**" and confirm.

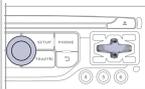

4




Select the volume graph and confirm.

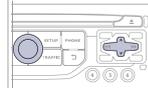

5



Adjust the volume to the desired level and confirm.

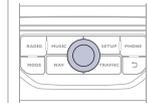


Select "**Deactivate**" to deactivate voice messages.

6



Select "**OK**" and press the dial to confirm.

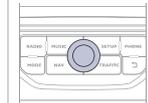


05 NAVIGATION - GUIDANCE

MALE VOICE / FEMALE VOICE

1




Press **SETUP** to display the configuration menu.

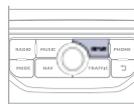

2




Select "**Voice synthesis**" and confirm.

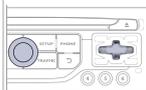

3



Select "**Select male voice**" or "**Select female voice**" then confirm "**Yes**" to activate a male or female voice. The system restarts.

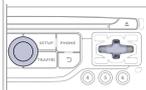

06 TRAFFIC INFORMATION

Access to the "TRAFFIC INFORMATION" menu



Press "TRAFFIC".

"Traffic information"

List of TMC messages in order of distance from the vehicle.

"Geographic filter"
"Select TMC station"
(automatic, manual)
"Display/Do not display messages"

A diagram of the "Traffic information" menu. It features a title bar at the top, a scrollable list area on the left, and a menu area on the right. A blue arrow points from the list area to the menu area, and another blue arrow points from the menu area back to the list area, indicating navigation between the two.

Go from the list to the menu (left/right).



or



06 TRAFFIC INFORMATION

CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES


TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map.

The navigation system can then suggest an alternative route to avoid a traffic problem.

1




Press the **TRAFFIC** button to display the **Traffic information** menu.

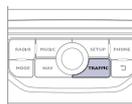

2



Select the **"Geographic filter"** function and confirm.

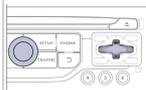


3



The system offers a choice of:


- **"Retain all the messages"**,
- or
- **"Retain the messages"**
 - **"Around the vehicle"**, (confirm the mileage to modify and select the distance),
 - **"On the route"**.

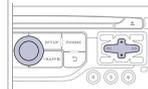

4




Confirm **"OK"** to save the modifications.

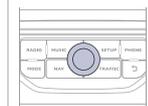

i

We recommend:

- a filter on the route and
- a filter around the vehicle of:
 - 12 miles (20 km) in urban areas,
 - 30 miles (50 km) on motorways.

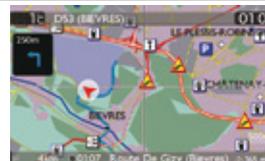

06 TRAFFIC INFORMATION

PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:



2 Red and yellow triangle: traffic information, for example:




RECEIVING TA MESSAGES

! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.


1  Press **RADIO** to display the "FM / AM band" menu.



2  Select "**Guidance options**" then confirm.

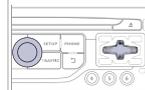


3  Activate or deactivate "**TA**" then confirm.

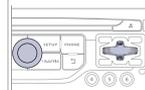

! The volume setting for TA messages can be adjusted only during the transmission of this type of alert.

 Activate or deactivate the function at any time by pressing the button. During a message, press the button to interrupt it.

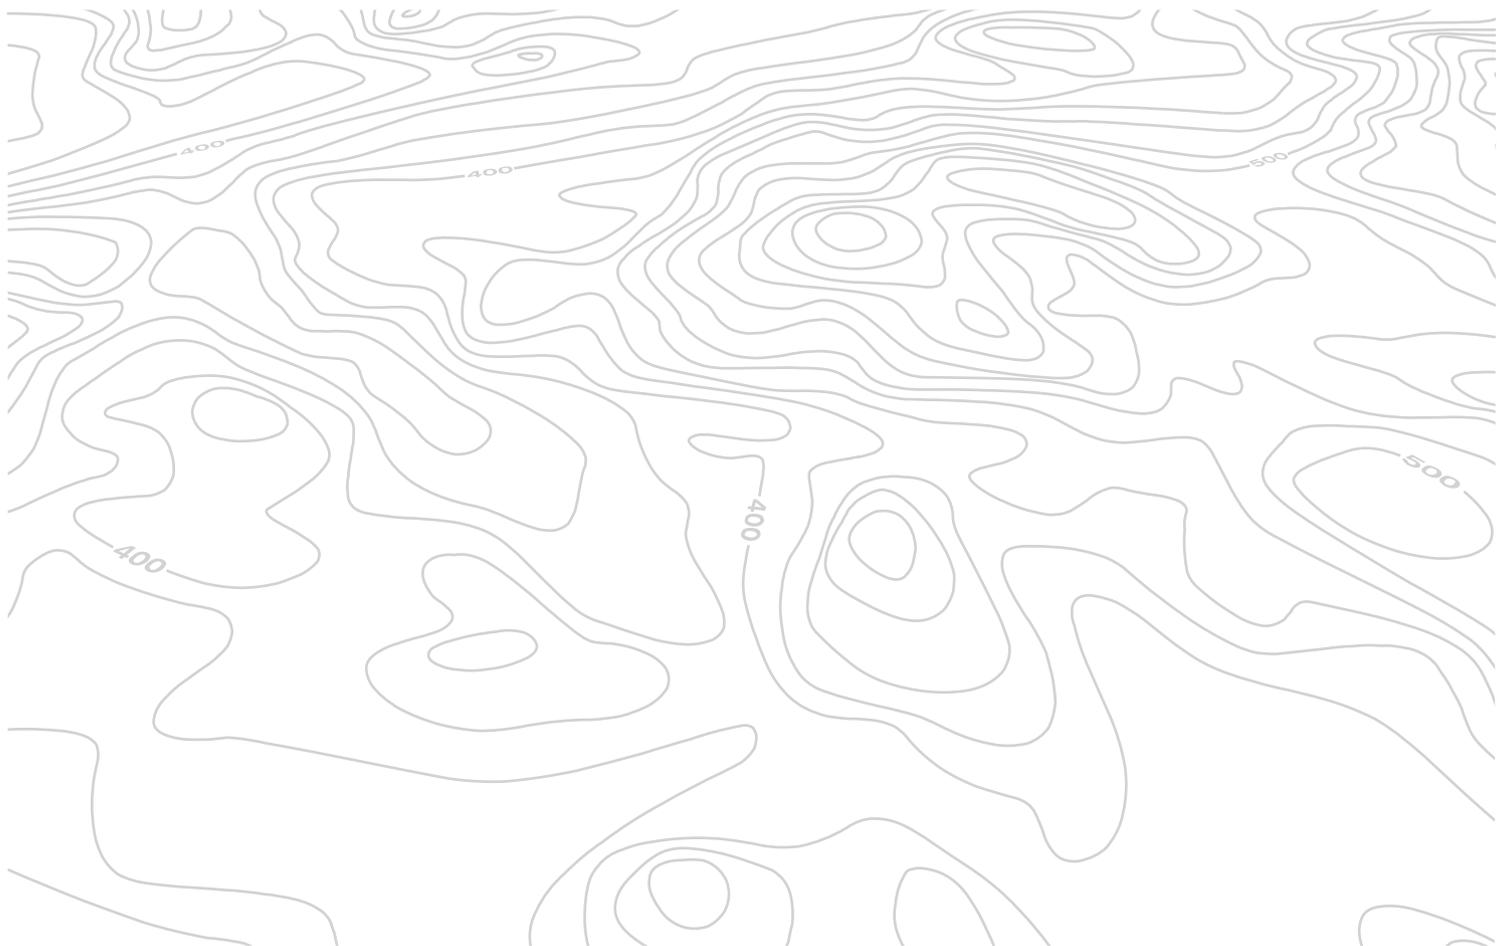

07 USING THE TELEPHONE

Access to the "TELEPHONE" menu



Press **PHONE**.

"Telephone"

List of recent calls sent and received with the telephone connected to the system.

"Dial"
"Directory of contacts"
"Telephone options"
"Bluetooth functions"
"Hang up"
(call in progress)

In the top bar of the permanent display



No telephone connected.



Telephone connected.



Incoming call.



Outgoing call.



Synchronisation of address book in progress.



Telephone call in progress.

To make a call, select a number in the list and confirm **"OK"** to start the call.



Connecting a different telephone deletes the list of recent calls.

Go from the list to the menu (left/right).



or



07 USING THE TELEPHONE

PAIRING A BLUETOOTH TELEPHONE FIRST CONNECTION

 Visit www.peugeot.co.uk for more information (compatibility, additional help, ...).

1




Activate the telephone's Bluetooth function and ensure that it is "shown to all" (telephone configuration).



2




Press this button.

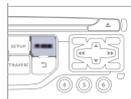

3



Select "**Bluetooth functions**" and confirm.

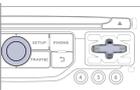


!

For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio unit must be carried out with the **vehicle stationary**.

4




Select "**Peripherals search**" and confirm.
The list of peripherals detected is displayed. Wait until the "**Connect**" button is available.

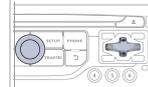

5



Select the name of the desired peripheral from the list of devices detected then select "**Connect**" and confirm.

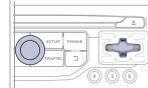


6



The system offers to connect the telephone:

- in "**Hands-free mode**" (telephone only),
- in "**Audio**" mode (streaming: playing music files on the telephone),
- or "**All**" (for selection of both modes).

Select "**OK**" and confirm.

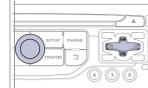

07 USING THE TELEPHONE



The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.



The "**Hands-free mode**" should be used in preference if "Streaming" is not desired.




The ability of the system to connect in only one mode depends on the telephone. The two modes may both connect by default.

7



Select a code for the connection then confirm "**OK**".

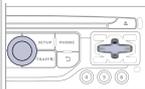

8

Enter the same code on the telephone then accept the connection.



Then accept automatic connection on the telephone to allow the telephone to reconnect automatically every time the vehicle is started.











Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



On return to the vehicle, the last telephone connected automatically reconnects, within around 30 seconds after switching on the ignition (Bluetooth activated and visible). To modify the automatic connection mode, remove the pairing and pair the telephone again with the desired mode.








07 USING THE TELEPHONE

DIRECTORY / SYNCHRONIZING CONTACTS
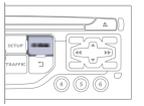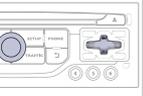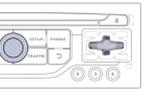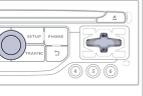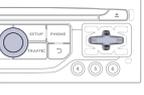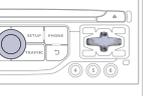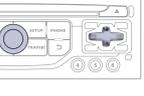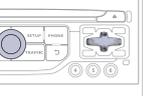
<p>1</p>  <p>Press PHONE then select "Contacts management" and confirm.</p>		<p>2d</p>  <p>Select "Import all the entries" to import all the contacts in the telephone and save them in the system. Once imported, a contact remains visible whatever telephone is connected.</p>	
<p>2a</p>  <p>Select "New contact" to enter a new contact.</p>		<p>2e</p>  <p>Selection "Synchronization options":</p> <ul style="list-style-type: none">- No synchronization: only the contacts saved in the system (always present).- Display telephone contacts: only the contacts saved in the telephone.- Display SIM card contacts: only the contacts saved on the SIM card.- Display all phone contacts: contacts on the SIM card and in the telephone.	
<p>2b</p>  <p>Select "Sort by Name/First name" to choose the order in which they appear.</p>		<p>2f</p>  <p>Select "Contact mem. status" to see the number of contacts saved in the system or imported, and the free memory.</p>	
<p>2c</p>  <p>Select "Delete all contacts" to delete the contacts saved in the system.</p>			

07 USING THE TELEPHONE

MANAGING CONTACTS
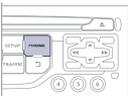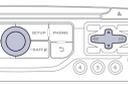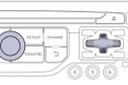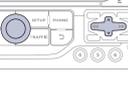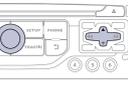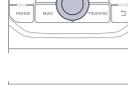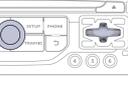
<p>1</p>  <p>Press PHONE then select "Directory of contacts" and confirm.</p>		<p>5</p>  <p>Select "Import" to copy one contact to the system.</p>	
<p>2</p>  <p>Select the desired contact and confirm.</p>		<p>6</p>  <p>Select "Delete" to delete a contact saved in the system.</p>	
<p>3</p>  <p>Select "Call" to start the call.</p>		<p>7</p>  <p>Select OK</p> <p>or</p>  <p>press the back button to exit this menu.</p>	
<p>4</p>  <p>Select "Open" to view an external contact or modify a contact saved in the system.</p>		<p>Delete the addresses saved in the directory of contacts:</p> <ul style="list-style-type: none">- Press on PHONE.- Select "Directory of contacts".- Select "Display contacts" and confirm, then select the address.- Select "Delete" and confirm. <p>(This operation must be carried out contact by contact).</p>	
<p>i It is necessary to import an external contact to modify the record. It will be saved in the system. It is not possible to modify or delete contacts in the telephone or the SIM card via the Bluetooth connection.</p>			

07 USING THE TELEPHONE

MAKING A CALL


Use of the telephone is not recommended while driving. We recommend that you park safely or make use of the steering mounted controls.

CALLING A NEW NUMBER

1




Press **PHONE** twice.

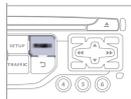

2




Select "**Dial**" then confirm.

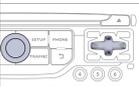

3



Dial the telephone number using the virtual keypad selecting each number in turn.
Confirm "**OK**" to make the call.

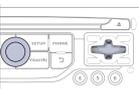


CALLING A CONTACT

1




Press **TEL** or twice on **PHONE**.

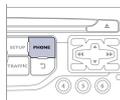

2




Select "**Directory of contacts**" then confirm.

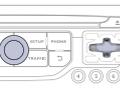

3




Select the desired contact and confirm.
If access was via the **PHONE** button, select "**Call**" and confirm.

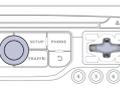

4



Select the number and confirm to start the call.

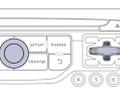

07 USING THE TELEPHONE

CALLING A RECENTLY ENTERED NUMBER

1




Press **TEL**, select "Call list" and confirm,



or




Press **PHONE** to display the calls log.

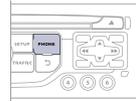

2



Select the desired number and confirm.

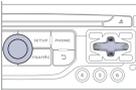


To erase the calls log, press **PHONE** twice, select "**Phone functions**" and confirm then select "**Delete calls log**" and confirm.

ENDING A CALL

1a




Press **PHONE** then select "OK" to end the call.

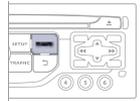

1b



Or make a long press on **TEL** at the steering mounted controls.

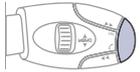

1c




Or make two short presses on **TEL** at the steering mounted controls.




1d



Or press the **MODE** button, as many times as necessary, until the telephone screen is displayed.

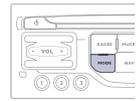

Press "OK" to display the contextual menu then select "**Hang up**" and confirm.

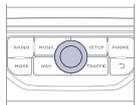

07 USING THE TELEPHONE

RECEIVING A CALL


1

An incoming call is announced by a ring and a superimposed display on the screen.

2



"Yes" to accept the call is selected by default.
Press "**OK**" to accept the call.
Select "**No**" and confirm to reject the call.

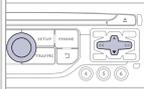

A short press on **TEL** accepts an incoming call.
A long press on **TEL** rejects an incoming call.





07 USING THE TELEPHONE

OPTIONS DURING A CALL *

1



During a call, press the **MODE** button several times to select display of the telephone screen, then press **"OK"** to open the contextual menu.

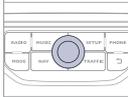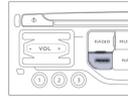


Or make a short press on this button.

2a




Select **"Private mode"** and confirm to take the call on the handset.
Or select **"Hands-free mode"** and confirm to take the call via the vehicle's speakers.

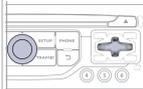

2b




Select **"Put call on hold"** and confirm to put the current call on hold.
Or select **"Resume the call"** and confirm to resume the call on hold.

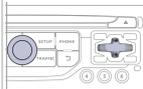

2c




Select **"DTMF ring tones"** to use the numerical keypad, so as to navigate through the menu of an interactive vocal server.

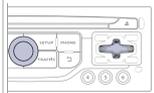

2d




Select **"Hang up"** to end the call.

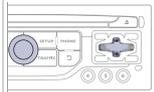

 2e





It is possible to hold a 3-way conference call by making 2 calls in succession*. Select **"Conference mode call"** in the contextual menu accessible using this button.

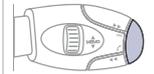






* Depending on the compatibility of the phone and your service plan.


07 USING THE TELEPHONE

MANAGING PAIRED TELEPHONES
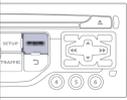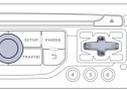
<p>1</p>  <p>Press PHONE twice.</p>	
<p>2</p>  <p>Select "Bluetooth functions".</p>	
<p>3</p>  <p>Select "List of the paired peripherals" and confirm.</p> <p>It is possible to:</p> <ul style="list-style-type: none">- "Connect" or "Disconnect" the selected telephone,- delete the pairing of the selected telephone. <p>It is also possible to select all pairings.</p>	

CHANGING THE RING TONE
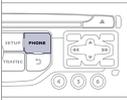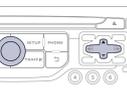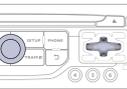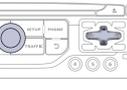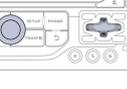
<p>1</p>  <p>Press PHONE twice.</p>	
<p>2</p>  <p>Select "Phone functions" and confirm.</p>	
<p>3</p>  <p>Select "Ring options" and confirm.</p>	
<p>4</p>  <p>You can adjust the volume and the type of ring tone.</p>	
<p>5</p>  <p>Select "OK" and confirm to save the changes.</p>	

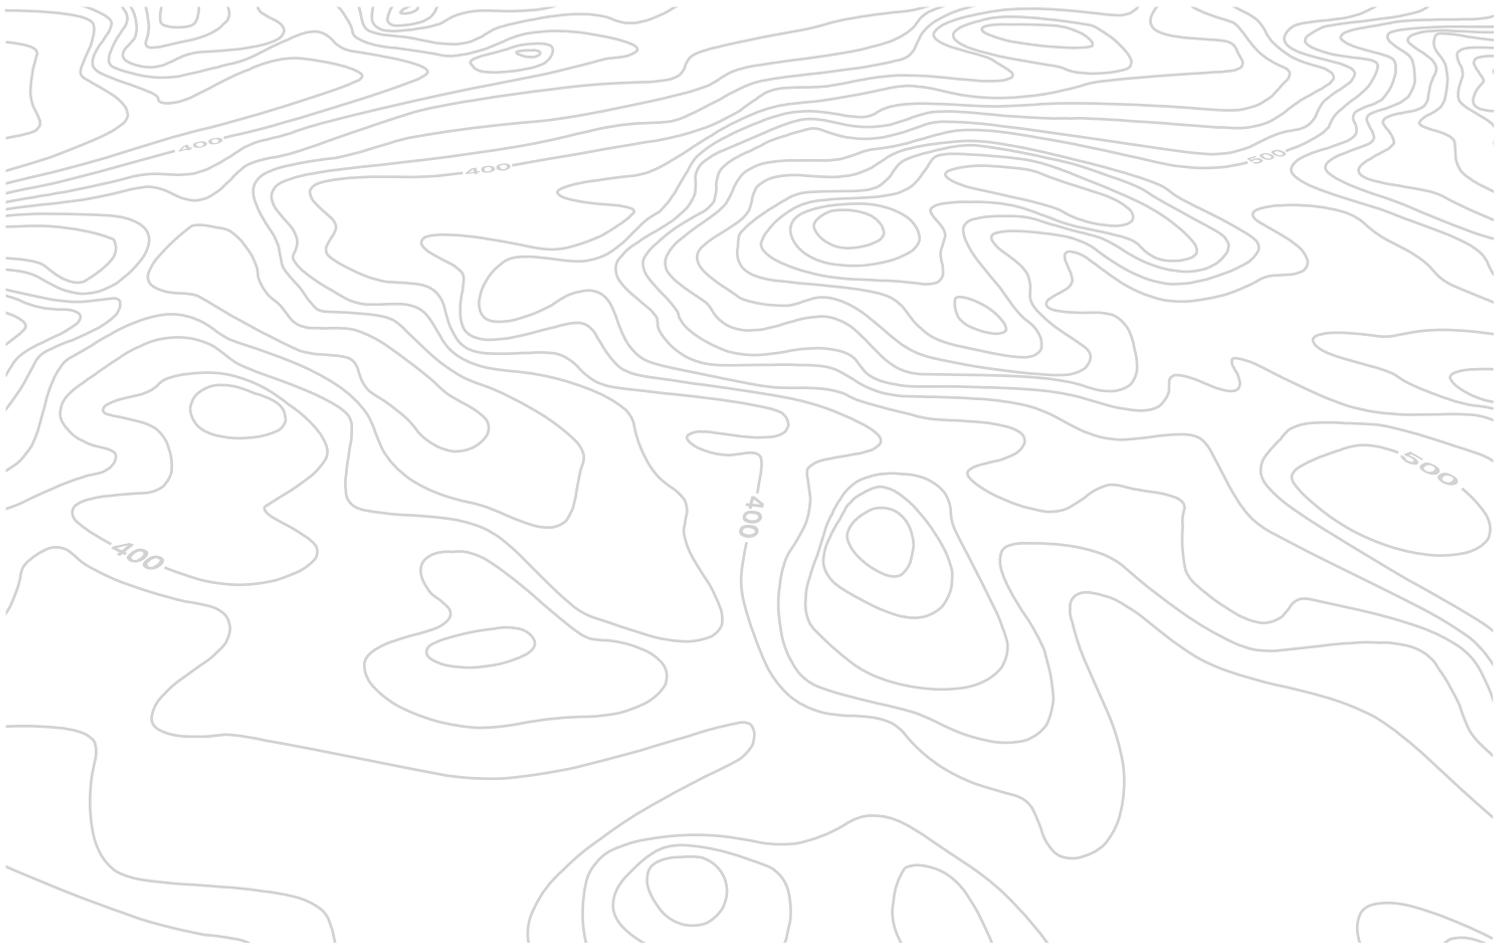


08 RADIO

Access to the "RADIO" menu



Press **RADIO**.

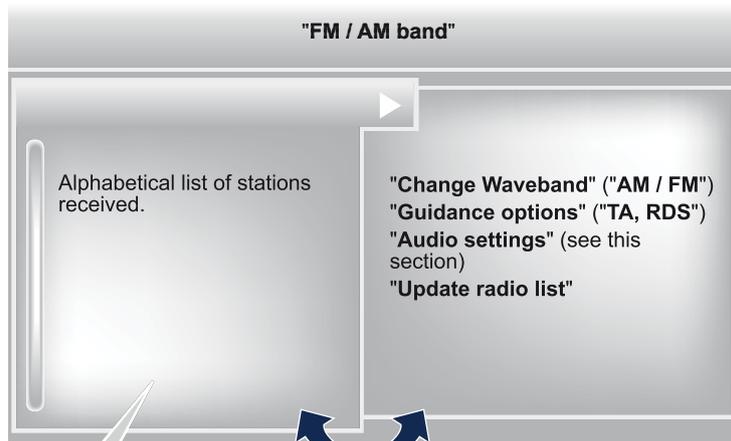

Press **▲** or **▼** or use the rotary control to select the previous or next station in the list.

Go from the list to the menu (left/right).



or



08 RADIO

CHANGING WAVEBAND



The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS station tracking mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a fault with the audio system.

1




Press **RADIO** or **OK** to display the contextual menu.



2




Select **"Change waveband"**.

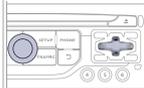

3



Select **"AM / FM"** and confirm.

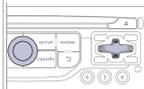

SELECTING A STATION




The quality of reception is represented by the number of active waves in this symbol.

1a



By alphabetical list

Press **RADIO**, select the station of your choice and confirm.

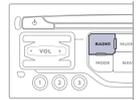


1b



By automatic frequency search

Press **◀** or **▶** for the automatic search for a lower or higher radio frequency.
Or turn the thumb wheel at the steering mounted controls.

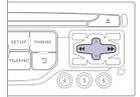


1c



By manual frequency search

Press **▲** or **▼** to adjust the radio frequency step by step.

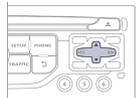

08 RADIO


PRESETTING A STATION

1



After selecting a station, press one of the buttons on the numerical keypad for 2 seconds to preset the current station.

An audible signal confirms that the station has been preset.

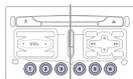


2



Press the button on the numerical keypad to recall a preset station.

Or press then turn the thumb wheel at the steering mounted controls.

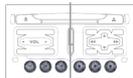

ACTIVATE / DEACTIVATE RDS




RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

1




Press **RADIO**.

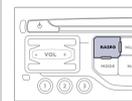

2




Select "**Guidance options**" then confirm.

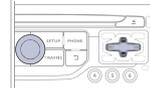


3



Activate or deactivate "**RDS**" then confirm.

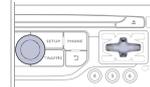

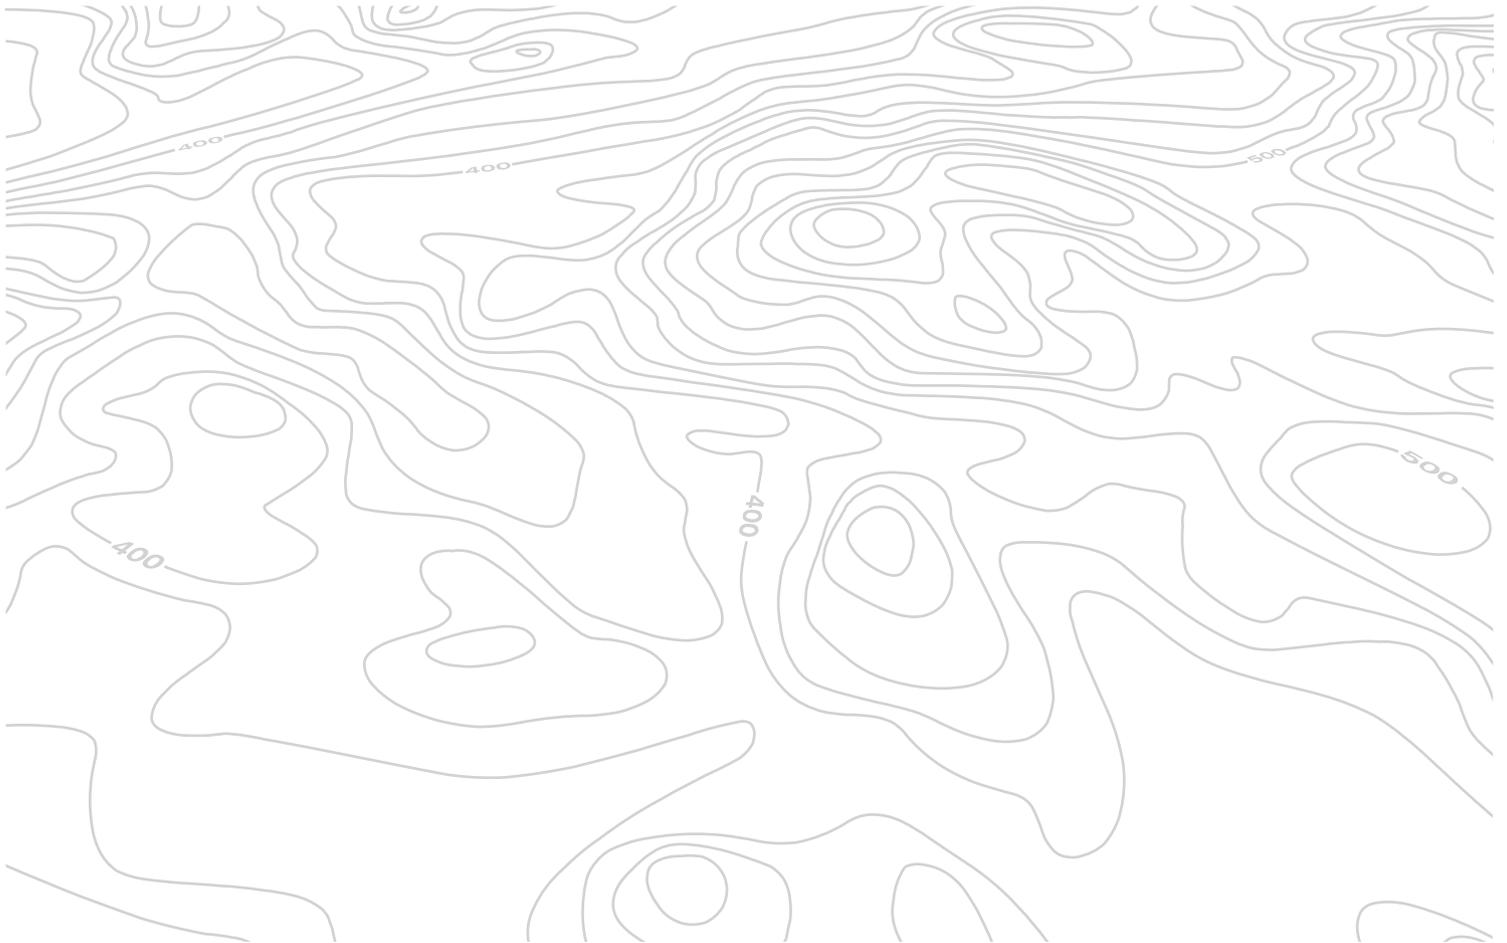


09 MUSIC MEDIA PLAYERS

Access to the "MUSIC MEDIA PLAYER" menu



Press **MUSIC**.

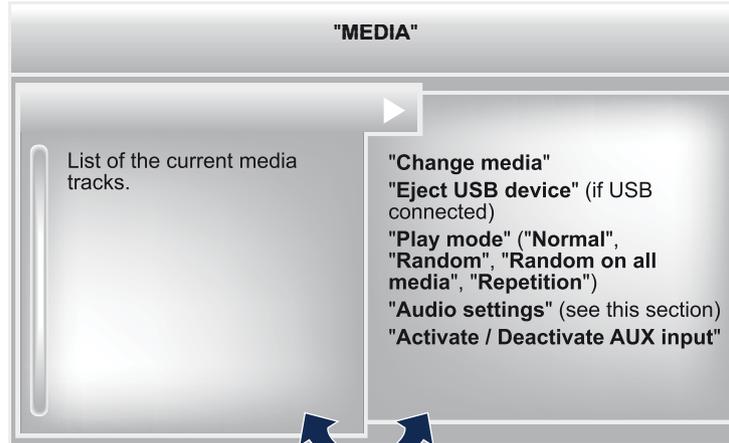

Go from the list to the menu (left/right).



or



09 MUSIC MEDIA PLAYERS

CD, MP3 CD / USB PLAYER

INFORMATION AND ADVICE



The audio equipment will only play audio files with ".wma, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode.

No other type of file (.mp4, .m3u...) can be played.

WMA files must be of the standard wma 9 type.

The sampling rates supported are 11, 22, 44 and 48 KHz.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " ? ; ù) to avoid any playing and displaying problems.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



The system supports USB mass storage or iPod devices via the USB port (suitable cable not supplied).

If a partitioned USB memory key is connected to the system, only the first partition is recognised.

Control of the peripheral device is with the audio system controls.

The number of tracks is limited to 2000 maximum, 999 tracks per folder.

If the current consumption at the USB port exceeds 500 mA, the system goes into protection mode and deactivates the port.

Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).



In order to be read, a USB memory stick must be formatted FAT 16 or 32.



The system does not support the operation of an Apple® player and a USB memory stick connected at the same time.



It is recommended that official Apple® USB cables are used to ensure correct operation.

09 MUSIC MEDIA PLAYERS

SOURCES



Insert the CD in the player, insert the USB memory stick in the USB player or connect the USB peripheral to the USB port using a suitable cable (not supplied)

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick. However, the system memorises these lists and if they are not modified, the loading time will be shorter.


Play starts automatically after a period which depends on the capacity of the USB memory stick.



SELECTION OF SOURCE



The **SOURCE** button on the steering mounted controls allows a direct change to the next media source.

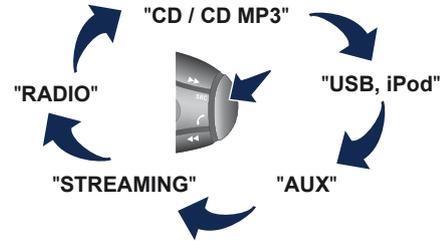

1




Press **MUSIC** to display the "MEDIA" menu.



2



Select "**Following media source**" and confirm.

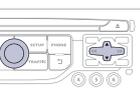

Repeat the operation as many times as necessary to obtain the desired media source (except for radio which is accessible either with **SOURCE** or **RADIO**).

09 MUSIC MEDIA PLAYERS

SELECTING A TRACK

Previous track.	 / 	MUSIC: List of USB or CD tracks or folders	
Next track.	 / 	Up or down in the list.	 /  / 
Previous folder.		Confirm, next menu level.	 /  / 
Next folder.		Up one menu level.	 +  /  / 
Fast forward.	Long press  / 		
Fast backward.	Long press  / 		
Pause: long press on SRC .			

09 MUSIC MEDIA PLAYERS

CONNECTING APPLE® PLAYERS

1 Connect the Apple® player to the USB port using a suitable cable (not supplied).
Play starts automatically.

2 Control is via the audio system.

i The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).
The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.
The "Shuffle tracks" mode on an iPod® corresponds to the "Random" mode on the audio system.
The "Shuffle albums" mode on an iPod® corresponds to the "Random all" on the audio system.
"Shuffle tracks" is restored by default on each connection.

i The version of software in the audio system may not be compatible with the generation of your Apple® player.
The list of devices compatible with software versions is available from PEUGEOT dealers.

AUDIO STREAMING



Streaming allows audio files on your telephone to be played via the vehicle's speakers.

1

Connect the telephone: see "USING THE TELEPHONE".
Select "**Audio**" or "**All**" profile.

2

If play does not start automatically, it may be necessary to start the audio playback from the telephone.
Control is from the peripheral device or by using the audio system buttons.

!

Once connected in streaming mode, the telephone is considered to be a media source.
It is recommended that you activate "**Repeat**" on the Bluetooth peripheral.

09 MUSIC MEDIA PLAYERS

USING THE AUXILIARY INPUT (AUX) JACK AUDIO/USB CABLE NOT SUPPLIED


1

Connect the portable device (MP3, WMA player...) to the JACK auxiliary audio socket or USB port using a suitable cable.

2



Press **MUSIC** to display the "MUSIC" menu.

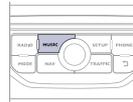


3



Select "**Activate / Deactivate AUX input**" and confirm.

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.

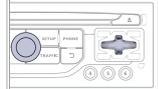

!

Display and management of the controls are via the portable device.


10 CONFIGURATION

DISPLAY CONFIGURATION

1




Press **SETUP** to display the "Configuration" menu.

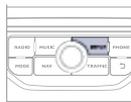

2



Select "**Display configuration**" and confirm.

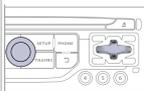


3a



Select "**Choose colour**" and confirm to select the screen colour harmony and the map presentation mode:


- day mode,
- night mode,
- automatic day/night mode, according to whether the headlamps are on.

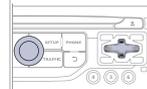

3b



Select "**Adjust luminosity**" and confirm to adjust the screen brightness. Press "**OK**" to save the changes. The settings for day and night are independent.

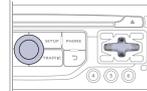


10 CONFIGURATION

SETTING THE DATE AND TIME

1




Press **SETUP** to display the "Configuration" menu.

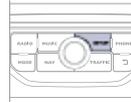

2




Select "**Display configuration**" and confirm.

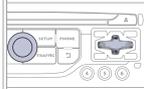

3



Select "**Set date and time**" and confirm.

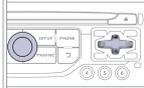


Select "**Synchronize the minutes with GPS**" so that setting the minutes is done automatically by satellite reception.


4




Select the setting to adjust.
Confirm by pressing **OK**, then adjust the setting and confirm again to save the modification.

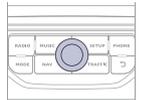

Adjust the settings one by one.
Then select "**OK**" on the screen and confirm to save the settings.

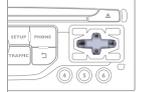

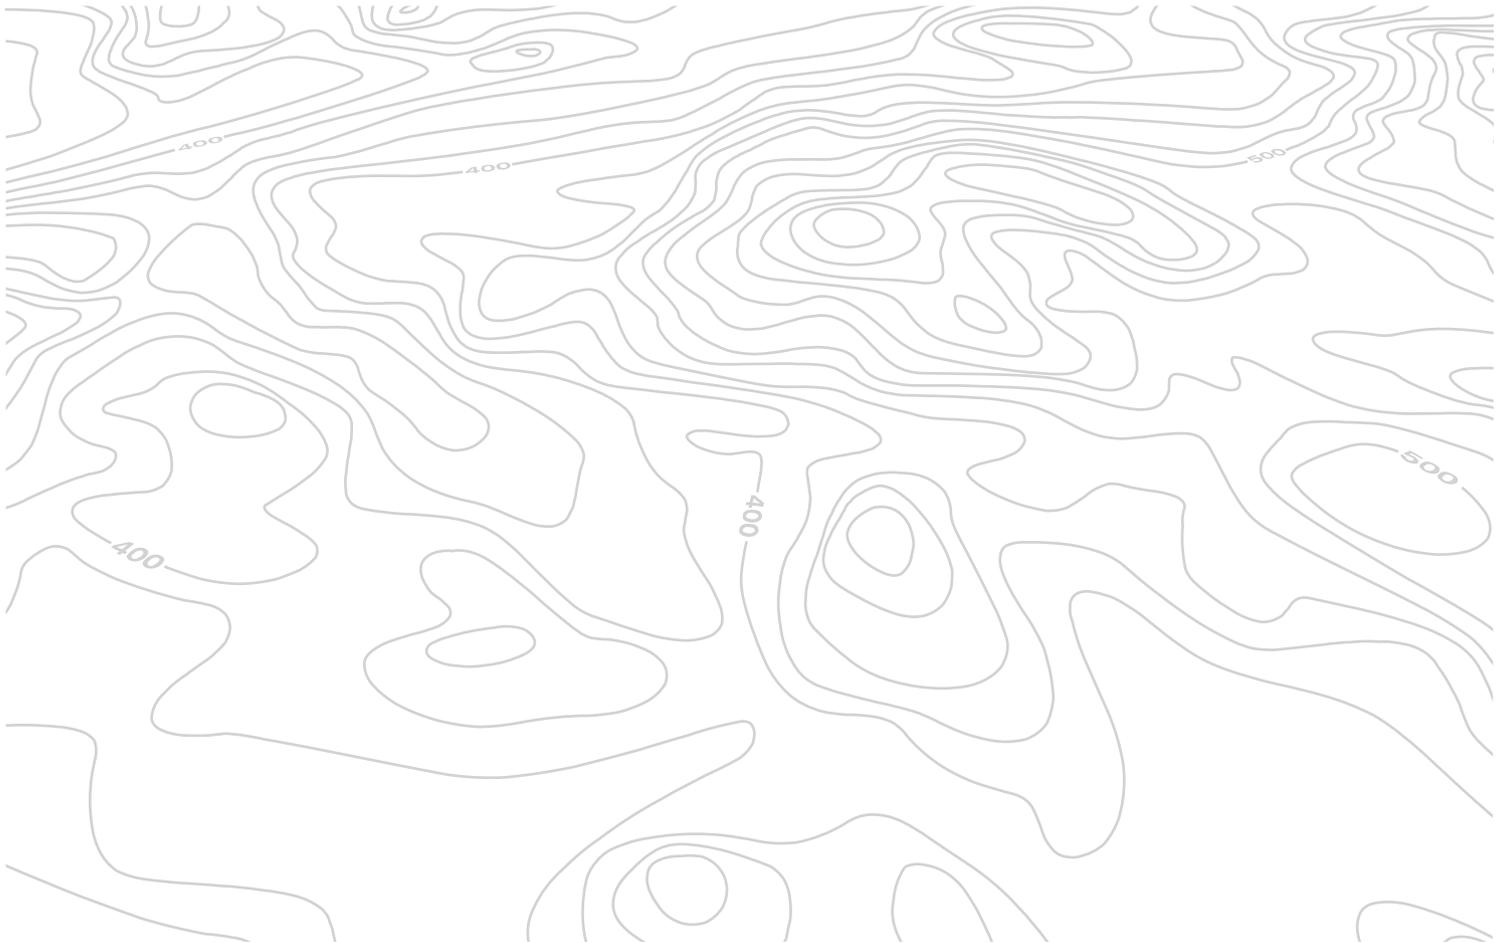

11 TRIP COMPUTER


TRIP COMPUTER

1

Press the MODE button several times in succession until the trip computer is displayed.



- The "vehicle" tab:
The range, the current fuel consumption and the distance remaining.
- The "1" (trip 1) tab with:
The average speed, the average fuel consumption and the distance travelled calculated over route "1".
- The "2" (trip 2) tab with the same functions for a second route.

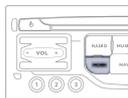

Each press of the button at the end of the wiper stalk displays the different trip computer information in succession, according to the screen.

A FEW DEFINITIONS

i

Range: displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 10 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a PEUGEOT dealer.

Current fuel consumption: only calculated and displayed above 20 mph (30 km/h).

Average fuel consumption: this is the average fuel consumption since the last trip computer zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

12 SCREEN MENU MAP



MAIN FUNCTION

- 1 OPTION A
 - 2 option A1
 - 3 option A2
- 1 OPTION B...

"Navigation - guidance" MENU

- 1 **Select destination**
 - 2 Enter an address
 - 2 Directory
 - 2 GPS coordinates
- 1 **Journey leg and route**
 - 2 Add a stage
 - 3 Enter an address
 - 3 Directory

- 3 Previous destinations
- 2 Order/delete journey legs
- 2 Divert route
- 2 Chosen destination

Guidance options

- 1 Define calculation criteria
 - 2 Fastest route
 - 3 Shortest route
 - 3 Distance/Time
 - 3 With tolls
 - 3 With Ferry
 - 3 Traffic info
- 2 Set speech synthesis
- 2 Delete last destinations
- 2 Set parameters for risk areas

Map management

- 1 Map orientation
 - 2 Vehicle direction
 - 3 North direction
 - 3 Perspective view
- 2 Map details
 - 2 Move the map
 - 2 Mapping and updating
 - 2 Description of risk areas database
- 1 **Stop / Restore guidance**
 - 2 Fastest route
 - 2 Shortest route
 - 2 Distance/Time
 - 2 With tolls
 - 2 With Ferry
 - 2 Traffic info

12 SCREEN MENU MAP

"TRAFFIC" MENU

1 Geographic filter

2 Retain all the messages

2 Retain the messages

3 Around the vehicle

3 On the route

1 Select TMC station

2 Automatic TMC

2 Manual TMC

2 List of TMC stations

1 Display / Do not display messages

"Phone" MENU

1 Dial

1 Directory of contacts

2 Call

2 Open

2 Import

2 Delete

2 Cancel

1 Contacts management

2 New contact

2 Sort by First name/Name

2 Delete all contacts

2 Import all the entries

2 Synchronization options

3 No synchronization

3 Display telephone contacts

3 Display SIM card contacts

3 Display all phone contacts

2 Contact mem. status

1 Phone functions

2 Ring options

2 Delete calls log

1 Bluetooth functions

2 List of the paired peripherals

3 Connect

3 Disconnect

3 Delete

3 Delete all

3 Cancel

2 Peripherals search

2 Rename radiotelephone

1 Hang up

12 SCREEN MENU MAP

"RADIO" MENU

1 **Change Waveband**

2 AM / FM

1 **Guidance options**

2 TA

2 RDS

1 **Audio settings**

2 Equalizer

3 None

3 Classical

3 Jazz

3 Rock

3 Techno

3 Vocal

2 Bass

2 Treble

2 Loudness

3 Activated / Deactivated

2 Distribution

3 Driver

3 All passengers

2 Le-Ri balance

2 Fr-Re balance

2 Auto. Volume

3 Activated / Deactivated

1 **Update radio list**

"MUSIC" MENU

1 **Change Media**

2 CD

2 BT Streaming

2 USB/iPod

2 AUX

1 **Read mode**

2 Normal

2 Random

2 Random on all media

2 Repetition

1 **Audio settings**

1 **Activate / Deactivate
AUX input**

12 SCREEN MENU MAP

"SETUP" MENU

1 Display configuration

2 Choose colour

3 Harmony

3 Cartography

4 Day mode

4 Night mode

4 Auto Day/Night

2 Adjust luminosity

2 Set date and time

2 Select units

1 Speech synthesis setting

2 Guidance instructions volume

2 Select male voice / Select female voice

1 Select language

2 Français

2 English

2 Italiano

2 Portuguese

2 Español

2 Deutsch

2 Nederlands

2 Turkish

2 Polski

2 Русский

1 Define vehicle parameters*

2 Parking assistance

2 Operation of wipers

3 Engage rear wiper in REVERSE

2 Lighting configuration

3 Duration of guide-me home lighting

3 Directional headlamps

3 Mood lighting

3 Daytime running lamps

1 Trip computer

2 Alert log

2 Status of functions

* The parameters vary according to the vehicle.

FREQUENTLY ASKED QUESTIONS

The following table groups together the answers to the most frequently asked questions concerning your audio system.

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The guidance criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the guidance criteria on the Navigation Menu, "Guidance options" \ "Define calculation criteria".
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
	The POIs have not been downloaded.	Download the POIs from the website: " http://peugeot.navigation.com ".
The risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the Guidance options menu, "Navigation - guidance", "Set parameters for risk areas".
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Traffic info" function in the list of guidance criteria.
I receive a Risk area alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for a Risk area located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk area. Select "On the route" to no longer receive alerts other than guidance or to reduce the time for the announcement.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the "Geographic filter" settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage").
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	<ul style="list-style-type: none"> - Check that your telephone's Bluetooth function is switched on. - Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	A list of compatible Bluetooth mobile telephones is available from the dealer network.
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	
The CD is ejected automatically or is not played by the player.	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.</p> <p>Le CD has been recorded in a format that is not compatible with the player.</p> <p>The CD is protected by an anti-pirating protection system which is not recognised by the audio system.</p>	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: refer to the advice in the "AUDIO" section. - The audio system's CD player does not play DVDs. - Some recorded CDs will not be played by the audio system because they are not of the correct quality.
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

FREQUENTLY ASKED QUESTIONS


QUESTION	ANSWER	SOLUTION
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	
	Some radio stations send other information in place of their name (the title of the song for example).	
The name of the radio station changes.	The system interprets this information as the name of the station.	


FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings for Volume, Bass, Treble, Equalizer and Loudness can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings for (Volume, Bass, Treble, Equalizer, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Fr-Re balance, Le-Ri balance) to the middle position, select the "None", musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the battery charge. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
When I connect my iPhone as telephone and to the USB port at the same time, I am unable to play the music files.	When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.	Disconnect and reconnect to the USB port (the USB function takes priority over streaming).

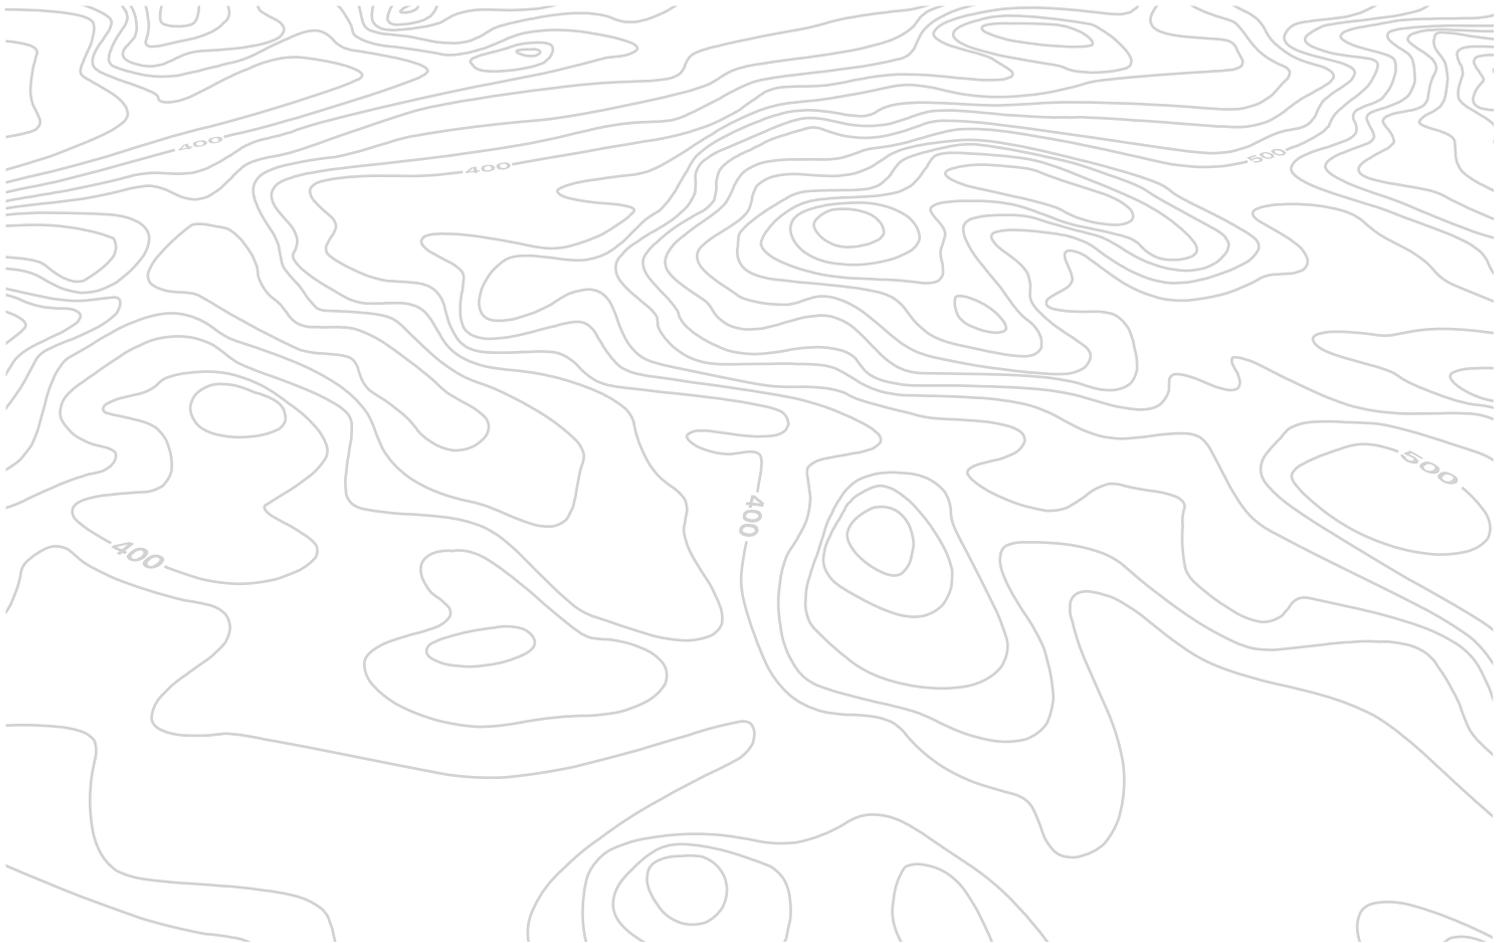

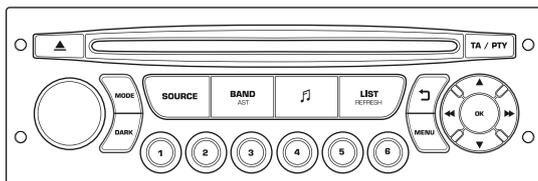

PEUGEOT Connect Sound

AUDIO SYSTEM / BLUETOOTH



Your PEUGEOT Connect Sound is coded in such a way that it will only operate in your vehicle.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the audio equipment may switch off after a few minutes.

CONTENTS

01 First steps	p.	9.64
02 Steering mounted controls	p.	9.65
03 Main menu	p.	9.66
04 Audio	p.	9.67
05 USB player - PEUGEOT Connect USB	p.	9.70
06 Bluetooth	p.	9.73
07 Configuration	p.	9.76
08 Trip computer	p.	9.77
09 Screen menu map	p.	9.78
Frequently asked questions	p.	9.83

01 FIRST STEPS

Select source:
radio, audio CD / MP3 CD, USB,
Jack connection, Streaming, AUX.

Select wavebands
FM1, FM2, FMast and
AM.

Audio settings: front/
rear fader, left/right
balance, bass/treble,
loudness, audio
ambiences.

Display the list of
local stations.
Long press: CD
tracks or MP3 folders
(CD / USB).

Abandon the current
operation.

Eject CD.

Select the screen display
mode:
Date, audio functions, trip
computer, telephone.

On/off, volume setting.

The DARK button changes the screen display
for improved driving comfort at night.
1st press: upper bar only illuminated.
2nd press: black screen.
3rd press: return to standard display.

Buttons 1 to 6:
Select a pre-set radio station.
Long press: pre-set a station.

Display main menu.

TA (Traffic Announcements)
on/off.
Long press: PTY* (radio
Programme Type) mode.

Automatic frequency search
down/up.
Select previous/next CD, MP3
or USB track.

Confirm.

Select next frequency down/up.
Select previous/next MP3 folder.
Select previous/next folder / genre /
artist / playlist (USB).



* Available according to version.

02 STEERING MOUNTED CONTROLS

Radio: select the previous/next pre-set station.

USB: select genre / artist / folder from the classification list.


Select the previous/next item in a menu.

Radio: automatic search for a higher frequency.

CD / MP3 / USB: selection of the next track.

CD / USB: continuous press: fast forwards play.

Move in the list.

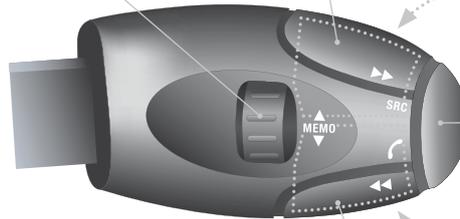

Volume increase.

Change audio source.
Confirm a selection.
Call/end call on the telephone.
Press for more than 2 seconds:
telephone main menu.

Volume decrease.

Mute: press the volume increase and decrease buttons simultaneously.
The sound is restored by pressing one of the two volume buttons.

Radio: automatic search for a lower frequency.

CD / MP3 / USB: selection of the previous track.

CD / USB: continuous press: fast reverse.


Move in the list.

03 MAIN MENU

> MONOCHROME SCREEN C

AUDIO FUNCTIONS:
radio, CD, USB, options.

TELEPHONE:
Bluetooth hands-free,
pairing, management
of a call.

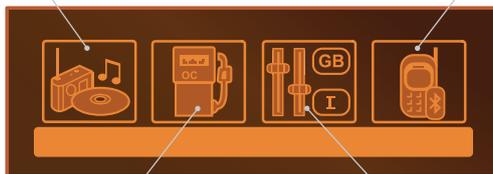

TRIP COMPUTER: entering
of distances, alerts, status of
functions.

**PERSONALISATION-
CONFIGURATION:**
vehicle parameters,
display, languages.

> MONOCHROME SCREEN A








For a detailed global view of the menus available, refer to the "Screen menu map" in this section.

04 AUDIO




RADIO SELECTING A STATION

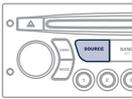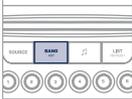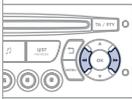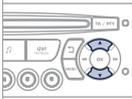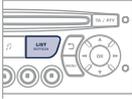1	 Press the SOURCE button several times in succession and select the radio.	
2	 Press the BAND AST button to select a waveband: FM1, FM2, FMast, AM.	
3	 Briefly press one of the buttons to carry out an automatic search of the radio stations.	
4	 Press one of the buttons to carry out a manual search up / down for radio frequencies.	
	 Press the LIST REFRESH button to display the list of stations received locally (30 stations maximum). To update this list, press for more than two seconds.	

The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio system.

RDS

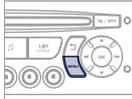1	 Press the MENU button.	
2	 Select AUDIO FUNCTIONS then press OK.	
3	 Select the FM WAVEBAND PREFERENCES function then press OK.	
4	 Select ACTIVATE RDS then press OK. RDS appears on the screen.	
	In radio mode, press OK directly to activate / deactivate RDS mode.	
	The RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. Under conditions of very weak reception, the system may change to a regional station.	

04 AUDIO

RECEIVING TA MESSAGES




The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1

TA / PTY



Press the TA button to activate or deactivate traffic messages.

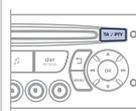

CD PLAYING A CD



Insert circular compact discs only.


Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.

Without pressing the EJECT button, insert a CD in the player, play begins automatically.

1




To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.

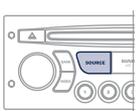

2



Press one of the buttons to select a track on the CD.

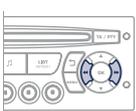


Press the LIST REFRESH button to display the list of tracks on the CD.

3



Press and hold one of the buttons for fast forwards or fast backwards.

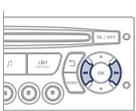

04 AUDIO

MP3 CD PLAYING AN MP3 COMPILATION



Insert an MP3 compilation in the player.

The audio equipment searches for all of the music tracks, which may take anything between a few seconds and several tens of seconds, before play begins.




On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played.

While the CD is being played, the folder structure is not followed. All of the files are displayed on a single level.

1



To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.

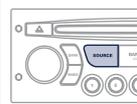


2



Press one of the buttons to select a folder on the CD.

Press one of the buttons to select a track on the CD.

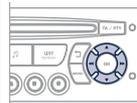


Press the LIST REFRESH button to display the list of directories of the MP3 compilation.

3



Press and hold one of the buttons for fast forward or backward play.

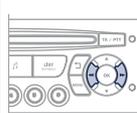

MP3 CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1.2 & 2.5 Audio Layer 3, is an audio compression standard which permits the recording of several tens of music files on a single disc.



In order to be able to play a recorded CDR or CDRW, when recording, the ISO 9660 level 1.2 or Joliet file format is recommended.

If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording format is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet format is recommended.



The audio system will only play files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.



Empty CDs are not recognised and may damage the system.

05 USB PLAYER

USING THE PEUGEOT CONNECT USB

The list of compatible equipment and the compression rates supported are available from PEUGEOT dealers.

1

This unit consists of a USB port and an auxiliary Jack socket*. The audio files are transmitted from a portable device - digital player or a USB memory stick - to your PEUGEOT Connect Sound (RD5) and heard via the vehicle's speakers.



2

USB memory stick (1.1, 1.2 and 2.0) or Apple® player of generation 5 or later:

- USB memory sticks should be formatted FAT or FAT 32 (NTFS not supported),
- the Apple® player lead is essential,
- navigation through the file database is also possible by means of the steering mounted controls.



3

Other Apple® players of earlier generations and players using the MTP protocol*:

- play via Jack-Jack lead only (not supplied),
- navigation through the file database is from the portable device.



CONNECTING A USB MEMORY STICK

1

Connect the memory stick to the port, directly or using a lead. If the audio equipment is switched on, the USB source is detected as soon as it is connected. Play begins automatically after a delay which depends on the capacity of the USB memory stick.



The file formats supported are .mp3 (mpeg1 layer 3 only) and .wma (standard 9 only, 128 kbits/sec compression).

Certain playlist formats are supported (.m3u, ...)

On reconnection of the previous memory stick used, play is resumed automatically with the last track played.

!

The system puts together playlists (temporary memory) created over a period which depends on the capacity of the USB device. The other sources are available during this time.

The playlists are updated each time the ignition is switched off or each time a USB memory stick is connected.

When connecting for the first time, the classification suggested is by folder. When you reconnect, the classification selected previously is retained.

* According to vehicle.

05 USB PLAYER

USING THE PEUGEOT CONNECT USB

2


Press and hold LIST to display the different classifications.
Select by Folder / Artist / Genre / Playlist, press OK to select the classification required, then press OK again to confirm.



- by Folder: all folders containing audio files recognised on the peripheral device.
- by Artist: all of the artist names defined in the ID3 Tags, classified in alphabetical order.
- by Genre: all of the genres defined in the ID3 Tags.
- by Playlist: in accordance with the playlists recorded on the USB device.



Press LIST briefly to display the previously selected classification.
Navigate through the list using the left/right and up/down buttons.
Confirm the selection by pressing OK.

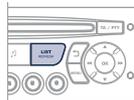

3




Press one of these buttons to gain access to the previous / next track on the classification list currently being played.
Press and hold one of the buttons for fast forward or backward play.



4



Press one of these buttons to gain access to the previous / next Genre, Folder, Artist or Playlist on the classification list currently being played.

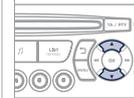

CONNECTING AN APPLE® PLAYER VIA THE USB PORT

1

The lists available are Artist, Genre and Playlist (as defined in the Apple® player).
Selection and Navigation are described in steps 1 to 4 above.



Do not connect a hard disk or USB connection device other than audio equipment to the USB port. This could damage your installation.

05 USB PLAYER

USING THE AUXILIARY INPUT (AUX)

JACK socket or USB port (according to vehicle)




The auxiliary input, JACK or USB, allows the connection of a portable device (MP3 player...).



Do not connect a device to both the JACK socket and the USB port at the same time.

1


Connect the portable device (MP3 player...) to the JACK socket or to the USB port, using a suitable cable (not supplied).

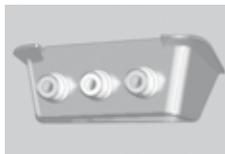

2



Press the SOURCE button several times in succession and select AUX.

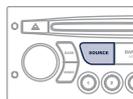

ADJUSTING THE VOLUME OF THE AUXILIARY SOURCE

1


First adjust the volume of your portable device.



2



Then adjust the volume of your audio system.

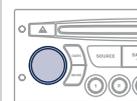

The display and control is via the portable device.



06 BLUETOOTH



BLUETOOTH TELEPHONE SCREEN C

(Available according to model and version)

The services offered depend on the network, the SIM card and the compatibility of the Bluetooth equipment used.

Consult your telephone's manual and your operator to find out which services are available to you.

PAIRING A TELEPHONE / FIRST CONNECTION




! For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio equipment must be carried out with the vehicle stationary and the ignition on.

☀ Go to www.peugeot.co.uk for more information (compatibility, more help, ...).

1 Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).




2  Press the MENU button.

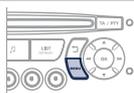

3  In the menu, select:

- Bluetooth telephone function - Audio
- Bluetooth configuration
- Perform a Bluetooth search

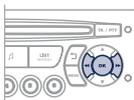

4 A window is displayed with a message that a search is in progress.

5 The first 4 telephones recognised are displayed in this window.

! The TELEPHONE menu permits access to the following functions in particular: Directory*, Call list, Pairing management.

* If your telephone is fully compatible.

6 Select the telephone to be connected from the list. Only one telephone can be connected at a time.

7 A virtual keypad is displayed in the screen: enter a code with at least 4 digits. Confirm by pressing OK.



8 A message is displayed in the screen of the telephone chosen. To accept the pairing, enter the same code on the telephone, then confirm with OK.

If pairing fails, the number of attempts is not limited.



9 A message that the pairing has been successful appears in the screen.

i The automatic connection authorised is only active after the telephone has been configured. The directory and the call list can be accessed after the synchronisation period.


06 BLUETOOTH



RECEIVING A CALL

- 1 An incoming call is announced by a ring and a superimposed display in the vehicle's screen.

- 2  Select the YES tab on the display using the buttons and confirm by pressing OK.

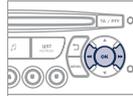

Press this button to accept the call.



MAKING A CALL

- 1 From the Bluetooth telephone function Audio menu, select Manage the telephone call then Call, Call list or Directory.

- 2 Press this button for more than two seconds for access to your directory, then navigate with the thumb wheel.
Or
To dial a number, use your telephone's keypad, with the vehicle stationary.



ENDING A CALL

- 1 During a call, press this button for more than 2 seconds.
Confirm with OK to end the call.



06 BLUETOOTH



BLUETOOTH AUDIO STREAMING*

!

Wireless transmission of the telephone's music files via the audio equipment. The telephone must be able to manage the appropriate Bluetooth profiles (Profiles A2DP / AVRCP).

1

Initiate the pairing between the telephone and the vehicle. This pairing can be initiated from the vehicle's telephone function menu or via the telephone's keypad. See steps 1 to 9 on the previous pages. During the pairing phase, the vehicle must be stationary with the key in the ignition.




2

Select the telephone to be connected from the telephone function menu.
The audio system connects to a newly paired telephone automatically.

3



Activate the streaming source by pressing the SOURCE button**. The tracks to be played can be controlled as usual via the buttons on the audio system control panel and the steering mounted controls***. The contextual information can be displayed on the screen.

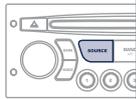









* Depending on the compatibility of the telephone.

** In certain cases, playing of the Audio files must be initiated from the keypad.

*** If the telephone supports the function.

07 CONFIGURATION

SETTING THE DATE AND TIME SCREEN C
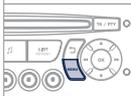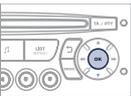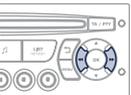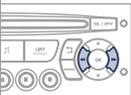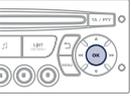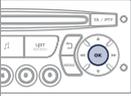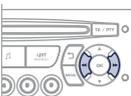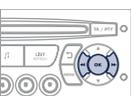
<p>1</p>  <p>Press the MENU button.</p>		<p>5</p>  <p>Press to confirm the selection.</p>	
<p>2</p>  <p>Using the arrows, select PERSONALISATION CONFIGURATION.</p> 		<p>6</p>  <p>Using the arrows, select ADJUST DATE AND TIME.</p>	
<p>3</p>  <p>Press to confirm the selection.</p>		<p>7</p>  <p>Press to confirm the selection.</p>	
<p>4</p>  <p>Using the arrows, select DISPLAY CONFIGURATION.</p>		<p>8</p>  <p>Adjust the settings one by one confirming by pressing the OK button. Next select the OK tab on the screen then confirm.</p>	

08 TRIP COMPUTER

VEHICLE DIAGNOSTICS



Each press of the button, located at the end of the wiper stalk, displays the different trip computer information in succession, depending on the screen.



- the "vehicle" tab with:
 - the range, the current fuel consumption and the distance remaining to the destination,
- the "1" tab (trip 1) with:
 - the average speed, the average consumption and the distance travelled calculated over trip "1",
- the "2" tab (trip 2) with the same information for a second trip.



Zero reset

When the required trip is displayed, press the control for more than two seconds.

A FEW DEFINITIONS

Range: displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 10 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a PEUGEOT dealer.

Current fuel consumption: only calculated and displayed above 20 mph (30 km/h).

Average fuel consumption: this is the average fuel consumption since the last trip computer zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

09 SCREEN MENU MAP

01:17 20°
27 MAY 2013

MONOCHROME A

MAIN FUNCTION

- 1
- 2 OPTION A
- 3 OPTION A1
- 3 OPTION A2
- 2 OPTION B...

1 RADIO-CD

- 2 RDS SEARCH
- 2 REG MODE
- 2 CD REPEAT
- 2 RANDOM PLAY

1 VEHICLE CONFIG*

- 2 REV WIPE ACT
- 2 GUIDE LAMPS

* The parameters vary according to vehicle.

1 OPTIONS

- 2 DIAGNOSTICS
- 3 CONSULT
- 3 ABANDON

09 SCREEN MENU MAP

01:17 20°
27 MAY 2013

1 UNITS

2 TEMPERATURE: °CELSIUS / °FAHRENHEIT

2 FUEL CONSUMPTION:
2 KM/L - L/100 - MPG

1 DISPLAY ADJUST

2 YEAR

2 MONTH

2 DATE

2 HOUR

2 MINUTES

2 12 H/24 H MODE

1 LANGUAGE

2 FRANCAIS

2 ITALIANO

2 NEDERLANDS

2 PORTUGUES

2 PORTUGUES-BRASIL

2 DEUTSCH

2 ENGLISH

2 ESPANOL

09 SCREEN MENU MAP



MONOCHROME C



Press the OK dial for access to short-cut menus according to the display on the screen:



RADIO

- 1 activate / deactivate RDS
- 1 activate / deactivate REG mode
- 1 activate / deactivate radiotext

CD / MP3 CD

- 1 activate / deactivate Intro
- 1 activate / deactivate track repeat (the entire current CD for CD, the entire current folder for MP3 CD)
- 1 activate / deactivate random play (the entire current CD for CD, the entire current folder for MP3 CD)

USB

- 1 activate / deactivate track repeat (of the current folder / artist / genre / playlist)
- 1 activate / deactivate random play (of the current folder / artist / genre / playlist)

09 SCREEN MENU MAP



MONOCHROME C

Pressing the MENU button displays:



1 AUDIO FUNCTIONS

2 FM BAND PREFERENCES

3 alternative frequencies (RDS)

4 activate / deactivate

3 regional mode (REG)

4 activate / deactivate

3 radio-text information (RDTXT)

4 activate / deactivate

2 PLAY MODES

3 album repeat (RPT)

4 activate / deactivate

3 track random play (RDM)

4 activate / deactivate



1 TRIP COMPUTER

2 ENTER DISTANCE TO DESTINATION

3 Distance: x miles

2 ALERT LOG

3 Diagnostics

2 STATUS OF THE FUNCTIONS*

3 Functions activated or deactivated

* The parameters vary according to vehicle.

09 SCREEN MENU MAP



1 PERSONALISATION-CONFIGURATION

2 DEFINE THE VEHICLE PARAMETERS*

2 DISPLAY CONFIGURATION

3 video brightness adjustment

4 normal video

4 inverse video

4 brightness (- +) adjustment

3 date and time adjustment

4 day/month/year adjustment

4 hour/minute adjustment

4 choice of 12 h / 24 h mode

3 choice of units

4 l/100 km - mpg - km/l

4 °Celsius / °Fahrenheit

2 CHOICE OF LANGUAGE



1 BLUETOOTH TELEPHONE

2 BLUETOOTH CONFIGURATION

3 Connect/Disconnect a device

3 Telephone function

3 Audio Streaming function

4 Consult the paired device

4 Delete a paired device

4 Perform a Bluetooth search

2 CALL

3 Calls list

4 Directory

2 MANAGE THE TELEPHONE CALL

3 Terminate the current call

3 Activate private mode

* The parameters vary according to vehicle.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - The audio equipment's CD player does not play DVDs. - Due to their quality level, certain writeable CDs will not be played by the audio system.
The message "USB peripheral error" is displayed on the screen.	The battery of the peripheral may not be sufficiently charged.	Recharge the battery of the peripheral device.
The Bluetooth connection is cut.	The USB memory stick is not recognised. The memory stick may be corrupt.	Reformat the memory stick.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiences) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station is not part of the regional traffic information network.	Tune to a radio station which broadcasts traffic information.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio equipment switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.