

Bou'G! ^ 4 - c c V



PEUGEOT 508



## 7-inch touch screen

### GPS satellite navigation - Multimedia audio - Bluetooth® telephone



	Contents
First steps	278
Steering mounted controls	280
Menus	281
Media	282
Radio	288
DAB (Digital Audio Broadcasting) radio	290
Music	292
Navigation	296
Navigation - Guidance	304
Traffic	308
Configuration	310
Connected services	318
PEUGEOT Connect Apps	319
Telephone	320
Frequently asked questions	328

**i** The system is protected in such a way that it will only operate in your vehicle.

**!** As a safety measure, the driver should only carry out operations which require prolonged attention while the vehicle is stationary. The display of an energy economy mode message signals that electrical systems operating are going into standby. Refer to the energy economy mode section.


## First steps

Use the buttons below the touch screen for access to the menus, then press the virtual buttons in the touch screen.


Each menu is displayed in one or two pages (primary page and secondary page).



**i** In very hot conditions, the system may go into stand-by (screen and sound completely off) for a minimum period of 5 minutes.

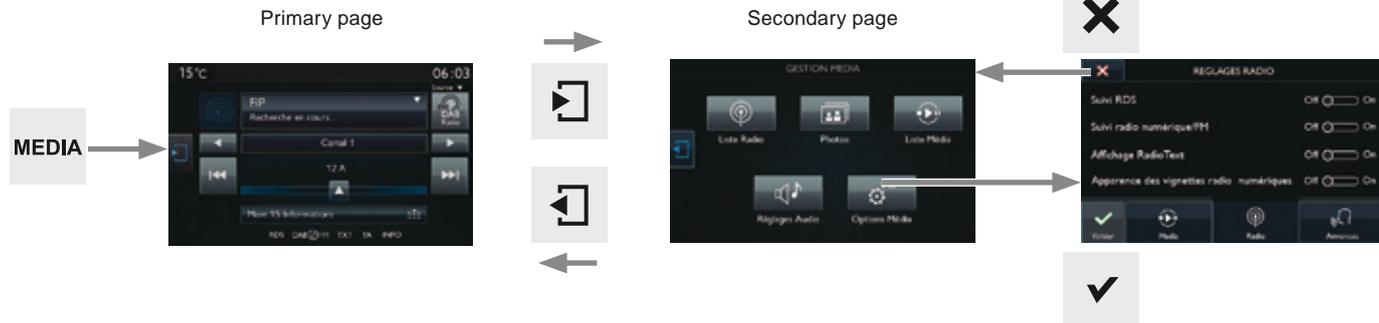


Shortcuts: using virtual buttons in the top band of the touch screen, it is possible to go directly to the choice of audio source, the list of stations (or titles depending on the source) or to temperature adjustment.

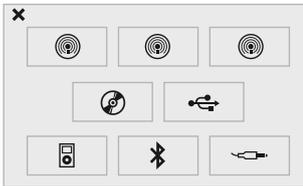

Selecting the audio source (depending on version):

- "FM" / "DAB" / "AM" radio wavebands.
- "USB" memory stick.
- CD player in the facade.
- Telephone connected by Bluetooth\* and by Bluetooth\* audio streaming.
- Media player connected to the auxiliary socket (jack, cable not supplied).

\* Depending on equipment.

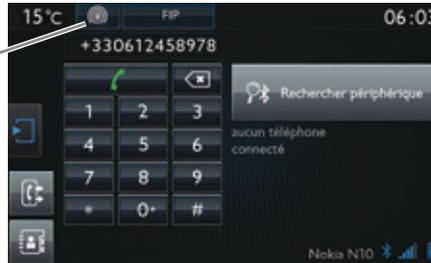

With the engine running, press to mute the sound.  
With the ignition off, press to switch the system on.




Volume adjustment (each source is independent, including Traffic announcements (TA) and navigation instructions).

**i** The screen is of the "resistive" type, it is necessary to press firmly, particularly for "flick" gestures (scrolling through a list, moving the map...). A simple wipe will not be enough. Pressing with more than one finger is not recognised. The screen can be used when wearing gloves. This technology allows use at all temperatures.

**!** To clean the screen, use a soft non-abrasive cloth (spectacles cloth) without any additional product. Do not use pointed objects on the screen. Do not touch the screen with wet hands.

**i** In very hot conditions, the volume may be limited to protect the system. The return to normal takes place when the temperature in the passenger compartment drops.

# Steering mounted controls

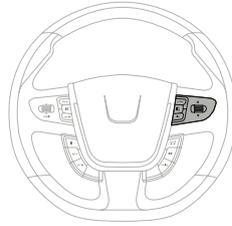

Press: open the instrument panel screen menu.  
Rotate: navigate in the instrument panel screen menu.



Increase volume.



Mute/ restore sound.



Reduce volume.



Media: change the multimedia source.

Telephone: start call.

Call in progress: open the telephone menu (End call, Secret mode, Hands-free mode).

Telephone, press and hold: reject an incoming call, end a call; other than call in progress, open the telephone menu.



Radio, rotate: automatic search for the previous / next station.  
Media, rotate: previous / next track.  
Press: confirm a selection.



Display the carousel of menus.

**LIST**

Radio: display the list of stations.  
Media: display the list of tracks.  
Radio, press and hold: update the list of stations received.

# Menus

DRIVE


## Driving assistance



Access to the trip computer.  
Activate, deactivate, adjust settings for certain vehicle functions.

MEDIA

## Media

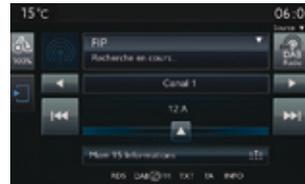

Select an audio source, a radio station, display photographs.

NAV

## Navigation


(Depending on equipment)



Enter navigation settings and choose a destination.

SETUP

## Configuration

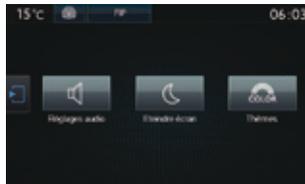

Audio settings (balance, ambience...), color scheme, brightness of the instruments, display (language, units, time, ...).

WEB

## Connected services


(Depending on equipment)



PEUGEOT CONNECT APPS  
Connect to an applications portal to facilitate, make safe and personalise journeys by means of a connection key available on subscription from a PEUGEOT dealer.


TEL

## Telephone

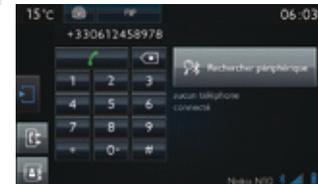


Connect a telephone by Bluetooth®.


# Media

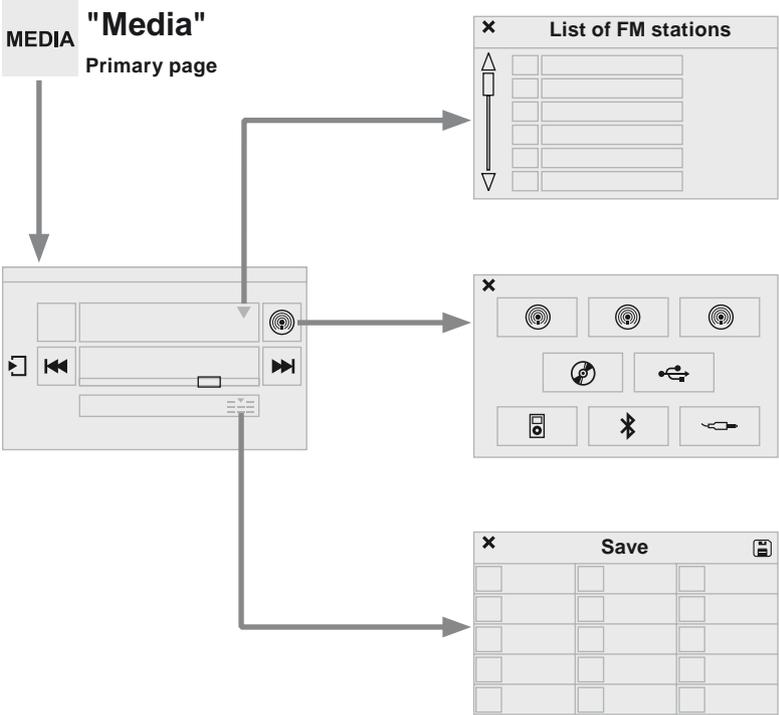

Level 1		Level 2		Comments
 	<p><b>Media</b> ↓ <b>List</b></p>		<p><b>List of FM stations</b></p>	<p>Press on a radio station to select it.</p>
 	<p><b>Media</b> ↓ <b>Source</b></p>	       	<p><b>FM Radio</b></p> <p><b>DAB Radio</b></p> <p><b>AM Radio</b></p> <p><b>CD</b></p> <p><b>USB</b></p> <p><b>iPod</b></p> <p><b>Bluetooth</b></p> <p><b>AUX</b></p>	<p>Select change of source.</p>
 	<p><b>Media</b> ↓ <b>Save</b></p>			<p>Press on an empty location then on "Save".</p>

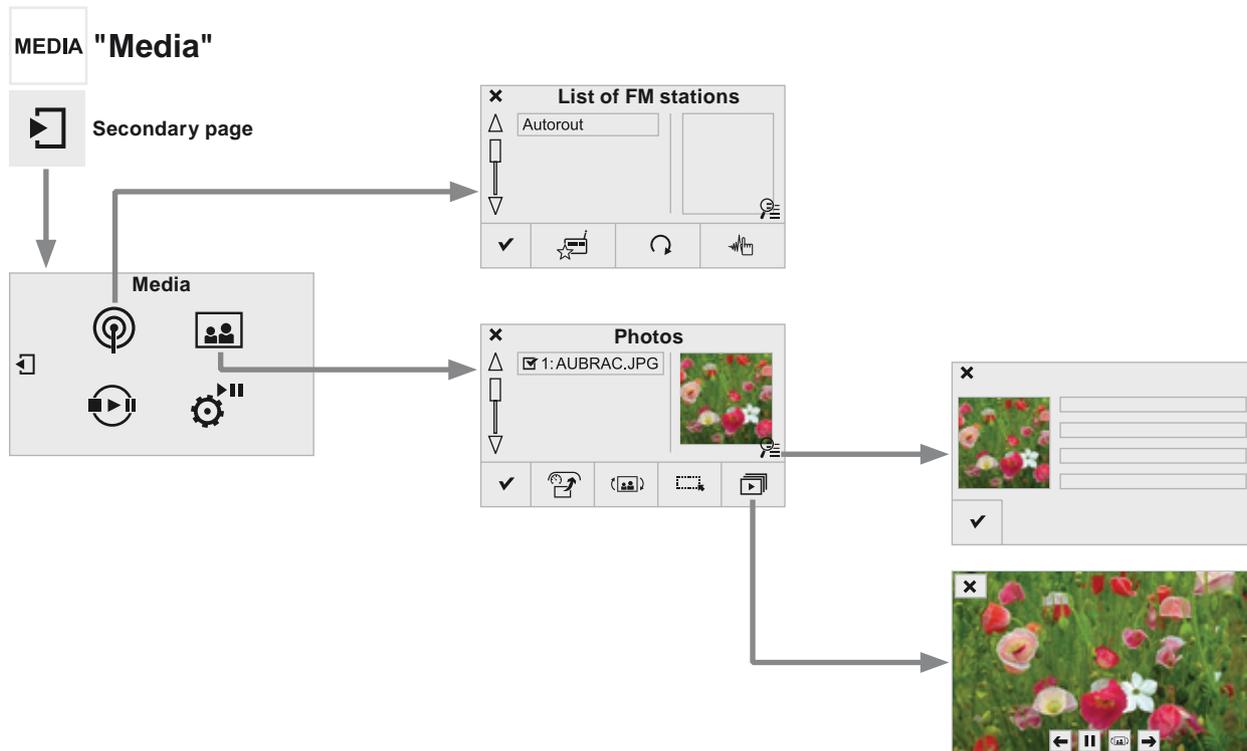

Level 1		Level 2		Level 3		Comments
  	Media	 Save				Press on a radio station to select it.
	↓	 Update list				Update the list of stations received.
	Secondary page	 Frequency				Enter the desired radio frequency.
	↓	 Confirm				Save the settings.
  	Media	 Page selection				Display the selected photo full screen.
	↓	 Rotate				Rotate the photo 90°.
	Secondary page	 Select all				Select all the photos in the list. Press again to deselect.
	↓	 Slideshow	 Previous photo.		Display the photos in sequence, full screen.	
	Photos		 Pause / Play.			
			 Next photo.			
		 Confirm				Save the settings.

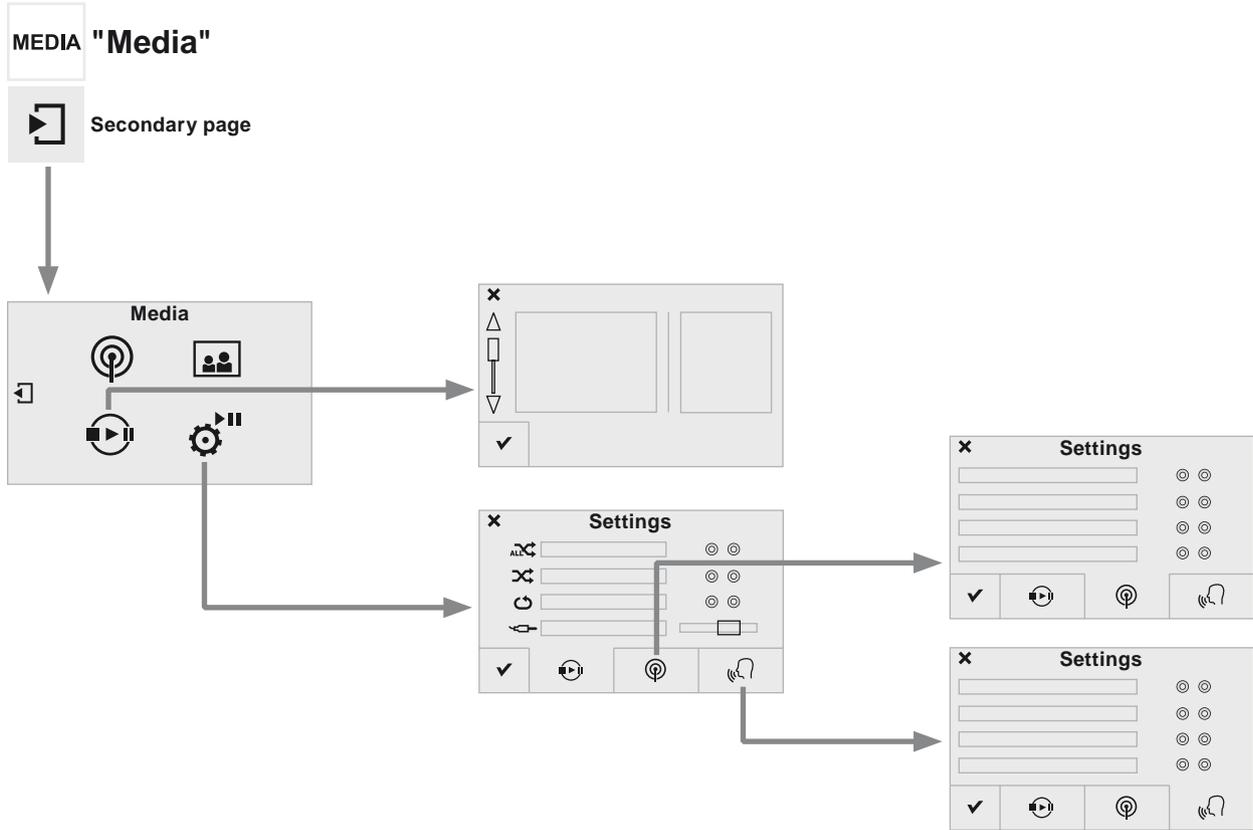

Level 1		Level 2		Level 3		Comments
MEDIA  	Media ↓ Secondary page ↓ Media list					Presentation of the last media used.
MEDIA  	Media ↓ Secondary page ↓ Settings		Media ↓ Settings	 Shuffle (all tracks)	Choose the play settings.	
				 Shuffle (current album)		
				 Repeat		
				 Aux. amplification		
			Radio ↓ Settings		<input type="checkbox"/> RDS options	Activate or deactivate the options.
					<input type="checkbox"/> DAB/FM station tracking	
					<input type="checkbox"/> Display Radio Text	
					<input type="checkbox"/> Digital radio slideshow display	
			Announcements ↓ Settings		<input type="checkbox"/> Traffic announcements (TA)	Activate or deactivate the options.
					<input type="checkbox"/> Weather	
					<input type="checkbox"/> Sport - Programme info	
					<input type="checkbox"/> Alert settings	
	Confirm				Save the settings.	

# Radio

## Selecting a station

**MEDIA** Press on **Media** to display the primary page.

or

**MEDIA** Press on **Media** to display the primary page then go to the secondary page.



 Select "**List**" in the primary page.

or

 Select "**Radio list**" in the secondary page.

 Select a radio station from the list offered.

 Select "**Update list**" to refresh the list.

OR

**MEDIA** Press on **Media** to display the primary page then select "**Save**".



 Select a preset radio station in the list.

 If necessary, select change of source.

 Select "**FM Radio**" or "**AM Radio**".



 
 The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

## Changing a radio frequency

**MEDIA** Press on **Media** to display the primary page.



### By automatic frequency search



Press  or  to move the cursor for an automatic search down or up for a radio frequency.

OR

**MEDIA** Press on **Media** to display the primary page then press on the secondary page.



 Press on "**Enter frequency**" to display the primary page then press on the secondary page.

**THEN**

Select the change of source.



Select "**FM Radio**" or "**AM Radio**".

**OR**

Enter the frequency in full (e.g.: 92.10 MHz) using the keypad then "**Confirm**".

FRANCE BLEU

**By alphabetical list**

Press the current radio band then choose the radio station from the list offered.

**Preset a station**

Select a radio station or frequency (refer to the corresponding section).



Press on "**Save**".

Mémoire 1

Select a number in the list to preset the previously chosen radio station.

A long press on a number presets (memorises) the station.

Or



A press on this button presets all of the stations one after the other.

**Recall preset stations**

**MEDIA**

Press on **Media** to display the primary page then select "**Save**".

**Activate/ Deactivate RDS**

**MEDIA** Press on **Media** to display the primary page then go to the secondary page.



Select "**Settings**".



Select "**Radio**".

Off  On

Activate/deactivate "**RDS options**".



RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100% of the territory. This explains the loss of reception of the station during a journey.

# DAB (Digital Audio Broadcasting) radio

15°C 06:03

Any thumbnail broadcast by the station.

Secondary page.

Previous "Multiplex". Previous radio station.

Display the name and number of the multiplex service being used.

Short-cut: access to the choice of audio source and the list of stations (or titles, depending on the source).

Select the radio station.

Select the audio source. Display the "DAB" band.

Display of "Radiotext" for the current station.

Next "Multiplex". Next radio station.

Preset stations, buttons 1 to 15

Short press: select the preset radio station. Long press: preset a radio station.

Display of options: if active but not available, the display will be greyed out, if active and available, the display will be blank.

Display of the name of the current station.

Source

FIP

Recherche en cours...

Canal 1

12 A

Mem 15 Informations

RDS DAB FM TXT TA INFO

**i** If the "DAB" radio station being listened to is not available on "FM", the "DAB FM" option is greyed out.

**!** Journaline® is a text-based information service designed for digital radio systems. It provides text-based information structured around topics and sub-topics. This service is available from the "LIST OF DAB STATIONS" page.



## DAB (Digital Audio Broadcasting) Digital radio

**!** Digital radio provides higher quality reception and also the graphical display of current information on the radio station being listened to. Select "List" in the primary page.  
The range of multiplexes available is displayed in alphabetical order.

**MEDIA** Press on **Media** to display the primary page.

 Select change of source.

 Select "**DAB Radio**".

 Select "**List**" in the primary page.

or

 Select "**Radio list**" in the secondary page.

Select the radio station from the list offered.

## Digital radio - DAB / FM auto tracking

**i** "DAB" does not cover 100% of the territory.  
When the digital radio signal is weak, "DAB/FM station tracking" allows you to continue listening to the same station, by automatically switching to the corresponding "FM" analogue station (if there is one).

**MEDIA** Press **Media** to display the primary page then press on the secondary page.



 Select "**Settings**".

 Select "**Radio**".


Off  On Select "**Digital/FM auto tracking**" then "**Confirm**".

**i** If "DAB/FM station tracking" is activated, there is a difference of a few seconds when the system switches to "FM" analogue radio with sometimes a variation in volume.  
When the digital signal is restored, the system automatically changes back to "DAB".

**!** If the "DAB" station being listened to is not available on "FM" ("**DAB/FM**" option greyed out), or "DAB/FM station tracking" is not activated, the sound will cut out while the digital signal is too weak.

# Music

## USB player

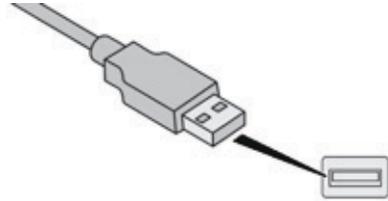

Insert the USB memory stick into the USB port or connect the USB device to the USB port using a suitable cable (not supplied).

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick. The lists are memorised: if they are not modified, the subsequent loading time will be shorter.

## Auxiliary (AUX) socket



Connect the portable device (MP3 player...) to the auxiliary Jack socket using an audio cable (not supplied).

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.

Display and management of the controls are via the portable device.


## CD player

Insert the CD in the player.

## Selecting the source

**MEDIA** Press on **Media** to display the primary page.

 Select change of source.  
FM

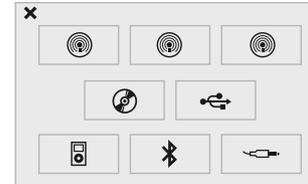

Choose the source.

**SRC**  The steering mounted **SRC** (source) button can be used to go to the next media source, available if the source is active.

 Press **OK** to confirm the selection.

## Information and advice

The audio equipment will only play audio files with ".wma, .aac, .flac, .ogg and. mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode. No other type of file (.mp4, ...) can be played. ".wma" files must be of the standard wma 9 type. The sampling rates supported are 32, 44 and 48 KHz.

It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.

In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.

Use only USB memory sticks formatted FAT 32 (file allocation table).

**!** The system does not support the simultaneous connection of two identical devices (two memory sticks, two Apple® players) but it is possible to connect one memory stick and one Apple® player at the same time.

**i** It is recommended that the USB cable for the portable device is used.

**!** The system supports USB mass storage devices, BlackBerry® devices or Apple® players via USB ports. The adaptor cable not supplied. Control of the peripheral device is with the audio system controls. Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).

## Bluetooth® audio streaming

Streaming allows audio files on your telephone to be played through the vehicle's speakers.


Connect the telephone: see the "**Telephone**" section, then "**Bluetooth**".  
Choose the "**Audio**" or "**All**" profile.

If play does not start automatically, it may be necessary to start the audio playback from the telephone.

Control is from the peripheral device or by using the audio system buttons.

- ! Once connected in streaming mode, the telephone is considered to be a media source.  
It is recommended that you activate "**Repeat**" on the Bluetooth peripheral.

## Connecting Apple® players

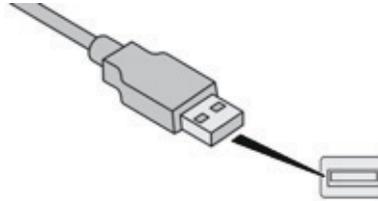


Connect the Apple® player to the USB port using a suitable cable (not supplied).  
Play starts automatically.


Control is via the audio system.

- i The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).  
The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.



The version of software in the audio system may not be compatible with the generation of your Apple® player.

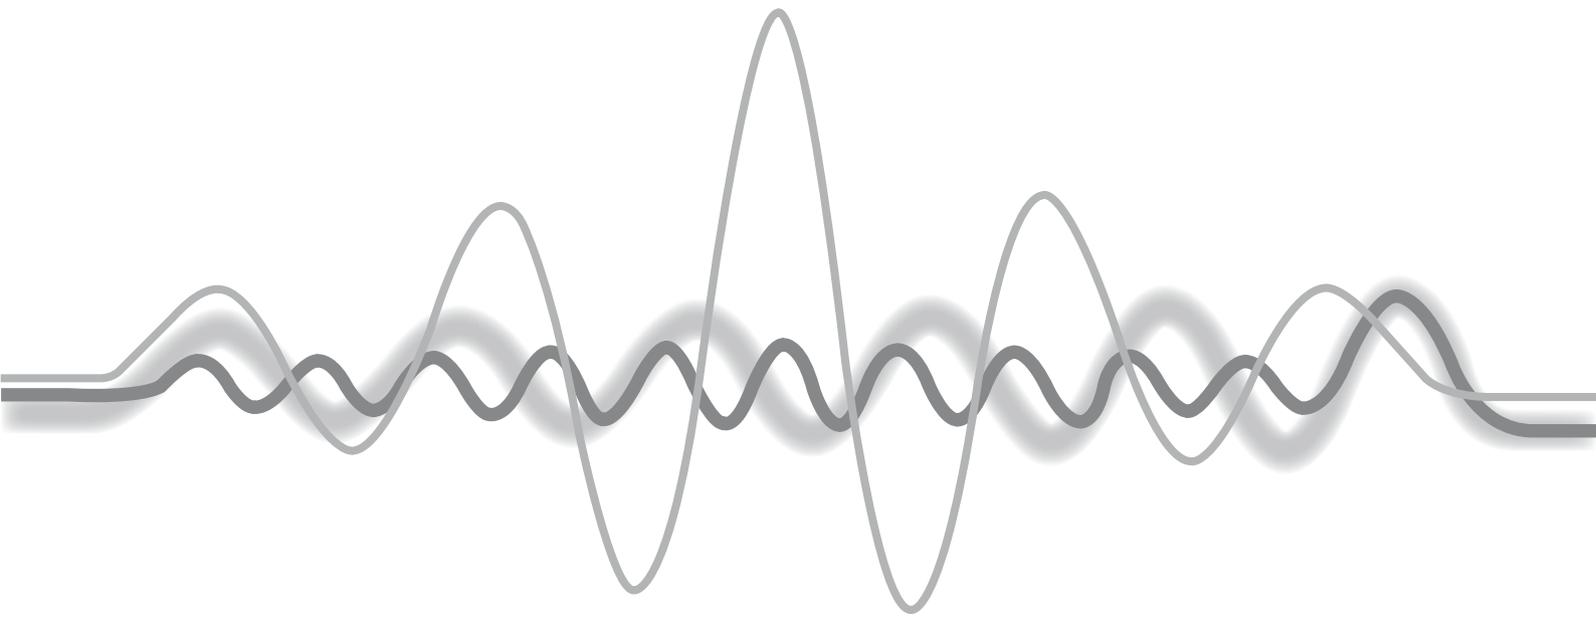

# Navigation

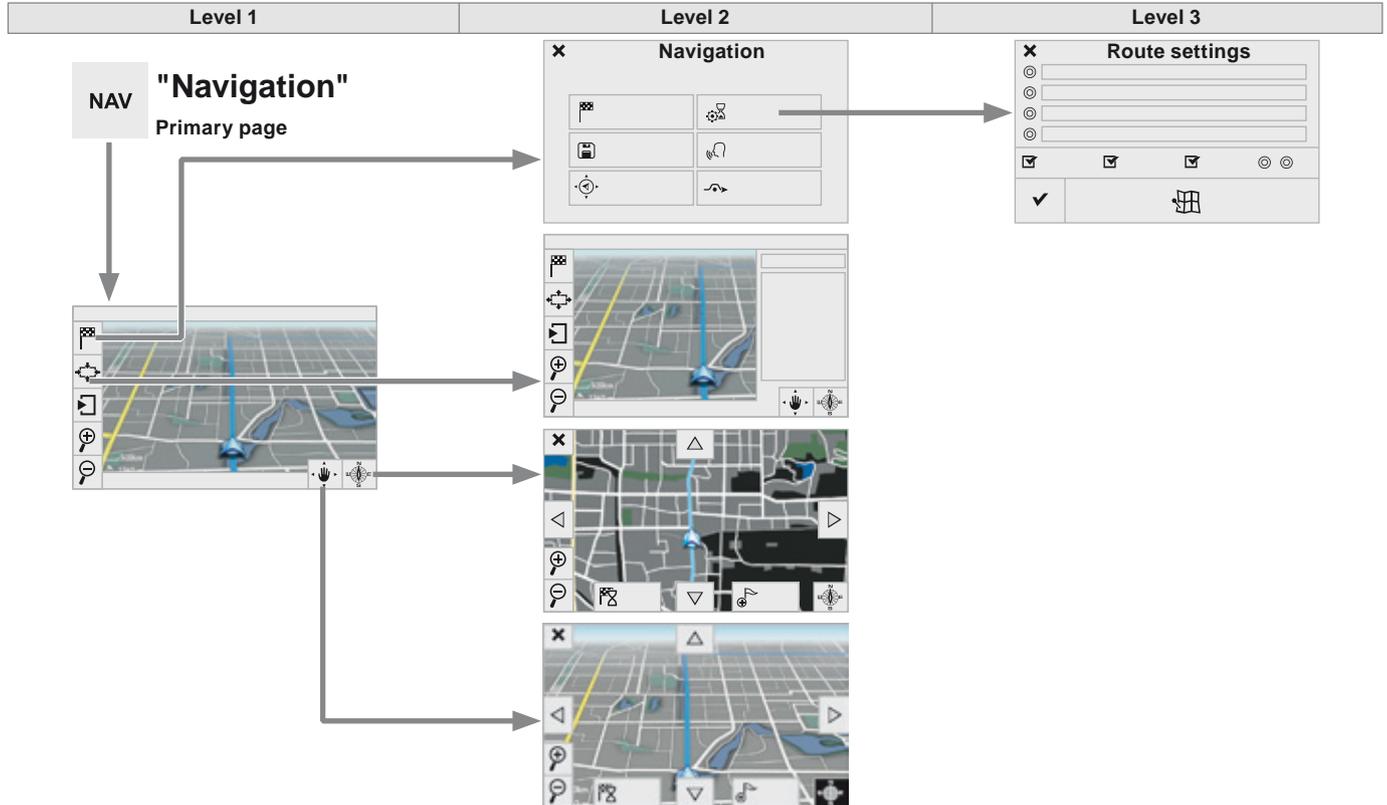

Level 1	Level 2		Level 3		Comments
 Navigation ↓ Settings Navigation		<b>Enter destination</b>			Display recent destinations.
		<b>Route settings</b>		Fastest	Choose the navigation criteria. The map displays the route chosen according to these criteria.
				Shortest	
				Time/distance	
				Ecological	
				Tolls	
				Ferries	
				Strict-Close	
				Show route on map	
			Confirm	Save the options.	
	<b>Save</b>			Save the current address.	
	<b>Stop navigation</b>			Delete the navigation information.	
	<b>Voice</b>			Choose the volume for voice and announcement of street names.	
	<b>Diversion</b>			Detour from your initial route by a certain distance.	
 Navigation				Display in text mode	
				Zoom in.	
				Zoom out.	
					Display in full screen mode. Use the arrows to move the map.
				Switch to 2D map.	

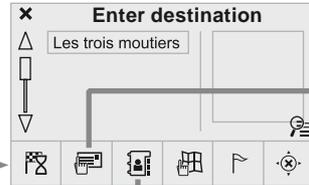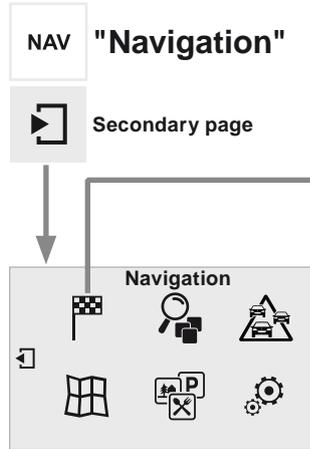

For managing contacts and their addresses, refer to the **"Telephone"** section.




To use the telephone functions, refer to the **"Telephone"** section.

Level 1		Level 2		Level 3		Comments
  	<p style="text-align: center;"> <b>Navigation</b>  ↓  <b>Secondary page</b>  ↓  <b>Enter destination</b> </p>		<b>Address</b>	 Current loc.	Address settings	
				 Point of interest		
				 Town center		
				 Save	Save the current address.	
				 Add waypoint	Add a waypoint to the route.	
				 Navigate to	Press to calculate the route.	
			<b>Contacts</b>	 Addresses	Select a contact then calculate the route.	
				 Add contact		
				 Add waypoint		
				 Search for contact		
 Navigate to						
	<b>On the map</b>			Display the map and zoom to view the roads.		
	<b>Itinerary</b>			Create, add or delete a waypoint or view the itinerary.		
	<b>Stop</b>			Delete navigation information.		
	<b>Navigate to</b>			Press to calculate the route.		



Level 1		Level 2		Level 3	Comments
  	<b>Navigation</b> ↓ <b>Secondary page</b> ↓ <b>Search for POI</b>	 <b>All POIs</b>		List of categories available. After choosing the category, select the points of interest.	
		 <b>Motor</b>			
		 <b>Dining/hotels</b>			
		 <b>Personal</b>			
		 <b>By name</b>			
		<input checked="" type="checkbox"/> <b>Search</b>		Save the settings.	
  	<b>Navigation</b> ↓ <b>Secondary page</b> ↓ <b>Show POIs</b>	 <b>Select all</b>		Choose the display settings for POIs.	
		 <b>Delete</b>			
		 <b>Import POIs</b>			
		<input checked="" type="checkbox"/> <b>Confirm</b>		Save the options.	

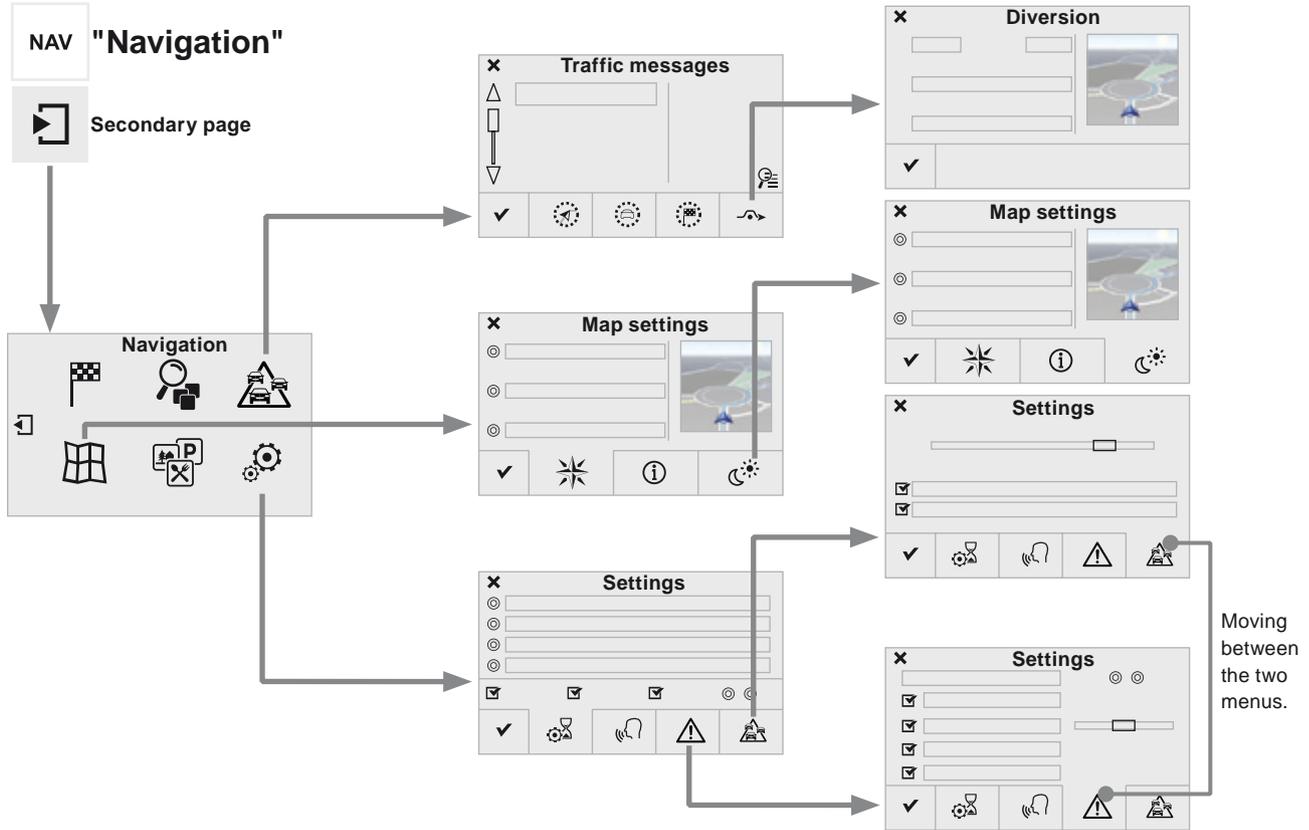

Level 1		Level 2		Level 3		Comments	
  	<b>Navigation</b> ↓ <b>Secondary page</b> ↓ <b>Traffic messages</b>	 <b>On the route</b>				Settings for the choice of messages and the filter radius.	
		 <b>Around vehicle</b>					
		 <b>Near destination</b>					
		 <b>Detour</b>	<input type="radio"/>	Detour over a distance	<input type="radio"/>		Recalculate route
		<input checked="" type="checkbox"/> <b>Finish</b>					
  	<b>Navigation</b> ↓ <b>Secondary page</b> ↓ <b>Map settings</b>	 <b>Orientation</b>		<input type="radio"/>	Flat view north heading	Choose the display and orientation of the map.	
				<input type="radio"/>	Flat view vehicle heading		
				<input type="radio"/>	Perspective view		
		 <b>Maps</b>					
		 <b>Aspect</b>	<input type="radio"/>	"Day" map colour	<input type="radio"/>		"Night" map colour
			<input type="radio"/>	Automatic day/night			
<input checked="" type="checkbox"/> <b>Confirm</b>					Save the settings.		
  	<b>Navigation</b> ↓ <b>Secondary page</b> ↓ <b>Settings</b>	 <b>Route settings</b>				Enter settings and choose the volume for the voice and announcement of street names.	
		 <b>Voice</b>					
		 <b>Alarm!</b>					
		 <b>Traffic options</b>					
		<input checked="" type="checkbox"/> <b>Confirm</b>					Save your selections.

# Navigation - Guidance

## Choosing a new destination

 
### Towards a new destination

 Press on **Navigation** to display the primary page.

 Press on the secondary page.

 Select "**Enter destination**".

 Select "**Address**".

 Select the "**Country:**" from the list offered, then in the same way the "**City:**" or its post code, the "**Road:**", the "**N°:**". Confirm each time.

 Select "**Save**" to save the address entered as a contact entry. The system allows up to 200 entries.

 Select "**Navigate to**".

 Choose the navigation criteria: "**Fastest**" or "**Shortest**" or "**Time/distance**" or "**Ecological**".

 Choose the restriction criteria: "**Tolls**", "**Ferries**", "**Traffic**", "**Strict**", "**Close**".

 Select "**Confirm**".

Or

 Press on "**Show route on map**" to start navigation.

 To delete navigation information, press on "**Settings**".

 Press on "**Stop navigation**".

 To resume navigation press on "**Settings**".

 Press on "**Resume guidance**".

## Towards a recent destination

**NAV**

Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select an address from the list offered.



Select "**Navigate to**".



Select the criteria then "**Confirm**" or press "**Show route on map**" to start navigation.

## Towards a contact

**i**

To be able to use navigation "towards a contact in the directory", it is first necessary to enter the address for your contact.

**NAV**

Press on **Navigation** to display the primary page.



 
Press on the secondary page.



Select "**Enter destination**".



Select "**Contacts**".



Select a destination from the contacts in the list offered.



Select "**Navigate to**".



Select the criteria then "**Confirm**" to start navigation.

## Towards GPS coordinates

 Press on **Navigation** to display the primary page.

 Press on the secondary page.

 Select "**Enter destination**".

 Select "**Address**".

 Enter the "**Longitude**:" then the "**Latitude**:".

 Select "**Navigate to**".

 Select the criteria then "**Confirm**" or press "**Show route on map**" to start navigation.

## Towards a point on the map

 Press on **Navigation** to display the primary page.

 Press on the secondary page.

 Select "**Enter destination**".

 Select "**On the map**".

Zooming in on the map shows points with information.

A long press on a point opens its content.

## Towards points of interest (POI)

Points of Interest (POI) are listed in different categories.

 Press on **Navigation** to display the primary page.

 Press on the secondary page.

 Select "**Search for POI**".

 Select "**All POIs**".

Or

 "**Motor**".

Or

 "**Dining/hotels**".

**i** An annual mapping update allows new points of interest to be presented to you.  
You can also update the Risk areas / Danger areas every month.  
The detailed procedure is available on:  
<http://peugeot.navigation.com>.

## Risk areas / Danger zone alert settings

**NAV** Press on **Navigation** to display the primary page.

 Press on the secondary page.

 Select "**Settings**".

 Select "**Alarm!**" (Alert).

It is then possible to activate Risk areas alerts then:

- "Audible warning"
- "Alert only when navigating"
- "Alert only for overspeed"
- "Display speed limits"
- Timing: the choice of timing allows the time before giving a Risk areas alert to be defined.

 Select "**Confirm**".

**!** This series of alerts and displays is only available if Risk areas have first been downloaded and installed on the system.

## Traffic

### Traffic information

#### Display of messages

**NAV** Press on **Navigation** to display the primary page.

 Press on the secondary page.

 Select "**Traffic messages**".

Choose filter settings for:

 "**On the route**",

 "**Around**",

 "**Near destination**", filters to fine-tune the list of messages.

Press again to remove the filter.



Select the message from the list offered.



Select the magnifying glass to have voice information.

**i** TMC (Traffic Message Channel) messages on GPS-Navigation contain traffic information transmitted in real time.

## Setting filters

**NAV**

Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Traffic options**".



Select:  
 - "**Be advised of new messages**",  
 - "**Speak messages**".

Then enter the filter radius.



Select "**Confirm**".

**i**

We recommend a filter radius of:

- 12 miles (20 km) in urban areas,
- 30 miles (50 km) on motorways.

## Receiving TA messages

**NAV**

Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Voice**".


Off  On

Activate / Deactivate "**Traffic (TA)**".


**i**

The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.


# Configuration

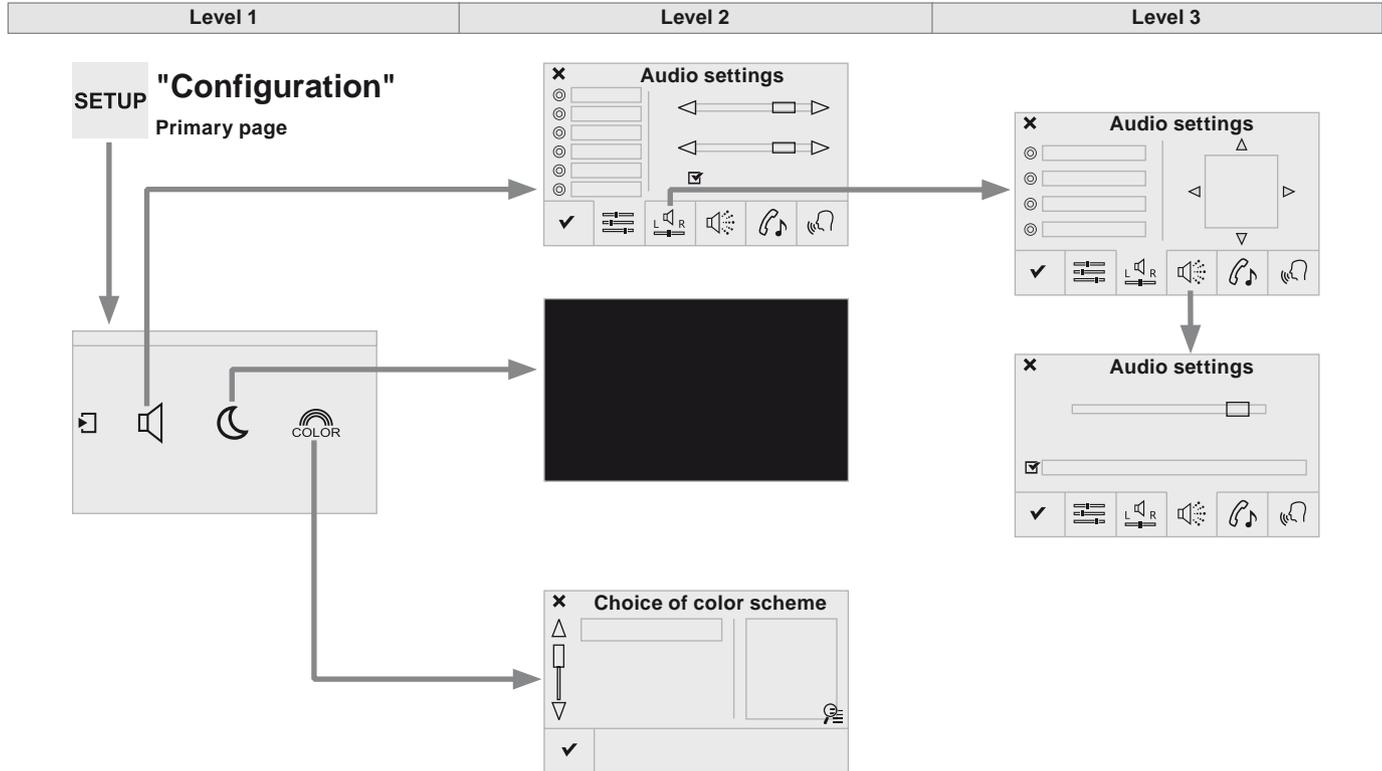

Level 1		Level 2		Level 3	Comments
 	<b>Configuration</b> ↓ <b>Audio settings</b>		<b>Ambience</b>		Choose the sound ambience.
			<b>Balance</b>		Set the position of the sound in the vehicle using the Arkamys® system.
			<b>Sound effects</b>		Set the volume or activate the link to vehicle speed.
			<b>Ringtones</b>		Set the telephone ringtone and volume.
			<b>Voice</b>		Set the volume and voice for speaking street names
			<b>Confirm</b>		Save the settings.
 	<b>Configuration</b> ↓ <b>Turn off screen</b>				Turn off the display (black screen). Pressing the black screen restores the display.
 	<b>Configuration</b> ↓ <b>Color schemes</b>		<b>Confirm</b>		Having chosen the color scheme, save the setting.

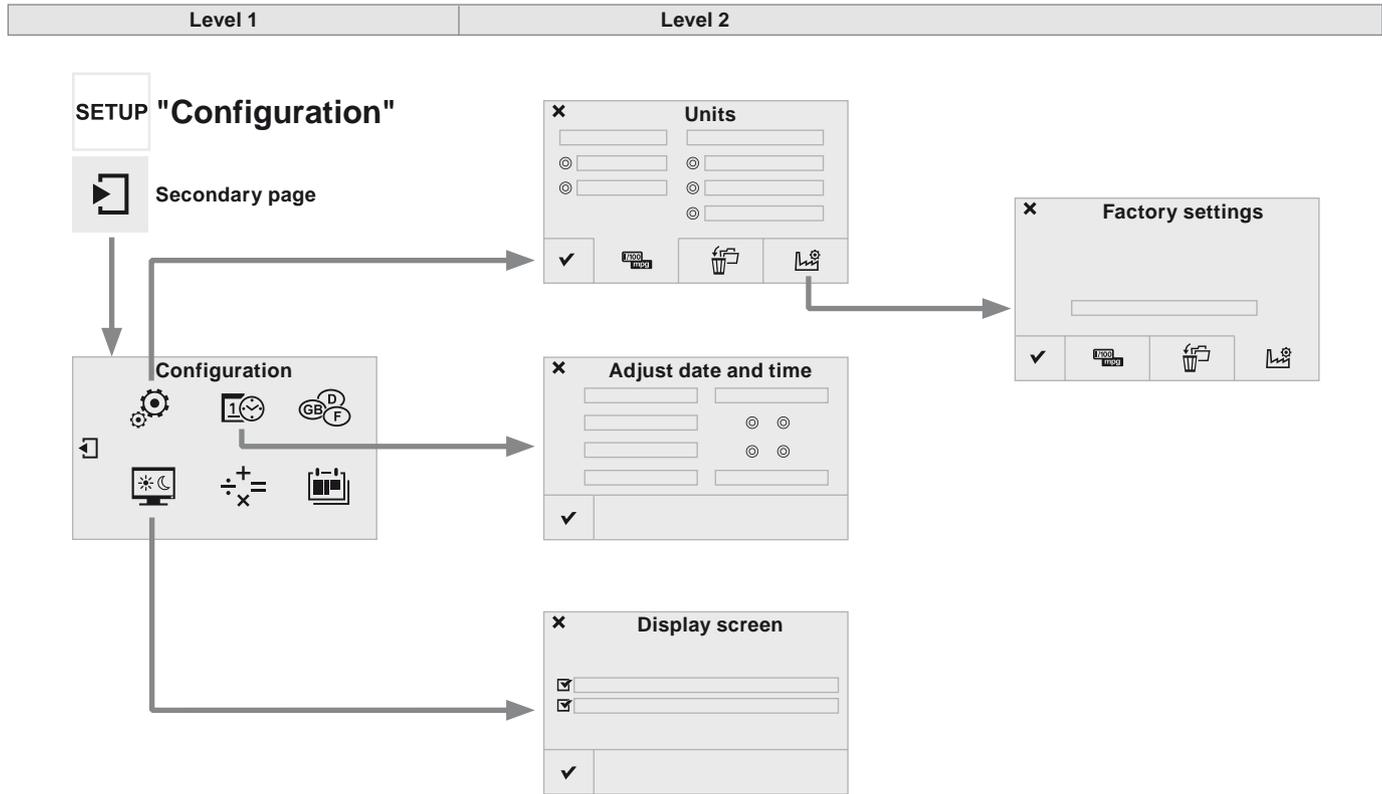

Level 1		Level 2		Comments
SETUP  	<b>Configuration</b> ↓ <b>Secondary page</b> ↓ <b>System Settings</b>	 <b>Units</b>		Set the units used to display distance, fuel consumption and temperature.
		 <b>Delete data</b>		Select the desired data in the list then press Delete.
		 <b>Factory settings</b>		Return to factory settings.
		✓ <b>Confirm</b>		Save the settings.
SETUP  	<b>Configuration</b> ↓ <b>Secondary page</b> ↓ <b>Time/Date</b>	✓ <b>Confirm</b>		Set the date and time then confirm.
SETUP  	<b>Configuration</b> ↓ <b>Secondary page</b> ↓ <b>Screen settings</b>	<input checked="" type="checkbox"/> <b>Activate automatic text scrolling</b>		Make the setting then confirm.
		<input checked="" type="checkbox"/> <b>Activate animations</b>		
		✓ <b>Confirm</b>		

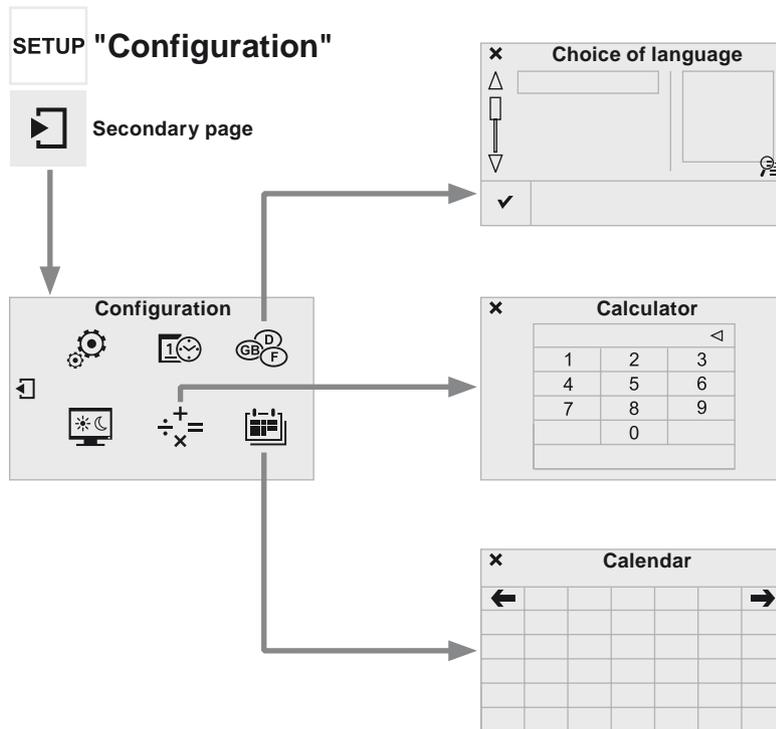

Level 1		Level 2		Comments
  	<p><b>Configuration</b></p> <p>↓</p> <p><b>Secondary page</b></p> <p>↓</p> <p><b>Languages</b></p>	✓	<b>Confirm</b>	Select the language then confirm.
  	<p><b>Configuration</b></p> <p>↓</p> <p><b>Secondary page</b></p> <p>↓</p> <p><b>Calculator</b></p>			Select the calculator.
  	<p><b>Configuration</b></p> <p>↓</p> <p><b>Secondary page</b></p> <p>↓</p> <p><b>Calendar</b></p>			Select the calendar.

## Audio settings

### SETUP

Press on **Configuration** to display the primary page.



Select "**Audio settings**".



Select "**Ambience**" or "**Balance**" or "**Sound effects**" or "**Ringtones**" or "**Voice**".



**!** The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of listeners in the vehicle.  
Available only with the 6-speaker configuration.

**!** The audio settings (**Ambience**, **Bass**, **Treble**: and **Loudness**) are different and independent for each sound source.  
The settings for **Distribution** and **Balance** are common to all sources.

- !**
- "**Ambience**" (choice of 6 musical ambiances)
  - "**Bass**:"
  - "**Treble**:"
  - "**Loudness**" (Activate/Deactivate)
  - "**Balance**" ("**Driver**", "**All passengers**", "**Front only**")
  - "**Audible response from touch screen**"
  - "**Volume linked to speed**" (Activate/Deactivate)

**i** On-board audio: Arkamys® Sound Staging optimises sound distribution in the passenger compartment.

## Color schemes

### SETUP

Press on **Configuration** to display the primary page.



Select "**Color schemes**".



Select the colour scheme in the list, then "**Confirm**".

**i** At each change of colour scheme the system restarts, showing a black screen for a few moments.

**!** As a safety measure, the procedure for changing the color scheme is only possible with the vehicle stationary.

## System

### Modify system settings

**SETUP** Press on **Configuration** to display the primary page then go to the secondary page.



Select "**System Settings**".



Select "**Units**" to change the units of distance, fuel consumption and temperature.



Select "**Delete data**" to delete the list of recent destinations, personal points of interest, contacts in the list. Choose the item then select "**Delete**".



Select "**Factory settings**" to return to the original settings.



**SETUP** Press on **Configuration** to display the primary page then go to the secondary page.



Select "**Screen settings**".



Activate or deactivate "**Activate automatic text scrolling**" and "**Activate animations**".



**SETUP** Press on **Configuration** to display the primary page then go to the secondary page.



Select:



- "**Time/Date**" to change the time zone, synchronisation with GPS, the time and its format and then the date.



- "**Languages**" to change the language.




- "**Calculator**" to display a calculator.



- "**Calendar**" to display a calendar.

# Connected services

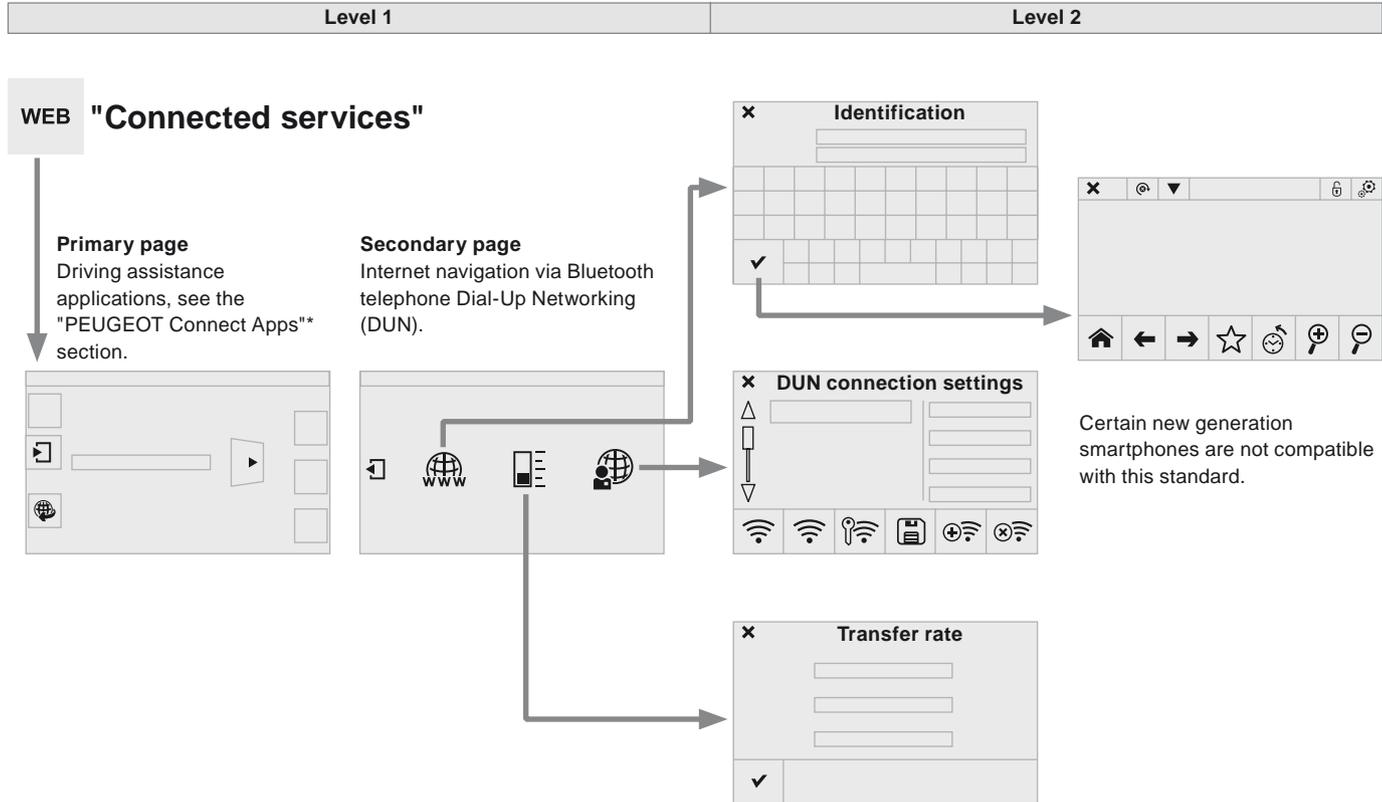

\* Depending on country.

# PEUGEOT Connect Apps

**!** "PEUGEOT Connect Apps"\* is a service providing driving aid applications in real time; it gives access to useful information such as the state of the traffic, danger zones, fuel prices, the availability of parking places, tourist sites, weather conditions, correct addresses...

It includes access to the mobile network associated with the use of these applications. "PEUGEOT Connect Apps"\* is a service available under subscription contract from PEUGEOT dealers, depending on country and the type of touch screen, both before and after delivery of a new vehicle.




Plug the "PEUGEOT Connect Apps" connection key into the USB port.

\* Depending on country.

## WEB

Press on the "Connected services" menu to display the applications.

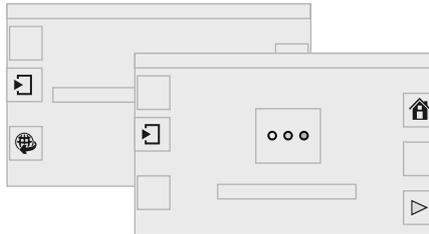


These applications use vehicle data such as the current speed, mileage, remaining fuel range or even GPS position to provide pertinent information.




As a safety measure, some functions can only be used when stationary.


The "MyPEUGEOT" application is a link between the user, the manufacturer and its dealer network. It allows the customer to know everything about their vehicle: servicing plan, accessory range, service contracts taken out, ... It also makes possible the sending of the vehicle's mileage to the "MyPEUGEOT" site, or to identify a dealer.

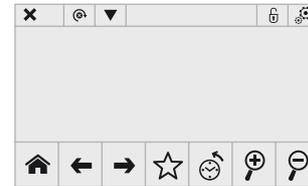

# Telephone

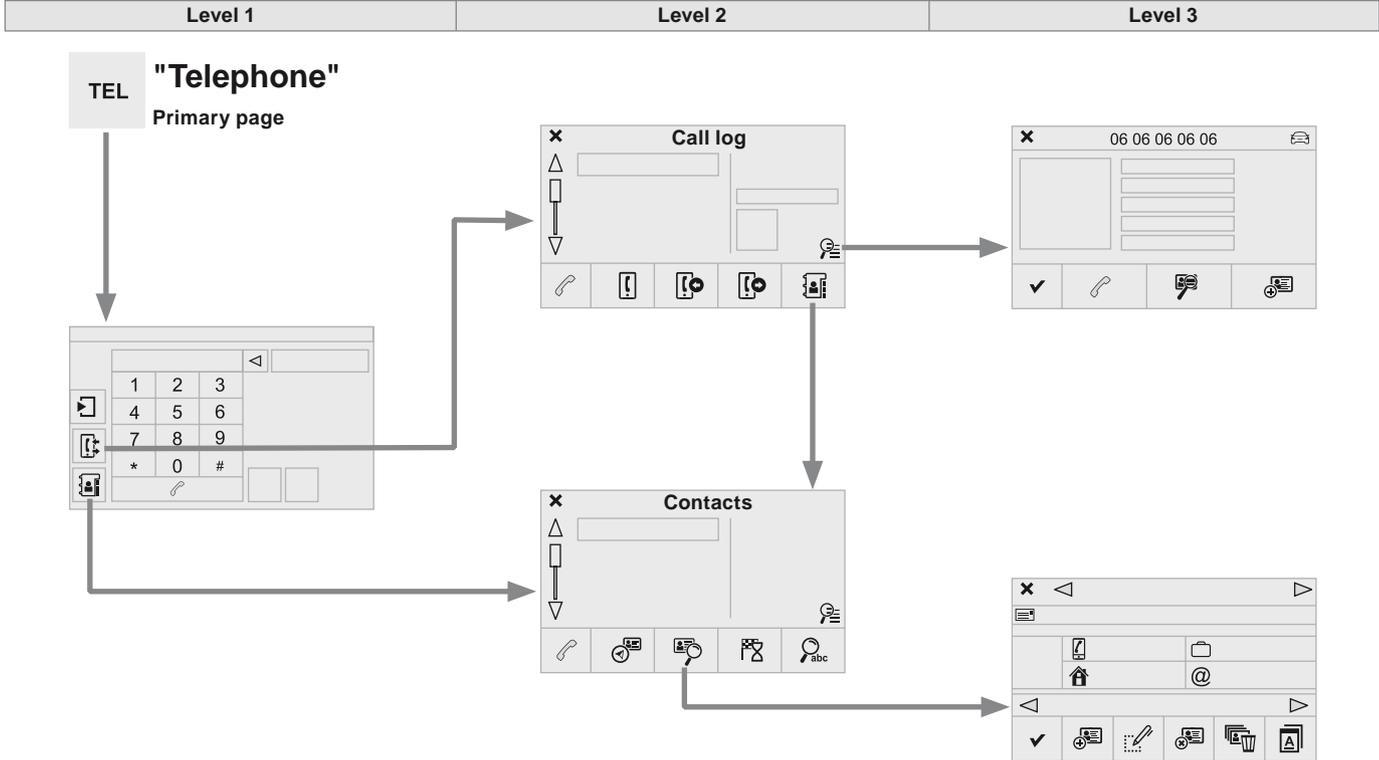

Level 1		Level 2		Level 3		Comments
 	<p><b>Telephone</b></p> <p>↓</p> <p><b>Call log</b></p>	 <b>All calls</b>				After making choices, start the call.
		 <b>Incoming calls</b>				
		 <b>Outgoing calls</b>				
		 <b>Contacts</b>				
		 <b>Magnifying glass</b>	 View			
			 Create			
	 <b>Call</b>					
 	<p><b>Telephone</b></p> <p>↓</p> <p><b>Contacts</b></p>	 <b>Addresses</b>				After making choices, start the call.
				 Create		
				 Modify		
		 <b>View</b>		 Delete		
				 Delete all		
				 By name		
				 Confirm		
		 <b>Navigate to</b>				
		 <b>Search for contact</b>				
 <b>Call</b>						

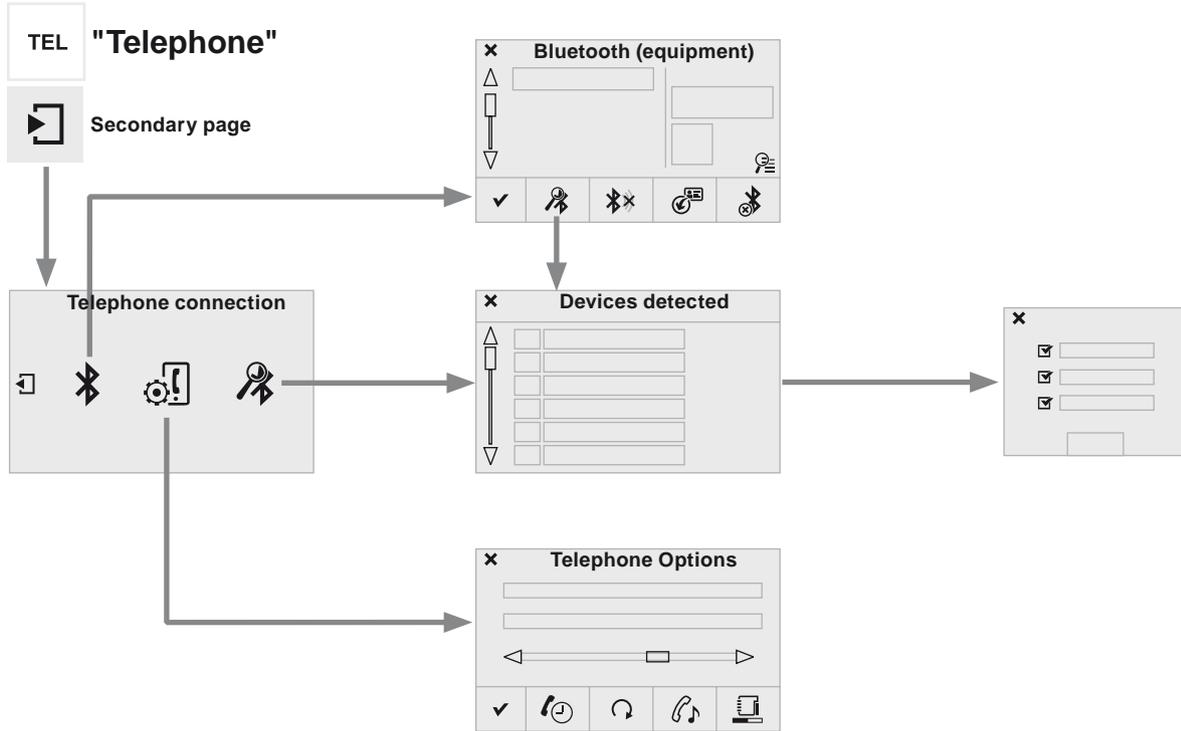

Level 1		Level 2		Level 3		Comments
  	Telephone connection ↓ Secondary page ↓ Bluetooth connection	 Search				Start the search for another peripheral device to connect.
		 Disconnect				Stop the Bluetooth connection to the selected peripheral device.
		 Update				Import the contacts from the selected telephone to store them in the audio system.
		 Delete				Delete the selected telephone.
		 Confirm				Save the settings.
  	Telephone connection ↓ Secondary page ↓ Search for devices			<input checked="" type="checkbox"/> Telephone		Start the search for peripheral devices.
			Devices detected	<input checked="" type="checkbox"/> Audio streaming		
				<input checked="" type="checkbox"/> Internet		
  	Telephone connection ↓ Secondary page ↓ Telephone Options	 Put on hold				Cut the microphone temporarily so that the contact cannot hear your conversation with a passenger.
		 Update				Import the contacts from the selected telephone to save them in the audio system.
		 Ringtones				Choose the telephone ringtone and volume.
		 Memory info.				Contact records used and free, percentage of storage space used by internal contacts and Bluetooth contacts.
		 Confirm				Save the settings.

## Pairing a Bluetooth® telephone

**!** For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio system must be carried out with the **vehicle stationary**.

### Procedure (short) from the telephone

In the Bluetooth menu of your device, select the system name in the list of devices detected.

Enter a code of at least 4 figures in the device and confirm.

**✓** Enter this same code in the system, select **"OK"** and confirm.

### Procedure from the system

Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).

**TEL** Press on **Telephone** to display the primary page.

 Press on the secondary page.

 Select **"Bluetooth connection"**.

 Select **"Search for devices"**.  
The list of telephones detected is displayed.

**i** If the telephone is not detected, it is recommended that you switch the Bluetooth function on your telephone off and then on again.



Select the name of the desired peripheral from the list and **"Confirm"**.



Enter a code of at least 4 figures for the connection then **"Confirm"**.

Enter this same code in the telephone then accept the connection.

The system offers to connect the telephone:

- in **"Telephone"** (hands-free kit, telephone only),
- in **"Audio streaming"** (streaming: wireless playing of audio files from the telephone),
- in **"Internet"** (internet browsing, only if your telephone is compatible with the "DUN" Dial-Up Networking Bluetooth standard).

Select one or more profiles and confirm.

**!** The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.

**!** The ability of the system to connect with only one profile depends on the telephone. The three profiles may all connect by default.

Visit [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, additional help, ...).



The recognised telephone appears in the list.

Depending on your telephone, you may be asked to accept automatic connection every time the ignition is switched on.

**!** Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



If not, select "**Update**".

On return to the vehicle, if the last telephone connected is present again, it is reconnected automatically and within around 30 seconds after switching on the ignition the pairing is done without any action on your part, with (Bluetooth activated).

To modify the automatic connection mode, select the telephone in the list then select the desired profile.

## Connecting a Bluetooth® peripheral device

### Automatic reconnection

On switching on the ignition, the telephone connected when the ignition was last switched off is automatically reconnected, if this connection mode had been activated during the pairing procedure.

The connection is confirmed by the display of a message and the name of the telephone.

### Manual connection

**TEL**

Press on **Telephone** to display the primary page.



Press on the secondary page.



Select "**Bluetooth**" to display the list of paired peripherals.

Select the peripheral to connect.



Press on "**Search for devices**".

The connection is confirmed by the display of a message and the name of the telephone.

## Managing paired telephones

**i** This function allows the connection or disconnection of a peripheral device as well as the deletion of a pairing.

**TEL** Press on **Telephone** to display the primary page.

 Press on the secondary page.

 Select "**Bluetooth**" to display the list of paired peripheral devices.

Select the peripheral in the list.

 Select "**Search for devices**"

Or

 "**Connect / Disconnect**" to start or end the Bluetooth connection with the selected device.

Or

 "**Delete**" to delete the pairing.

## Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.

 Make a short press on the steering mounted **TEL** button to accept an incoming call.

 Make a long press

 on the steering mounted **TEL** button to reject the call.

Or

 Select "**End call**".

## Making a call

**!** Using the telephone is not recommended while driving. Park the vehicle. Make the call using the steering mounted controls.

### Calling a new number

**TEL** Press on **Telephone** to display the primary page.

 Enter the phone number using the digital keypad. Press "**Call**" to start the call.

### Calling a contact

**TEL** Press on **Telephone** to display the primary page.

Or make a long press

 on the steering mounted **TEL** button.





Select "**Contacts**".

Select the desired contact from the list offered.



Select "**Call**".

## Calling a recently used number



Press on **Telephone** to display the primary page.



Select "**Call log**".

Select the desired contact from the list offered.



It is always possible to make a call directly from the telephone; park the vehicle first as a safety measure.

## Managing contacts / entries



Press on **Telephone** to display the primary page.



Select "**Contacts**".



Select "**View**".



Select "**Create**" to add a new contact.

Or



"**Modify**" to edit the selected contact.

Or



"**Delete**" to delete the selected contact.

Or



"**Delete all**" to delete all information for the selected contact.



Select "**By name**" to view the list of contacts.

## Frequently asked questions

The following table groups together the answers to the most frequently asked questions concerning your audio system.

### Navigation

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The route settings may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the route settings in the "Navigation" menu.
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
The Risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the "Navigation" menu.
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Information" function in the list of route settings.
I receive a Risk areas alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for Risk areas located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk areas. Select "On the route" to no longer receive alerts other than navigation instructions or to reduce the time for the announcement.

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely so that there is GPS coverage by at least 4 satellites.
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.

## Radio

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	Press and hold the "List" button at the steering mounted controls to update the list of stations received or press on the system update function: "Update list".
The name of the radio station changes.	Some radio stations send other information in place of their name (the title of the song for example).	
	The system interprets this information as the name of the station.	

## Media

QUESTION	ANSWER	SOLUTION
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
When I connect my iPhone as a telephone and to the USB port at the same time, I am unable to play the music files.	When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.	Disconnect and reconnect to the USB port (the USB function takes priority over streaming).
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.	Check that the CD is inserted in the player the right way up. Check the condition of the CD: the CD cannot be played if it is too badly damaged. Check the content in the case of a recorded CD: refer to the advice in the "AUDIO" section. The audio system's CD player does not play DVDs. Some recorded CDs will not be played by the audio system because they are not of adequate quality.
	The CD has been recorded in a format that is not compatible with the player (udf...).	
	The CD is protected by an anti-pirating protection system which is not recognised by the audio system.	
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.

QUESTION	ANSWER	SOLUTION
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiences) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	


## Settings

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources.	For optimum sound quality, the audio settings for Loudness, Ambience, Treble, Bass, Volume can be adapted to the different sound sources, which may result in audible differences when changing source.	Check that the audio settings for Loudness, Ambience, Treble, Bass, Volume) are adapted to the sources listened to. Adjust Balance, Treble, Bass to the middle position, select the "None" musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the state of charge of the battery. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.

## Telephone

QUESTION	ANSWER	SOLUTION
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	Check that your telephone's Bluetooth function is switched on. Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone at <a href="http://www.peugeot.co.uk">www.peugeot.co.uk</a> (services).
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down...).
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	

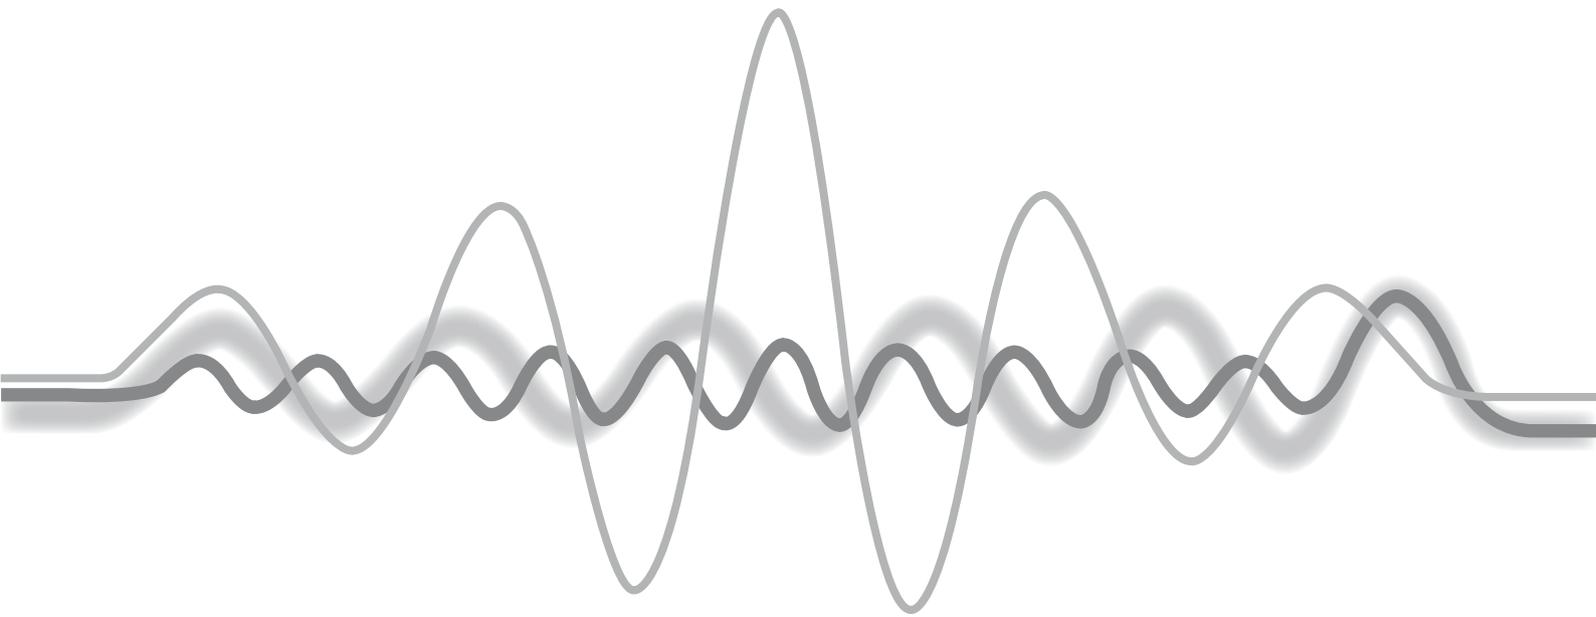

# Audio system



	Contents
First steps	338
Steering mounted controls	339
Menus	340
Audio	340
Media	343
Audio settings	347
Screen menu map(s)	348
Frequently asked questions	349

**i** The system is coded in such a way that it will only operate in your vehicle.

**!** As a safety measure, the driver must only carry out operations which require sustained attention with the vehicle is stationary. The audio system may switch off a few minutes after switching off the engine, to avoid discharging the battery.

## First steps



On / Off.



Volume.



Confirmation or display of contextual menu.



Select screen display between modes:

Full screen: Audio

In a window: Audio - Time or Trip computer.

Long press: black screen (DARK).

**SOURCE**

Select source:  
Radio, CD, AUX, USB.

**LIST**

Display the list of stations received, CD/MP3 tracks or folders.  
Long press: manage the classification of MP3/WMA files / update the list of stations received.

**MENU**

Access to main menu.

**TA INFO**

TA (Traffic Announcement) function On / Off.  
Long press: access to type of information.



Manual step by step search up / down for radio frequencies.  
Select previous / next MP3 folder.  
Select previous / next folder / genre / artist / playlist in the USB device.  
Navigation in a list.



Automatic search up / down for radio frequencies.  
Select previous / next CD, USB track.  
Navigation in a list.



Audio settings:  
audio ambiances, treble, bass, loudness, distribution, left/right balance, front/rear fader, automatic volume.



Abandon the current operation.  
Up one level.

1

Select preset radio station.  
Long press: preset (store) a station.

**BAND**

Select AM / FM wavebands.

# Steering mounted controls



Press: open the instrument panel screen menu.  
Rotate: navigate in the instrument panel screen menu.



Increase volume.



Mute / restore sound.



Decrease volume.



Rotate:  
Radio: search for the previous / next station.  
Media: previous / next track.  
Press: confirm.

**SRC**

Change the audio source.



Select the type of permanent display in the screen, between window and full screen modes.  
Long press: black screen (DARK).

**LIST**

Radio: display the list of stations.  
Media: display the list of tracks.  
Long press: update the list of stations received.

# Menus

## > Screen C



"**Multimedia**": Media parameters, Radio parameters.

**i** For a detailed global view of the menus available, refer to the "Screen menu map" section.

# Audio

## Selecting a station

**!** The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

### SOURCE

Press **SOURCE** or **SRC** several times in succession and select radio.

### BAND

Press **BAND** to select a waveband.

### LIST

Press **LIST** to display the list of stations received in alphabetical order.



Select the desired radio station and confirm by pressing **OK**.



A press changes to the next or previous letter (e.g. A, B, D, F, G, J, K, ...).

### LIST

A long press on **LIST** builds or updates the list of stations; audio reception is cut momentarily.

## RDS

**i** RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

**OK**

When the radio is displayed on the screen, press **OK** to display the contextual menu.

**OK**

Select "**RDS**" and confirm to save. "**RDS**" is displayed in the screen.

## Receiving TA messages

**i** The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

**TA INFO**

Press **TA INFO** to activate or deactivate the reception of traffic messages.

## Receiving INFO messages

**i** The INFO function gives priority to TA alert messages. To be active, this function needs good reception of a radio station that transmits this type of message. When a message is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to receive the INFO message. Normal play resumes at the end of the message transmission.

**TA INFO**

Make a long press on **TA INFO** to display the list of categories.



Select or deselect categories to activate or deactivate the reception of the corresponding messages.

## Display RADIO TEXT

**i** Radio text is information transmitted by the radio station related to the current programme or song.

### Screen C

**OK**

With the radio displayed on the screen, press **OK** to display the contextual menu.



Select "**RadioText (TXT) display**" and confirm **OK** to save.

# Media

## Audio CD

### Playing a CD

Insert 12 cm diameter circular compact discs only.

Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.

Without pressing the **EJECT** button, insert a CD in the player, play begins automatically.

#### SOURCE

To play a disc which has already been inserted, press the **SOURCE** or **SRC** button several times in succession and select "**CD**".



Press one of the buttons to select a track on the CD.

#### LIST

Press **LIST** to display the list of tracks on the CD.



Press and hold one of the buttons for fast forward or backward.

## CD, USB

### Information and advice

The audio system will only play files with extension ".mp3" or ".wma" and a compression rate that is constant or variable between 32 Kbps and 320 Kbps.

It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.

The playlists accepted are types .m3u and .pls. The number of files is limited to 5 000 in 500 directories on a maximum of 8 levels.



On a single disc, the CD player can read up to 255 MP3 files spread over 8 directory levels. However, it is recommended that this be kept to 2 levels so as to limit the time taken to access and play the CD. During play, the folder structure is not observed.

In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select standards ISO 9660 level 1. 2 or Joliet.

If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.

Use only USB memory sticks formatted FAT32 (File Allocation Table).



Do not connect a hard disk or USB device other than audio players to the USB port. This may cause damage to your installation.

## CD, USB

### Playing a compilation

**!** Insert an MP3 compilation in the CD player or connect a memory stick to the USB port, directly or via an extension lead.

The system creates playlists (temporary memory) the creation time for which can take from a few seconds to several minutes.

The playlists are updated every time the ignition is switched off or a USB memory stick is connected.

Play starts automatically after a period which depends on the capacity of the USB memory stick.

At a first connection, the order suggested is by folder. When connecting again, the order previously chosen is retained.

**SOURCE**

To play a disc or memory stick which has already been inserted, press **SOURCE** or **SRC** several times in succession and select "CD" or "USB".

**OK**

Select a track or a folder.



Press one of the buttons to select the next or previous track.



Up a level in the menu.



Press one of the buttons to select the next or previous folder in the order chosen.



Skip a track.



Press and hold one of the buttons for fast forwards or backwards.

**LIST**

Press **LIST** to display the menu of folders in the compilation.



Select a line in the list.

## USB memory stick - File sorting

### LIST

Make a long press on **LIST** or press **MENU**, select "**Multimedia**", then "**Media parameters**" and finally "**Choice of track listing**" to display the different types of sorting.




Having selected the desired sorting ("**By folders**", "**By artists**", "**By genres**", "**By playlists**") press **OK**. Then confirm **OK** to save the modifications.

### OK

- **By folders**: all folders containing audio files recognised on the peripheral device, in alphabetical order without following the folder structure.
- **By artists**: all of the artist names defined in the ID3 Tags, in alphabetical order.
- **By genres**: all of the genres defined in the ID3 Tags.
- **By playlists**: if playlists have been saved.

## USB players

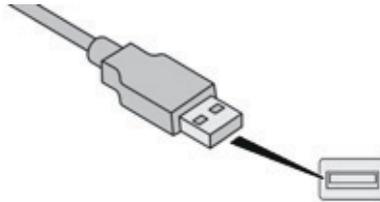

The audio files on a Mass Storage portable player\* can be heard through the vehicle's speakers by connecting it to the USB port (cable not supplied).

**i** Management of the device is via the audio system controls.

If the portable player is not recognised by the USB port, connect it to the auxiliary Jack socket.

The Apple® player must be updated regularly for the best connection.

The playlists are those defined in the Apple® player.

The Apple® player must be generation 5 or later.

\* Check your player's manual.

## Auxiliary socket (AUX)



The auxiliary Jack socket permits the connection of a portable non-mass storage device or an Apple® player if not recognised by the USB port.

**!** Do not connect a device to the USB port and to the auxiliary Jack socket at the same time.

Connect the portable device to the auxiliary Jack socket using a suitable cable (not supplied).

### SOURCE

Press the **SOURCE** or **SRC** button several times in succession and select "**AUX**".

First adjust the volume on your portable device.



Then adjust the volume of the audio system.

The display and management of controls is on the portable device.

## Play mode

- !** The play modes available are:
- Normal: the tracks are played in order, depending on the classification of the selected files.
  - Random: the tracks in an album or folder are played in a random order.
  - Random all: all of the tracks saved in the media are played in random order.
  - Repeat: the tracks played are only those from the current album or folder.

### MENU

Press **OK** for access to the contextual menu.  
or  
Press **MENU**.



Select "**Multimedia**" and confirm.

**OK**

# Audio settings

## Screen C



Select "**Media parameters**" and confirm.

OK



Select "**Read mode**" and confirm.

OK



Select the desired play mode and confirm **OK** to save the modifications.

OK



Press  to display the audio settings menu.

The settings available are:

- Ambience,
- Bass,
- Treble,
- Loudness,
- Distribution: Personalised or Driver,
- Left / right balance,
- Fader (front / rear balance),
- Auto. volume.



Select and confirm "**Other settings...**" to display the next setting in the list.

OK

**!** The distribution (or spatialisation using the Arkamys® system), is an audio process which allows the sound quality to be improved according to the setting chosen, corresponding to the position of the listeners in the vehicle.

**i** The Ambience, Treble and Bass audio settings are different and independent for each sound source.

**i** On-board audio: Arkamys® Sound Staging optimises sound distribution in the passenger compartment.

# Screen menu map(s)

## Main function

- 1 **Option A**
  - 2 **Option A1**
    - 3 Option A11
- 1 **Option B...**

## Screen C

### MULTIMEDIA

#### 1 **Media parameters**

##### 2 **Choice of playback mode**

3 Normal

3 Random

3 Random all

3 Repeat

##### 2 **Choice of track listing**

3 By folders

3 By artists

3 By genres

3 By playlists

#### 1 **Radio parameters**

### PERSONALISATION - CONFIGURATION

#### 1 **Choice of language**

#### 1 **Display configuration**

##### 2 **Choice of units**

##### 2 **Date and time adjustment**

##### 2 **Display parameters**

##### 2 **Brightness**

# Frequently asked questions

The following tables contain answers to the most frequently asked questions.

QUESTION	ANSWER	SOLUTION
<p>There is a difference in sound quality between the different audio sources (radio, CD...).</p>	<p>For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).</p>	<p>Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Fader, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.</p>
<p>When changing the settings for treble and bass, the ambience setting is deselected. When changing the ambience setting, treble and bass are reset to zero.</p>	<p>Choosing an ambience imposes settings for treble and bass. Modifying one without the other is not possible.</p>	<p>Modify the treble and bass settings or the ambience setting to obtain the desired sound quality.</p>
<p>When changing the balance setting, distribution is deselected.</p>	<p>Choosing a distribution setting imposes a balance setting. Modifying one without the other is not possible.</p>	<p>Modify the balance setting or the distribution setting to obtain the desired sound quality.</p>

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 MHz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station does not broadcast traffic information.	Tune to a radio station which broadcasts traffic information.
The stored stations are not found (no sound, 87.5 MHz is displayed...).	An incorrect waveband is selected.	Press the BAND button to return to the waveband on which the stations are stored.

QUESTION	ANSWER	SOLUTION
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.</li> <li>- The audio equipment's CD player does not play DVDs.</li> <li>- Due to their quality level, certain writeable CDs will not be played by the audio system.</li> </ul>
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio settings (bass, treble, ambience) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.
The message "USB peripheral error" or "Peripheral not recognised" is displayed in the screen.	The USB memory stick is not recognised. The memory stick may be corrupt.	Reformat the memory stick (FAT 32).
The Apple® player is not recognised when connecting to the USB port.	The Apple® player is of a generation that is not compatible with the USB.	Connect the Apple® player to the AUX Jack socket using a suitable cable (not supplied).

QUESTION	ANSWER	SOLUTION
The hard disk or device is not recognised when connecting to the USB port.	Some hard disks and devices need a power supply greater than is provided by the audio system.	Connect the device to the 230 V socket, the 12 V socket or an external power supply. <b>Caution:</b> ensure that the device does not transmit a voltage greater than 5 V (risk of destruction of the system).
In "Random all" play, not all of the tracks are played.	In "Random all" play, the system can only take into account up to 999 tracks.	
With the engine off, the audio system switches off after a few minutes of use.	When the engine is switched off, the audio system operating time depends on the battery charge. The switch-off is normal: the audio system switches to economy mode and switches off to prevent discharging the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio system switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.